



# Timing Belt

## Crankshaft Pulley and Pulley Bolt Replacement


When installing and tightening the pulley, follow the procedure below.

Clean, remove any oil and lubricate points shown below.

○ : Clean

X : Remove any oil

● : Lubricate

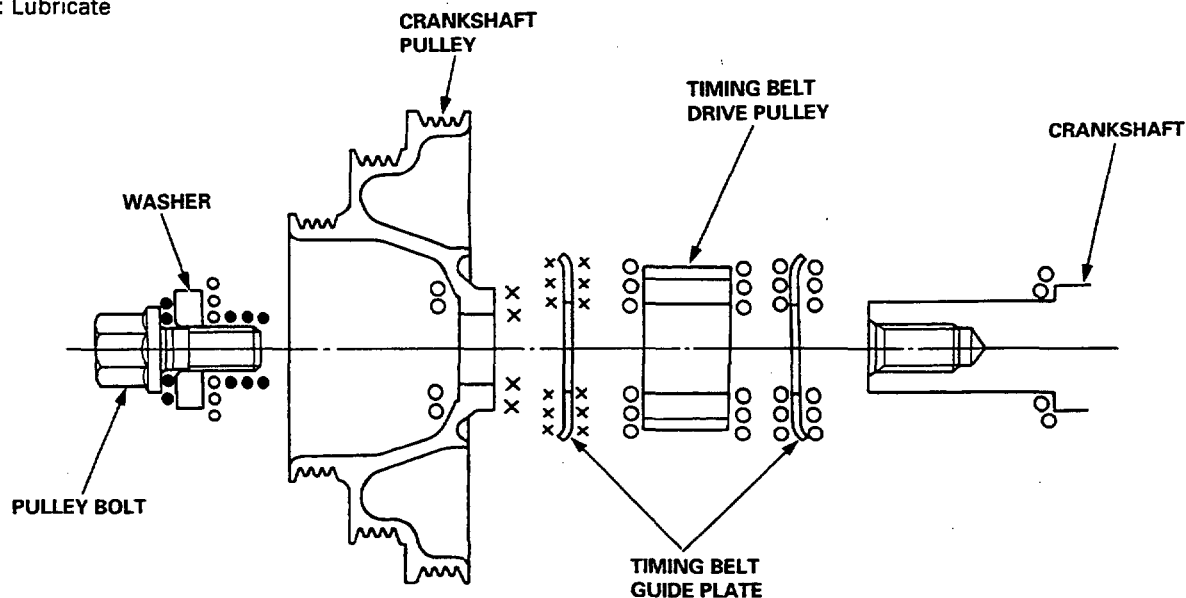


Crankshaft pulley bolt size and torque value:

14 x 1.25 mm

186 N·m (19.0 kgf·m, 137 lbf·ft)

NOTE: Do not use the impact wrench when installing.

D16Y3 (A/T), D14A2 engines:

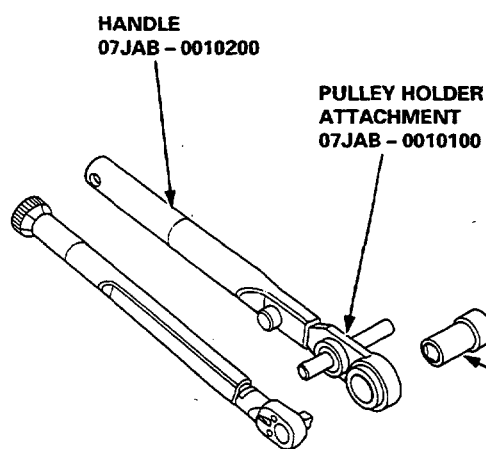

D16Y2, D15Z3, D16Y3 (M/T) engines:

