

# Towing

## Towing

If possible, always tow the car with the front wheels off the ground. Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing with a rope or frame-mounted tow bar. A rope may be attached to the hook shown in the illustration. Do to attach a tow bar to either bumper.

If the car is to be towed with four wheels on the ground, observe the following precautions:

1. Wheels and axle must not be touching body or frame.
2. Turn the ignition key to the "I" position and make sure the steering wheel turns freely.
3. Place the transmission in NEUTRAL.
4. Release the parking brake.
5. DO NOT exceed 55 KPH (35 MPH) for distances of more than 80 km (50 miles).

