


Water Pump, Temperature Gauge



Replacement

NOTE: Use new gaskets and O-rings whenever reassembling.

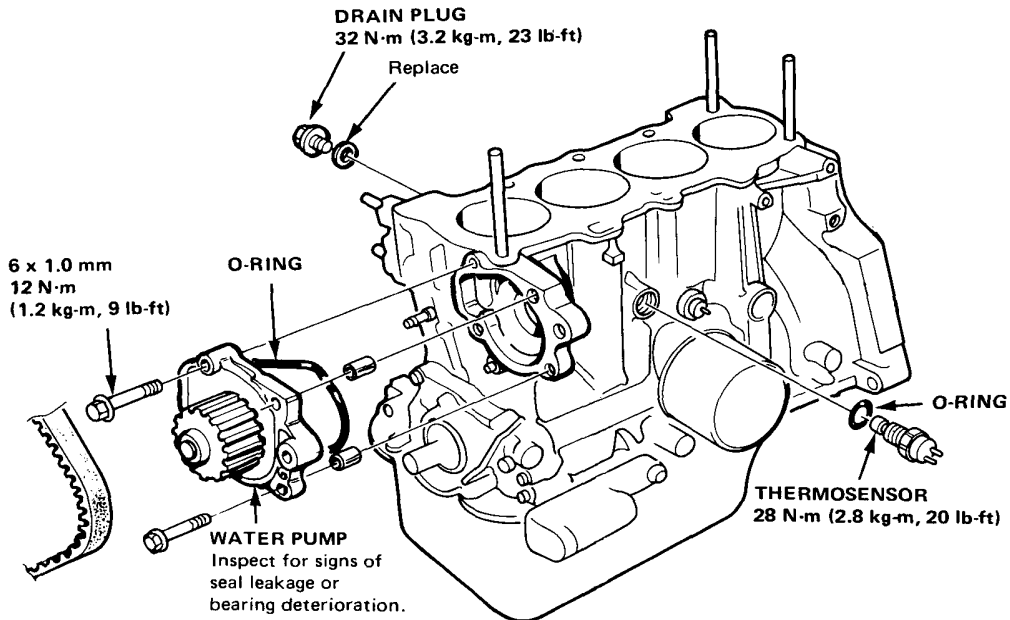

Temperature Gauge Testing

NOTE: If both the temperature gauge and fuel gauge malfunction simultaneously (and show H and F respectively), replace the fuel/temp gauge assembly.

1. Disconnect the yellow/green wire from the temperature gauge sending unit and short it to ground.
2. Turn the ignition switch to ON.
3. The temperature gauge needle should move all the way to H.

If not, check the fuse, wiring and connections; if all are OK, replace the gauge.

CAUTION: Do not leave sending unit wire grounded for longer than a few seconds or temperature gauge will be damaged.

4. Turn ignition switch off.

