

Crankcase Emission Control




Inspection


PCV Valve

NOTE: Replace the PCV valve every 48,000 km (30,000 miles).

1. Check the crankcase ventilation hoses and connections for leaks and clogging.
2. Disconnect the PCV valve from the breather chamber.
3. Start the engine and allow it to idle.
4. Place your finger over the PCV valve and listen for a clicking noise from the PCV valve.

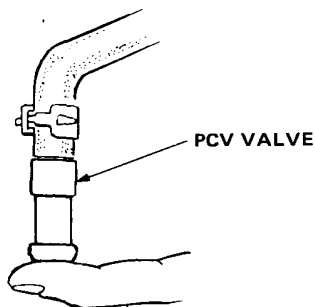

- If a clicking noise is heard, go on to step 5.
 - If no noise is heard, replace the PCV valve and re-test.
5. Install the PCV valve with the large end down.

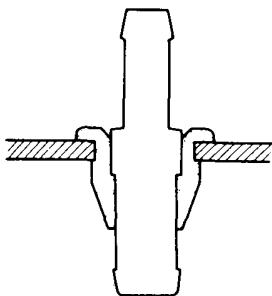

Blow-by Filter

NOTE: Replace the Blow-by Filter every 48,000 km (30,000 miles).

1. Inspect the condition of the blow-by filter.
 - Replace the filter in the following instances:
 - When the filter is stuck fast and oil is dripping or seeping through.
 - When the filter is covered with dust and dirt so that clogging is evident.

