




## Disassembly/Inspection: Ball type joint

Disassemble in numbered sequence.

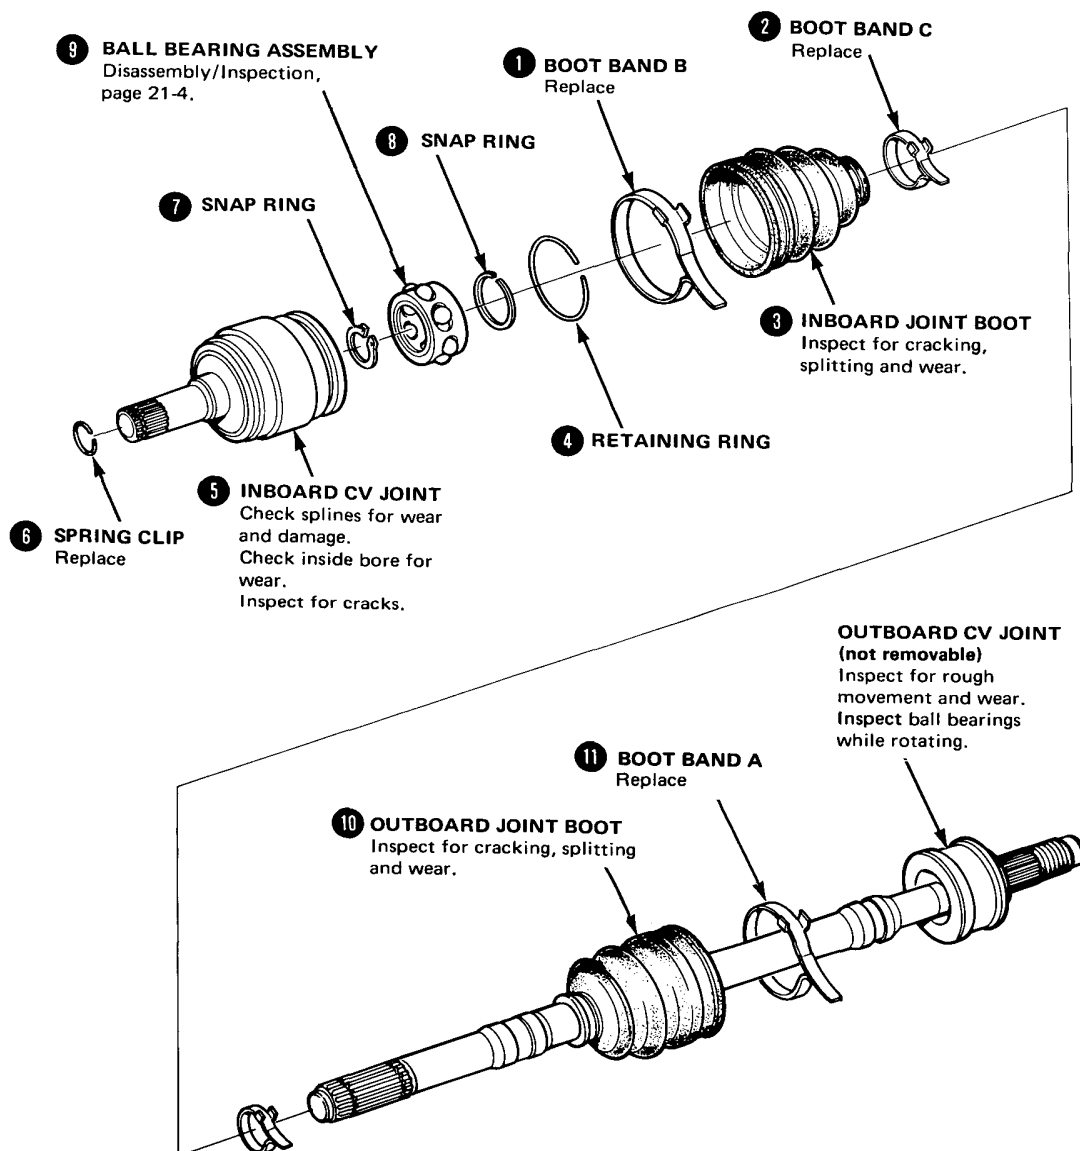


# Driveshafts


## Bearing Disassembly

1. To inspect the inboard CV joint bearing, put it on a bench and disassemble it by gently prying each ball out of the cage with a dull screwdriver.

**NOTE:** Individual parts for CV joints are not available. The inboard joint is available as a complete assembly; the outboard joint is available only as part of the complete axle assembly.

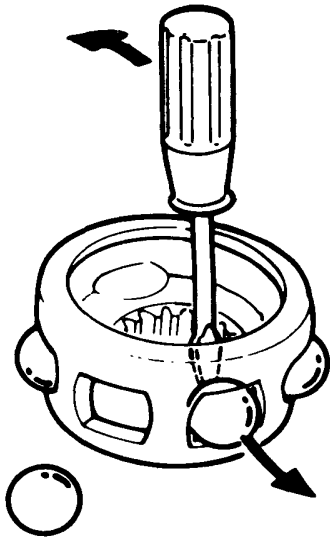

**BALL BEARING RACE**  
Inspect for wear and scoring.  
Inspect splines for wear and damage.

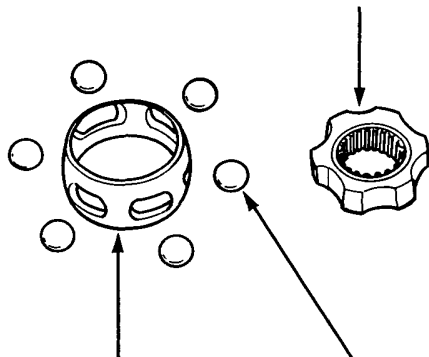


**BALL BEARING CAGE**  
Inspect for wear

**BALL BEARING**  
Inspect for wear and pitting.

## Bearing Reassembly

1. Install ball bearing race with chamfered end towards small end of cage.

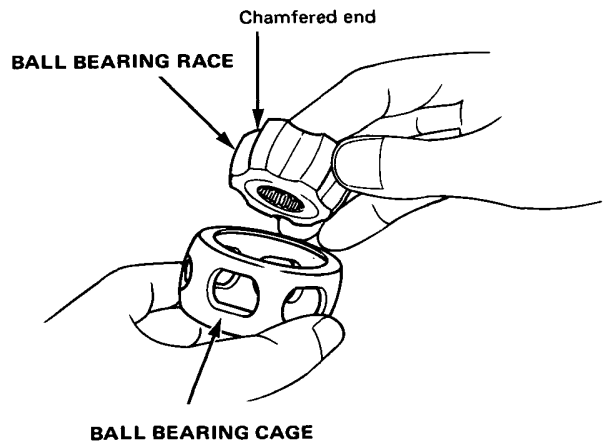

2. Press balls in until firmly seated.

