


Idle Boost

Replacement

PGM-FI Model shown

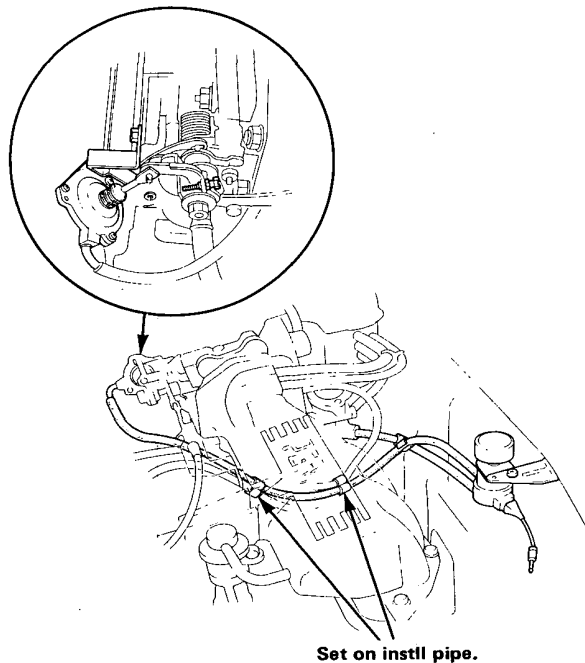

Idle Adjustment

After charging, adjust the idle speed with the air conditioner on:

- Apply the parking brake and block the wheels.
- Headlights OFF
- A/C temperature lever COLD (left end)
- Vent and RECIRC buttons . . . ON
- Fan switch HI (right end)
- Gearshift — Manual Neutral
Automatic In gear

1. Start the engine and warm it up to normal operating temperature (when radiator fan comes on). Check the idle speed with the A/C OFF, and adjust it, if necessary.

IDLE SPEED: Manual — 750 ± 50 rpm
Automatic — 750 ± 50 rpm (in gear)

2. Turn the fan on HI, and check the idle speed again; it should be the same as with the fan OFF; if not, adjust it by turning the adjusting screw.
3. Turn the fan switch OFF and ON several times and make sure the idle speed does not change.

PGM-FI Model shown

