


# Resistor

## Testing

1. Disconnect the connectors of the resistor.
2. Measure resistance between a terminal and each

Resistance should be 5–7  $\Omega$ .

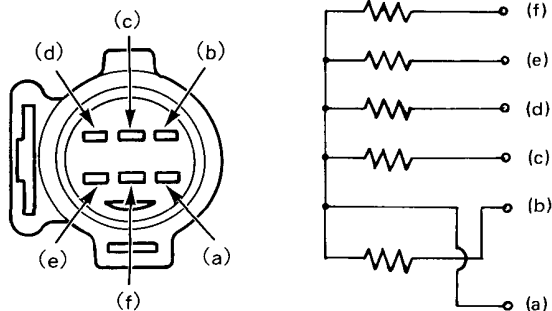

- If resistance is outside above ranges, replace the resistor.

# Fuel Pump

## Replacement

(2D H/B Only)



- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Jack up rear of car and place jack stands in proper locations.
2. Remove left rear wheel.
3. Remove the fuel pump cover.
4. Disconnect fuel lines and electrical leads at the fuel pump.
5. Removing three bolts, remove fuel pump with mount.

