



Main Valve Body

Disassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see valve Body Repair on page 16-25.
- See page 3-8 for spring specifications.
- Coat all parts with ATF before reassembly.

