

# Secondary Valve

## Disassembly/Inspection/Reassembly

### NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check all valves for free movement. If any fail to slide freely, see valve Body Repair on page 16-25.
- See page 3-8 for spring specifications.

