


Regulator Valve Body

Disassembly/Inspection

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement, if any fail to slide freely, see Valve Body Repair on page 16-25.
- Coat all parts with ATF before reassembly.

1. Hold the retainer in place while removing the lock bolt. Once the bolt is removed, release the retainer slowly.

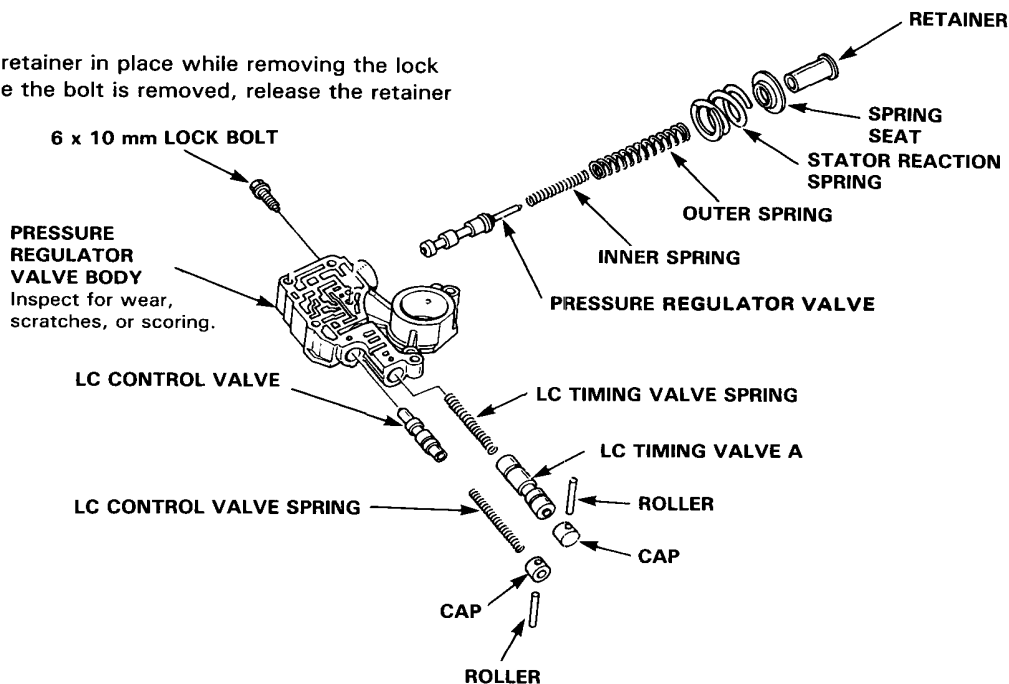

Reassembly

1. Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
2. Coat all valves with ATF.
3. Install the pressure regulator valve, and the inner and outer springs.
4. Install the reaction spring, spring seat, and retainer. Align the hole in the retainer with the hole in the valve body, then press the retainer into the valve body and tighten the lock bolt.

