

Governor Valve



Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check that the governor works smoothly; replace it if it does not.
- Coat all parts with ATF before reassembly.

