



Trunk Lid

Replacement

Sedan:

1. Remove the trunk lid hinge bolts, then lift off the lid.

2. Remove the torsion bar by using a release tool.

CAUTION: The torsion bars are under spring tension.

3. Remove the rear shelf.

4. Remove the hinge bracket mounting nuts, then remove the hinges from the trunk.

5. Before tightening the hinge bolts, check the adjustments shown below:

Adjust the trunk lid hinges fore and aft, and right and left as necessary to equalize the gap between the trunk lid and the body.

SHIM

Use shims as required to make the trunk lid fit flush with the body.

**TORSION BAR
ASSEMBLY TOOL
07GAZ-SE30400**

TORSION BARS

TRUNK LID

HINGE

HINGE

TORSION BARS

**OPENER
CABLE**

HINGE

**HINGE BRACKET
MOUNTING NUT
6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)**

WIRE HARNESS

SHIM

Use shims as required to make the trunk lid fit flush with the body at the rear edge.

**6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)**

STRIKER

Adjust the striker right or left to align it with the latch.

TORSION BARS