




Component Location Index

NOTE:

- The carbureted engine is shown; the Fuel-Injected engine is similar except for the location of the DIM-DIP resistor.
- Refer to the base manual (No. 62SB200) of Civic for service procedures indicated by page or section numbers with superscript "***".

- LIGHTING SWITCH
Removal, section 19*
Test, page 25-8*
- HEADLIGHTS
Replacement, section 22*
Adjustment, section 22*
- TAILLIGHTS
Replacement, section 22*
- REAR FOG LIGHT SWITCH
Removal, section 22*
Test, page 25-19*

Coupe/2D H/B/4D:

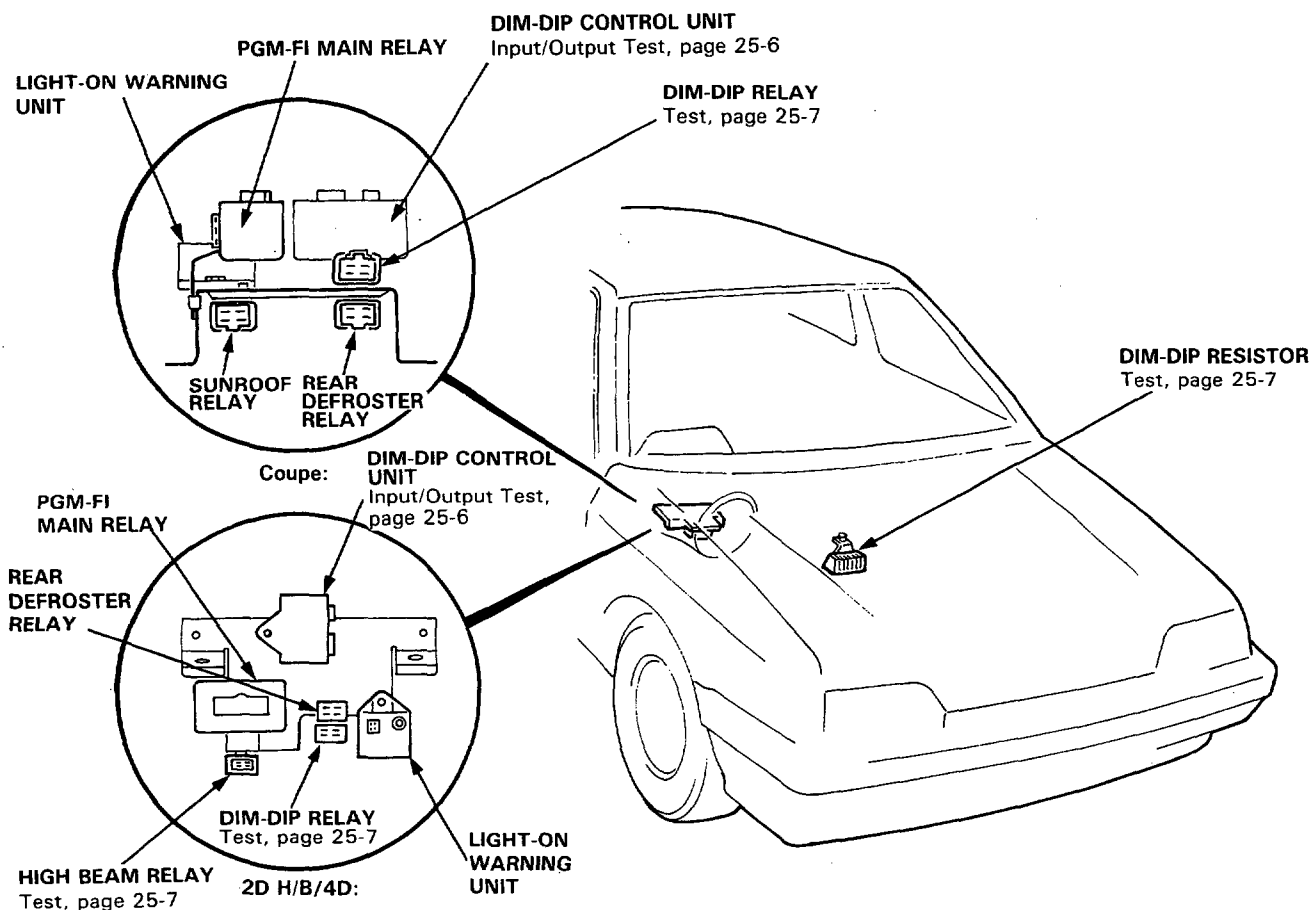

Lighting System

Component Location Index

4D H/B:

