

Headlight


Replacement

Canadian model:

CAUTION:

- Do not touch the units with hands or skin while they are on or just after they are put out. They are hot.
- Do not try to replace the units or clean the headlight until with lights on.
- After replacing the units, install the rubber cover while pushing it tightly to the unit.

1. Remove the parking/side marker light and the front grille, then remove the headlight garnish (see page 22-113).
2. Disconnect the wire harness connector, and remove the rubber cover from the sealed beam unit.
3. Remove the headlight assembly by removing the case mount screws.
4. If necessary, replace the sealed beam unit by removing the retaining ring.

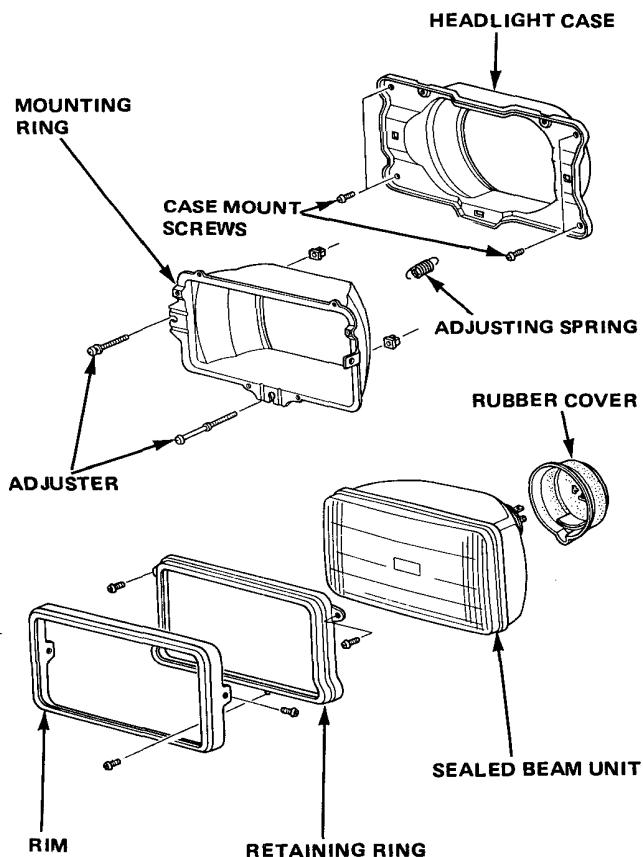


Other models:

CAUTION:

- Do not touch the glass surface of bulbs with bare hand or dirty glove. Otherwise it may cause damage their proper function.
- Do not touch bulbs with hands or skin while they are on or just after they are put out. They are hot.
- Do not try to replace bulbs or clean the headlight until with lights on.
- After replacing bulbs, install the boot while pushing it tightly to the unit.

1. Disconnect the wire harness connector.
2. To remove the headlight, first remove the:
 - Front position light.
 - Front bumper. (page 22-118)
 - Front grille. (page 22-113)
3. Remove the headlight mount bolts to remove the headlight.
4. To remove the bulb only, it is not necessary to remove the headlight.

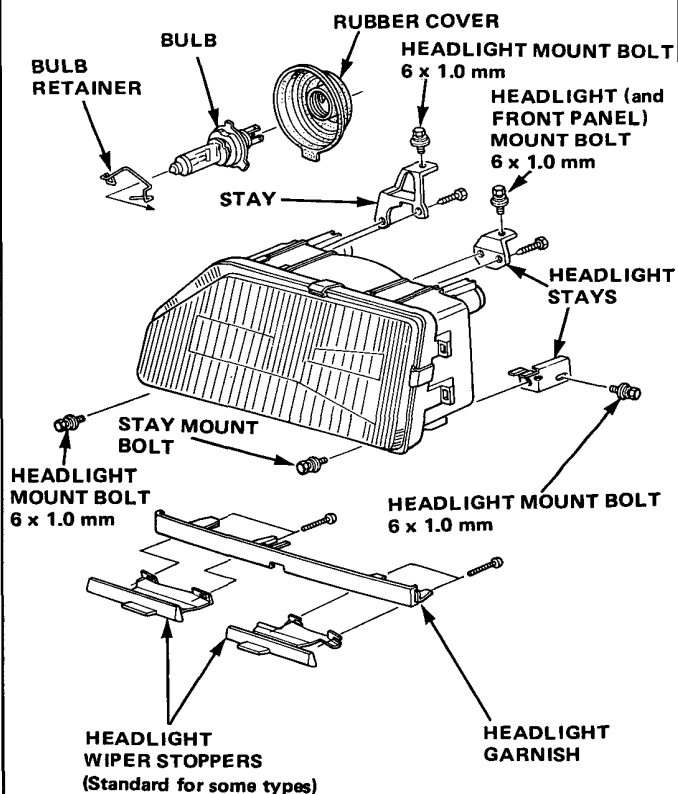




Taillight

Replacement


Coupe, 2D H/B, and 4D:

1. Remove the rear trim panel (Coupe and 2D H/B). (pages 22-61 and 62)
2. Remove the rear panel. (page 22-114)
3. Unscrew the nuts, and remove the taillight.

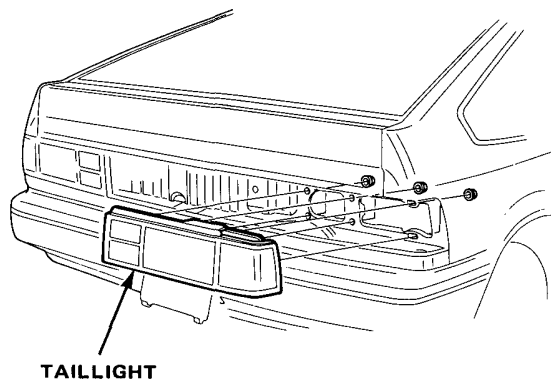

4D H/B:


- Open the tailgate and remove the taillight by removing the screw.

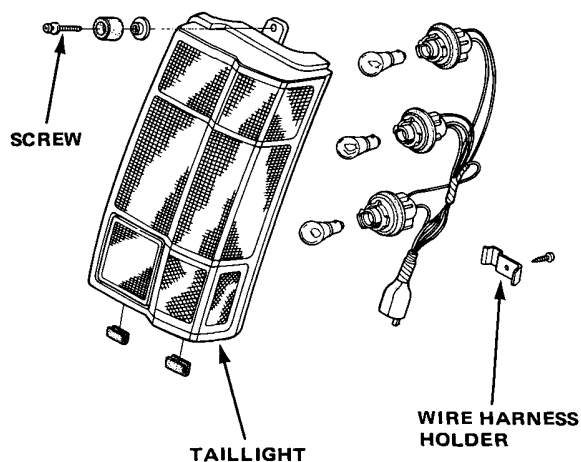

Adjustment

NOTE: Adjust headlight to local requirements.

Canadian model:

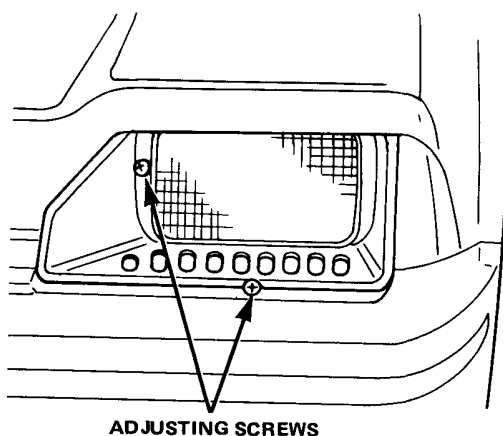

Other models:

