





Temperature Gauge Sending Unit

Testing

1. Disconnect the yellow/green wire from the sending unit.

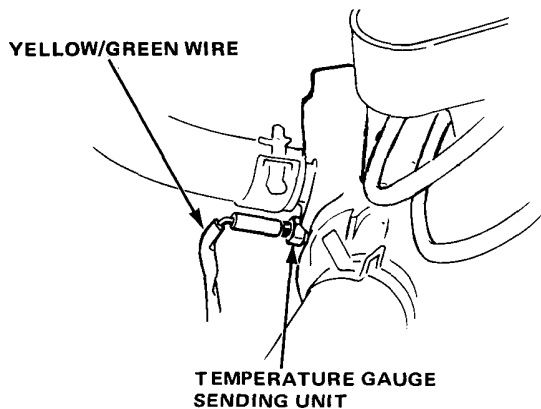

2. With the engine cold, use an ohmmeter to measure the resistance between the sending unit terminal and the engine.
3. Check the temperature of the coolant as shown.

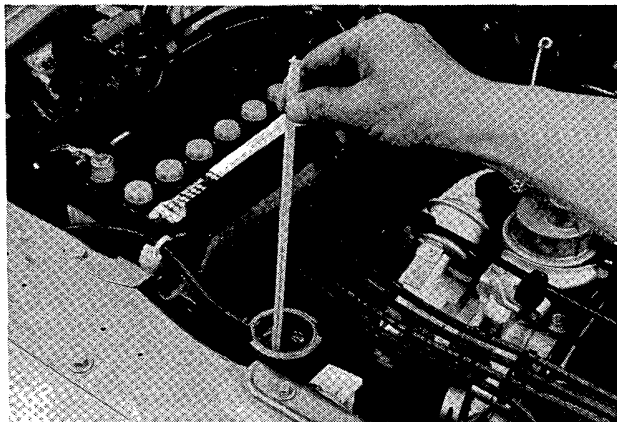

4. Run the engine and measure the change in resistance with engine at operating temperature.

Temperature	50°C (122°F)	80°C (176°F)
Resistance (ohms)	154 +22 -20	52 +4.9 -4.4

