


Fuel Gauge Sending Unit Fuel Line Unit

Testing (cont'd)

4D H/B

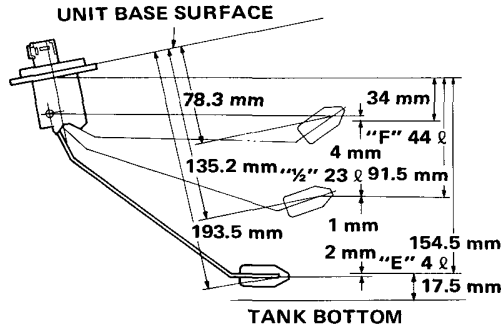

- If resistance is correct, replace fuel gauge and re-test.
- If resistance is incorrect, replace sending unit. Test new unit as described above before installing it.


Fuel Line Unit Replacement

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Drain and remove fuel tank as shown on page 12-6.
2. Remove fuel line unit from tank.

FUEL SENDER WRENCH
07920-SB20000

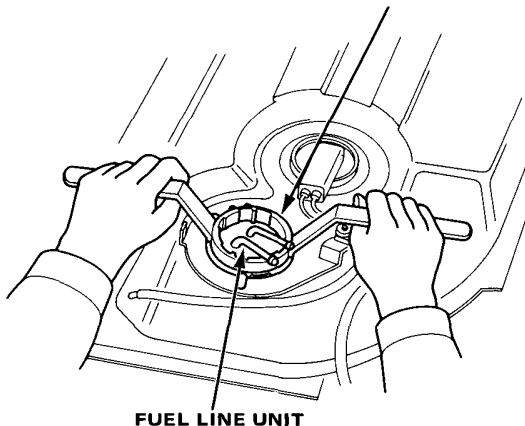

Fuel Cut-off Valve



Replacement

[Coupe only]

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Raise rear of car and place jackstands in the proper locations.
2. Place jack under fuel tank.

CAUTION: Place a flat piece of wood on the jack lifting pad to prevent damage to the fuel tank.

3. Remove the tank mounting nuts and bolts, then lower the tank just enough to gain access to the fuel cut-off valve.
4. Turn the valve 1/4 turn (90°), so its lugs are aligned with the slots in the mount, then lift it out.

FUEL CUT-OFF VALVE

