


5-Speed Transmission

Back-up Light Switch Testing

1. Test the back-up light switch by placing the gear shift lever in reverse and turning the ignition switch to ON.

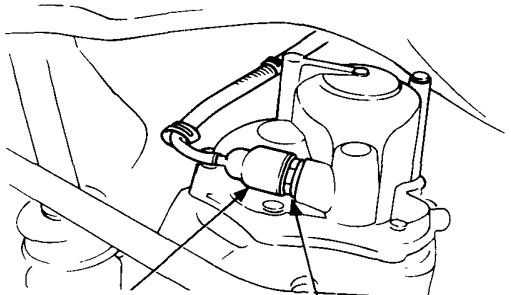


BACK-UP LIGHT SWITCH
25 N·m (2.5 kg·m, 18 lb·ft)

ALUMINUM WASHER
Replace

3. Using an ohmmeter, check the switch for continuity while pushing in on the switch plunger.

SWITCH PLUNGER

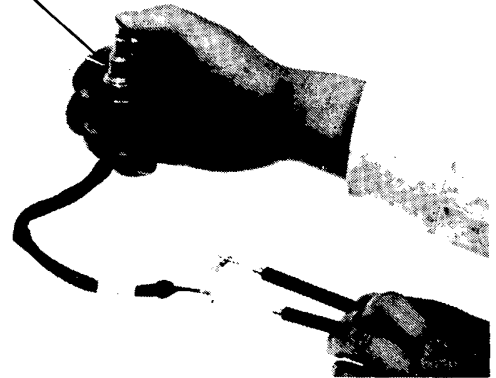

2. If back-up lights do not go on, remove the back-up light switch.

Back-up Light Switch Circuit

