



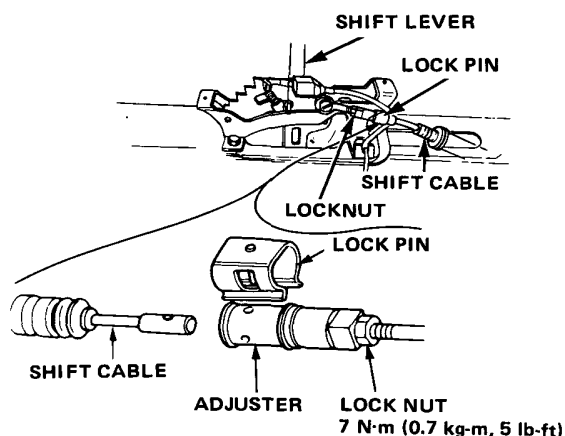


## Shift Cable Adjustment

1. Start engine. Shift to reverse to see if reverse gear engages. If not, refer to troubleshooting on page 16-4.
2. With engine off, remove console.
3. Shift to Drive, then remove lock pin from cable adjuster.

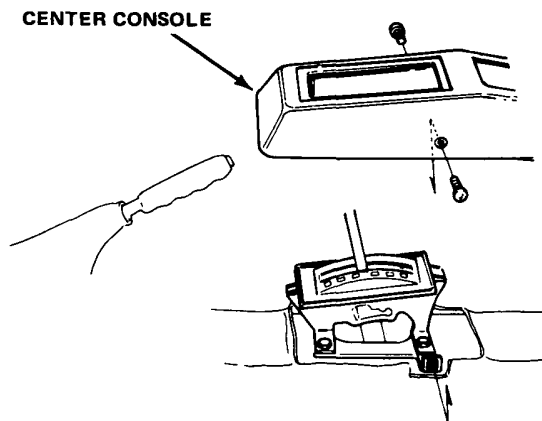

4. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable.

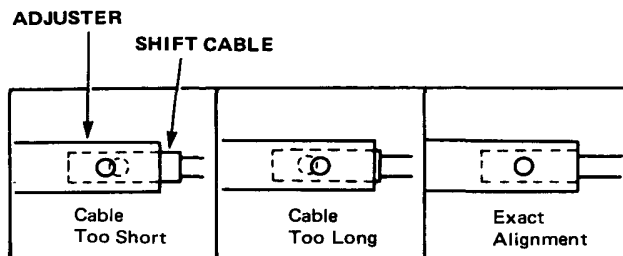

NOTE: There are two holes in end of the shift cable. They are positioned 90° apart to allow cable adjustments in 1/4 turn increments.

5. If not perfectly aligned, loosen locknut on shift cable and adjust as required.
6. Tighten the locknuts.
7. Install lock pin on adjuster.

NOTE: If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted again.

8. Start engine and check shift lever in all gears. If any gear does not work properly, refer to troubleshooting on page 16-4.