




Starter Switch Signal

This signals the ECM when the engine is cranking.

Inspection of Starter Switch Signal.

Connect the test harness between the ECM and connectors (see page 11-17).

Measure voltage between B9 (+) terminal and A26 (-) terminal with the ignition switch in the start position.

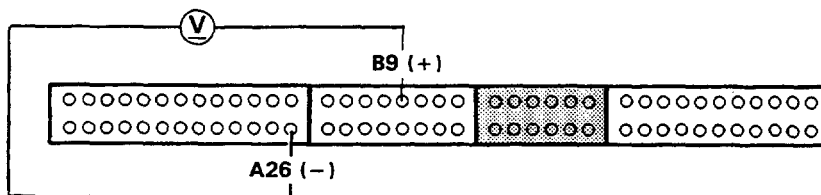

NOTE:

- M/T: Clutch pedal must be depressed.
- A/T: Transmission in **N** or **P** position.

Is there battery voltage?

YES

Starter switch signal is OK.

NO

Inspect No. 18 STARTER SIGNAL (7.5 A) fuse in the under-dash fuse/relay box.

Is the fuse OK?

YES

Repair open in BLK/WHT wire between ECM (B9) and No. 18 STARTER SIGNAL (7.5 A) fuse.

NO

- Repair short in BLK/WHT wire between ECM (B9) and No. 18 STARTER SIGNAL (7.5 A) fuse.
- Replace the No. 18 STARTER SIGNAL (7.5 A) fuse.