

Fuel Supply System

PGM-FI Main Relay (cont'd)

(From page 11-90)

Turn the ignition switch OFF.

Measure the voltage between A7 (+) terminal and A23 (-) terminal when the ignition switch is first turned ON for two seconds.


Is there 1.0 V or less?

YES

Check the PGM-FI main relay.

NO

Substitute a known-good ECM and recheck. If prescribed voltage is now available, replace the original ECM.

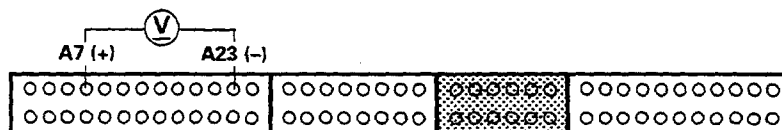

Inertia Switch

Description

The inertia switch is a safety device which automatically cuts off the fuel supply in the event of a collision or sudden impact. The switch is located behind the front ashtray on the driver side. After an impact, the switch must be reset by pressing the button before the engine can be restarted.

