

Maintenance


Transmission Oil

NOTE: Check the oil with the engine OFF and car on level ground.

1. Remove the oil filler plug, then check the level and condition of the oil.

OIL FILLER PLUG

44 N·m (4.5 kgf·m, 33 lbf·ft)

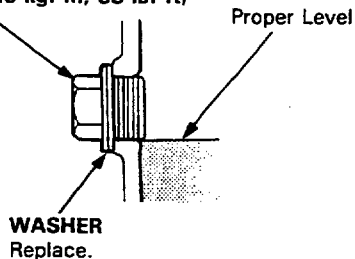

2. The oil level must be up to the filler hole. If it is below the hole, add oil until it runs out, then reinstall the oil filler plug with a new washer.
3. If the transmission oil is dirty, remove the drain plug and drain the oil.
4. Reinstall the drain plug with a new washer, and refill the transmission oil to the proper level.

NOTE: The drain plug washer should be replaced at every oil change.


5. Reinstall the oil filler plug with a new washer.

Oil Capacity

1.8 l (1.9 US qt, 1.6 Imp qt) at oil change

1.9 l (2.0 US qt, 1.7 Imp qt) at overhaul

Use only SAE 10W-30 or 10W-40, API service SF or SG grade.

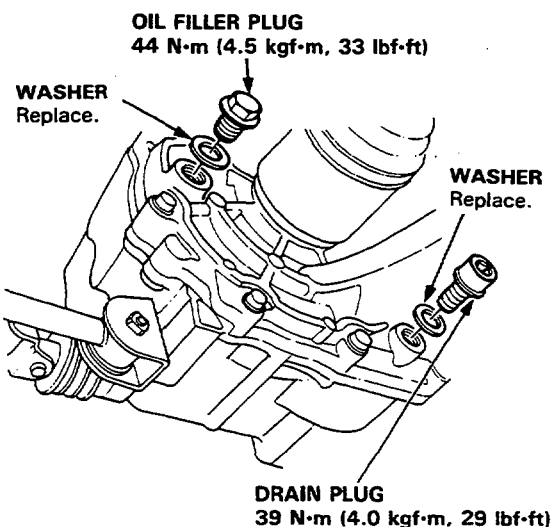


Back-up Light Switch



Replacement

NOTE: To test the back-up light switch, see section 23.

1. Disconnect the connector, then remove the back-up light switch connector from the connector clamp.
2. Remove the back-up light switch.

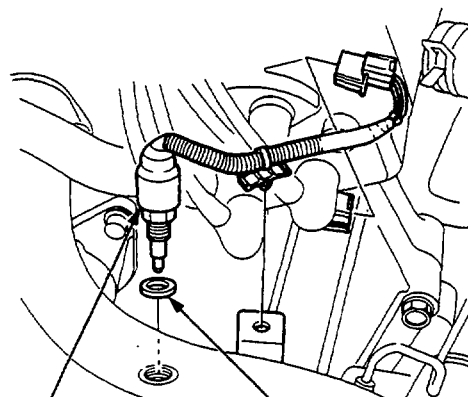

3. Install the new washer and back-up light switch.
4. Connect the back-up light switch connector.