


# Transmission Assembly



## Installation


1. Install the dowel pins.

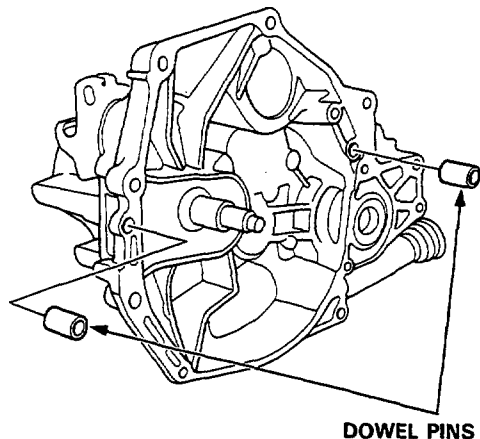


2. Apply grease to the parts as shown, then install the release fork and release bearing.

**NOTE:** Use only HONDA Genuine Urea Grease UM264 (P/N 41211-PY5-305).


3. Install the release fork boot.

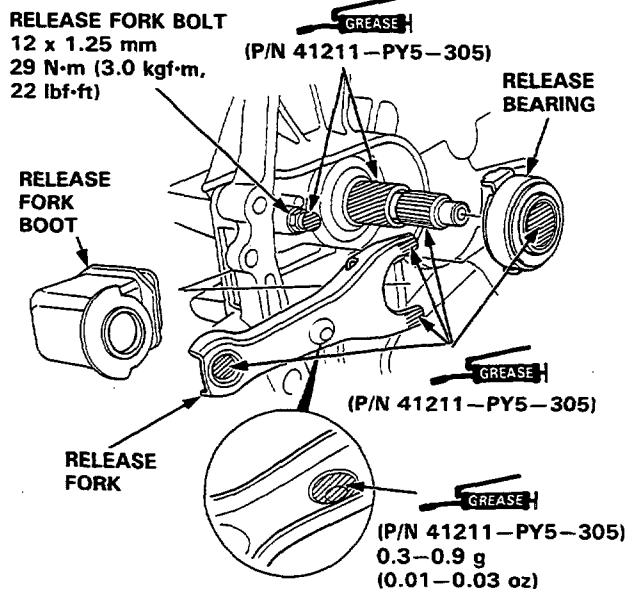

4. Place the transmission on the transmission jack, and raise it to the engine level.
5. Install the transmission mounting bolts and rear mount bracket bolts.

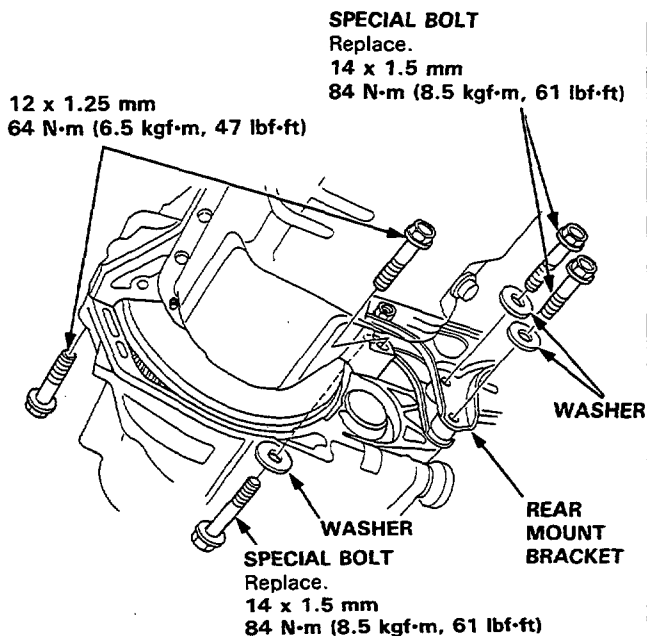

6. Install the three upper transmission mounting bolts and the lower starter mounting bolt.

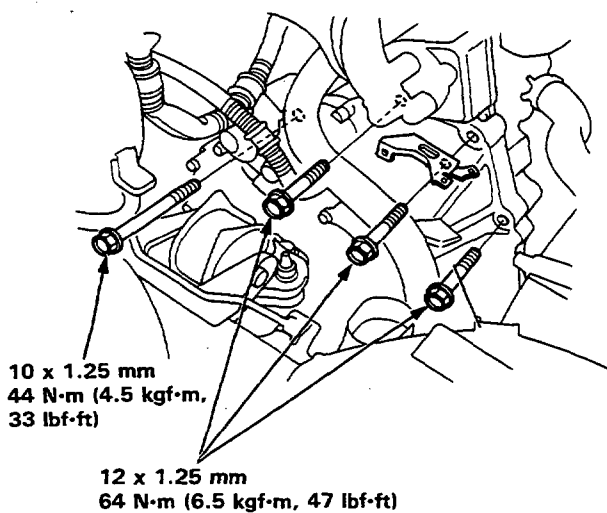

(cont'd)


# Transmission Assembly

## Installation (cont'd)

7. Raise the transmission, then install the transmission side mount.


**NOTE:**

- Torque the mounting bolt and nuts in the sequence shown.
- Check that the bushings are not twisted or offset.

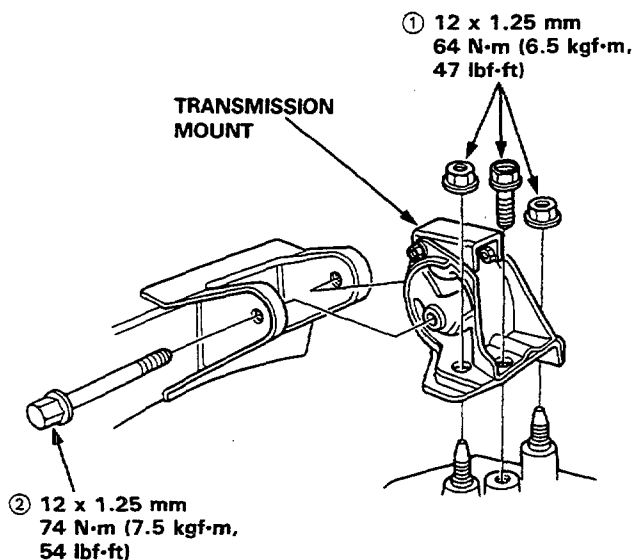


8. Install the right front mount/bracket.


9. Install the splash shield.

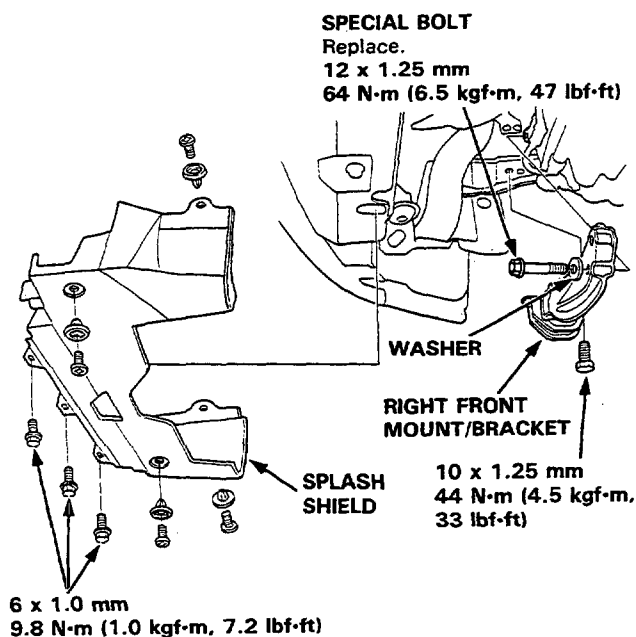

10. Remove the chain hoist, then reinstall the distributor mounting bolt.

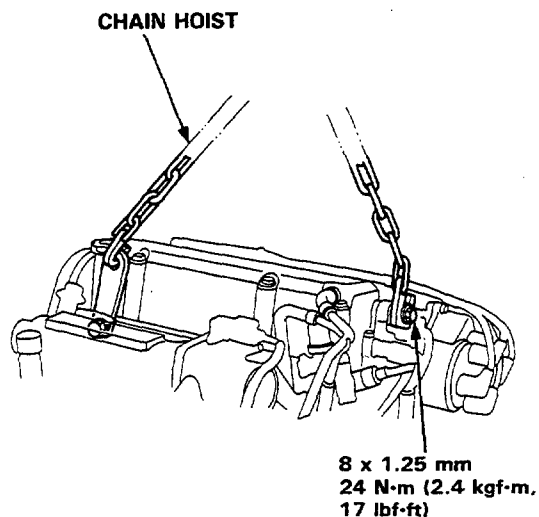

11. Install the clutch cover and the rear engine stiffener.

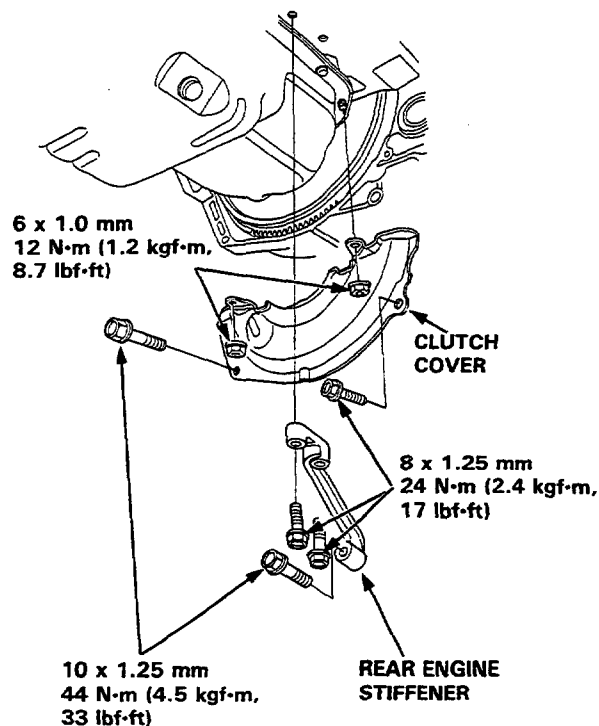




## 12. Install the shift rod, spring pin, and clip.


### NOTE:

- Install the clip as shown.
- Turn the boot so the hole is facing down.
- Make sure the boot is installed on the shift rod.

## 13. Install the extension rod.

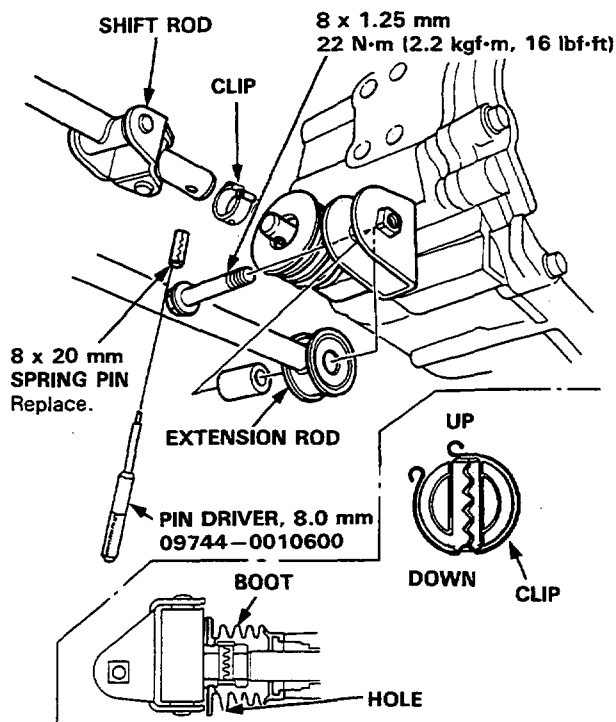

## 14. Install exhaust pipe A.

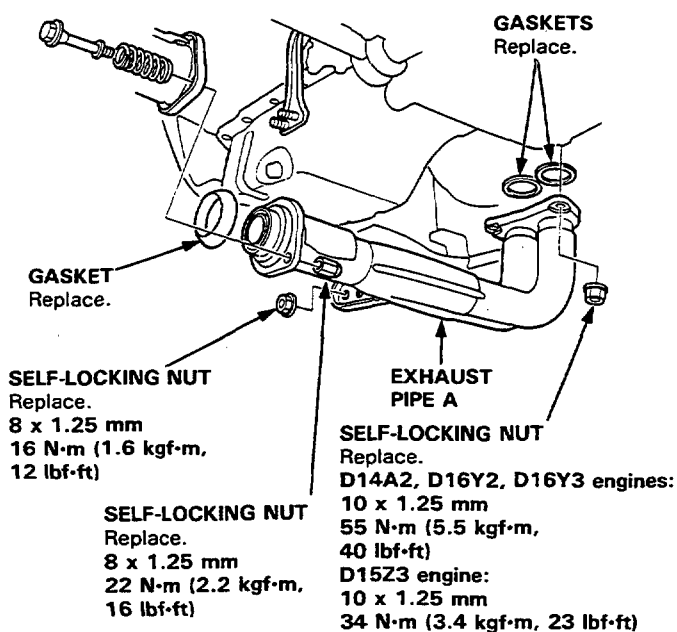


## 15. Install the driveshafts (see section 16).

NOTE: Replace the set rings with new ones.


## 16. Install the ball joint onto the lower arm (see section 16).

## 17. Install the damper fork.

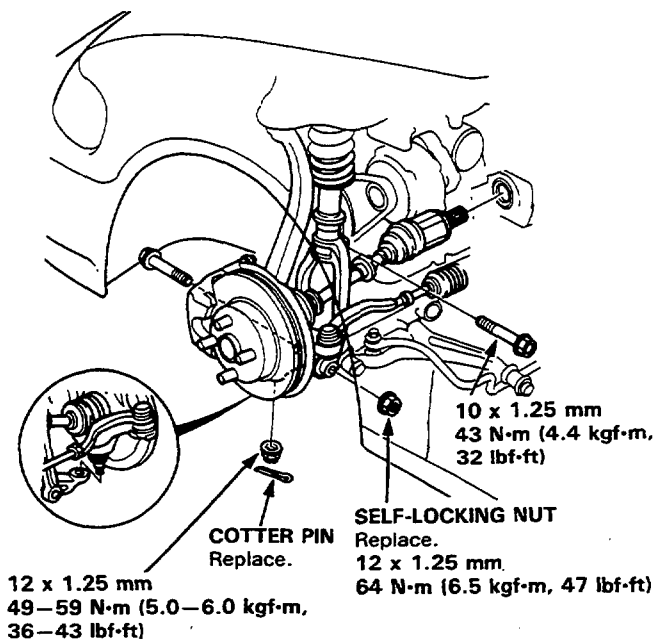

## 18. Install the slave cylinder, then install the clutch pipe stay.

NOTE: Use only HONDA Genuine Urea Grease UM264 (P/N 41211-PY5-305).

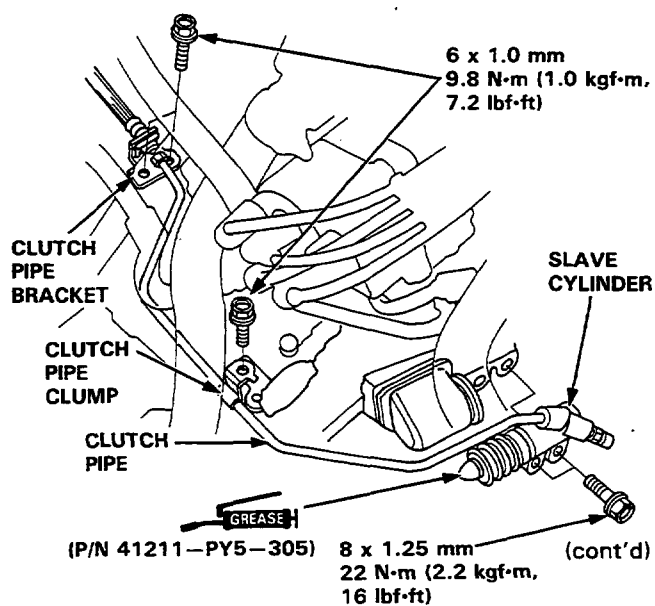


# Transmission Assembly

## Installation (cont'd)


19. Connect the vehicle speed sensor (VSS), back-up light switch connectors, transmission ground wire, and starter cables.

NOTE: When installing the starter cable, make sure that the crimped side of the ring terminal is facing out (see section 23).


20. Install the wire harness clamp.

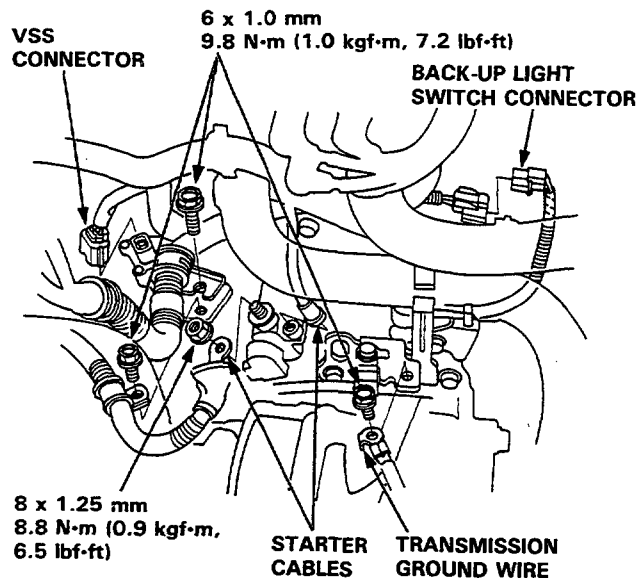

21. Install the intake air duct, air cleaner housing assembly, and intake air tube.

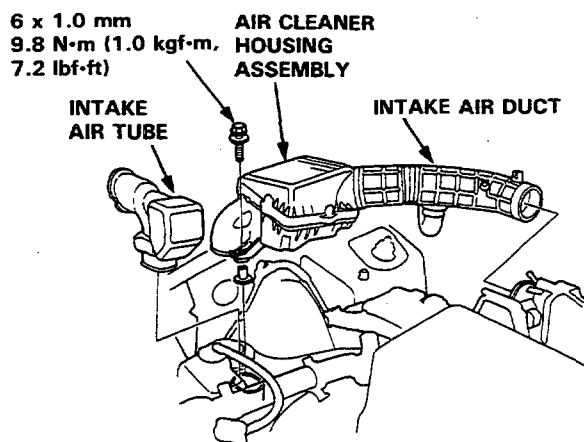

22. Turn the breather cap so that the "F" mark points at an angle of 30° towards the front of the car as shown.

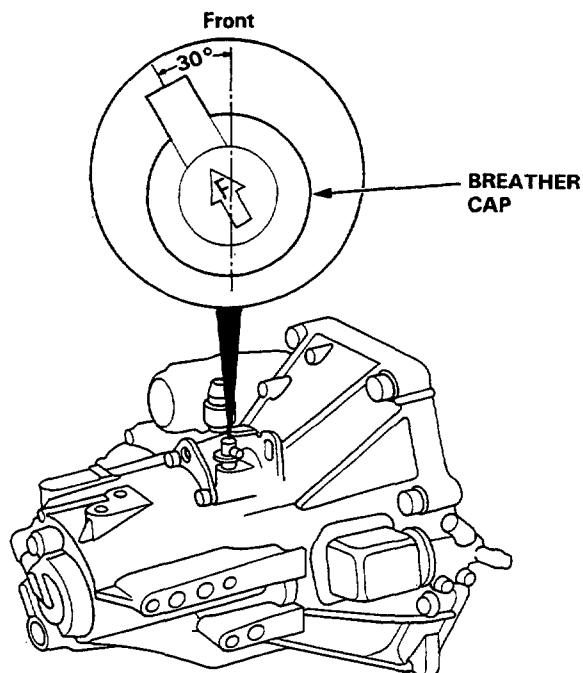

23. Refill the transmission with oil (see page 13-3).
24. Connect the positive (+) cable first, then the negative (-) cable to the battery.
25. Check the clutch operation.
26. Shift the transmission and check for smooth operation.
27. Adjust ignition timing (see section 23).
28. Check the front wheel alignment (see section 18).