 


# Rear Suspension

## Torque Specifications



### CAUTION:

- Replace the self-locking nut after removal.
- Any bolts or nuts connected to rubber mounts or bushings should be tightened with the vehicle on the ground.

