


Seats

Rear seat Replacement

Rear seat cushion removal:

1. Remove the bolts.
2. Remove the seat cushion by lifting it upward.

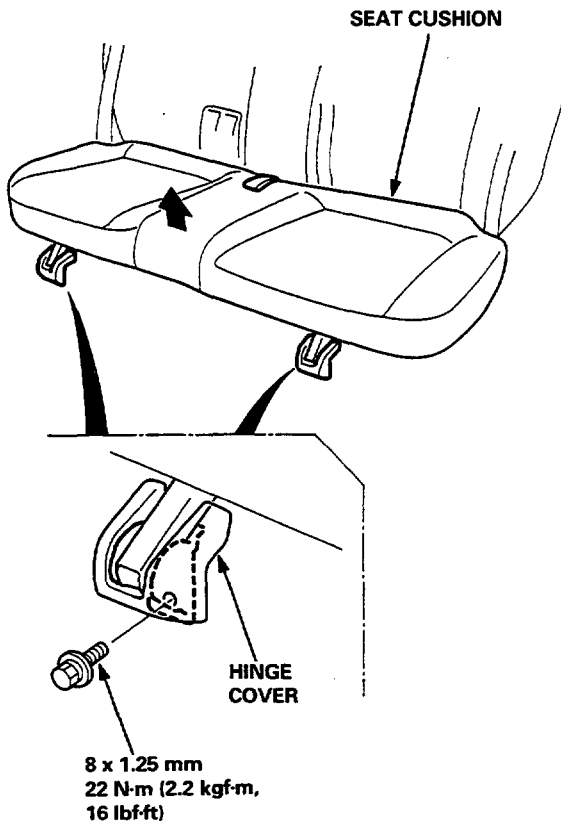


3. Installation is the reverse of the removal procedure.


NOTE: Before attaching the seat cushion, make sure there are no twists in the rear seat belt.

Rear seat-back removal:

1. Fold the seat-back forward.
2. Fold the trunk mat back, then remove the pivot cover.

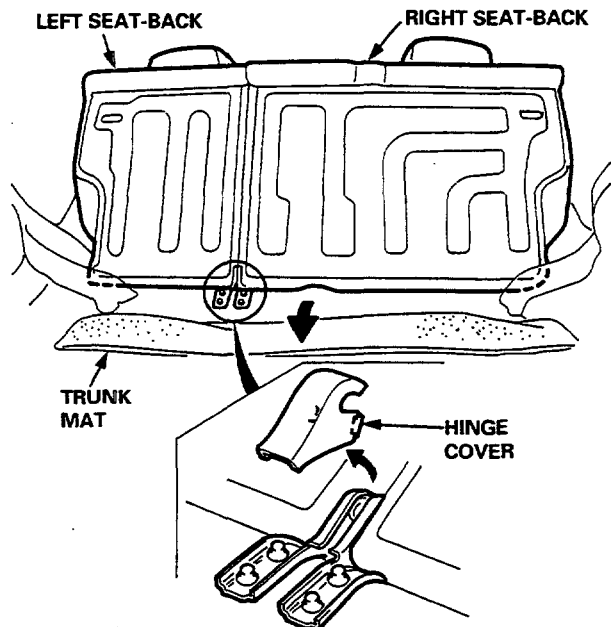

3. Remove the bolts, then remove the rear seat-back as shown.

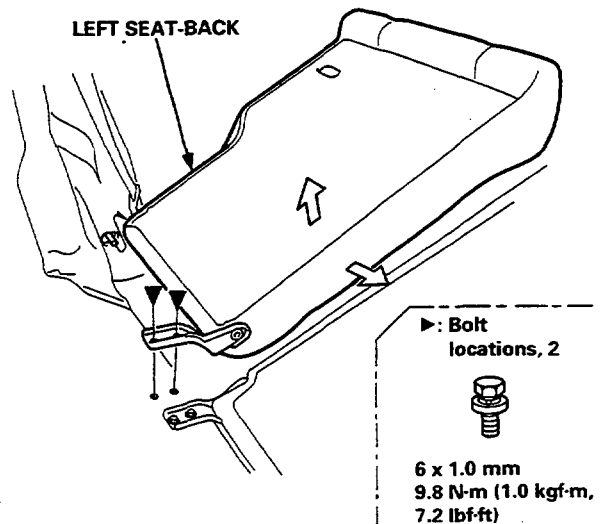

4. Installation is the reverse of the removal procedure.

NOTE: Before attaching the seat-back, make sure there are no twists in the rear seat belt.




Rear Seat Cover Replacement


CAUTION: Wear gloves to remove and install the seat cover.

Seat cushion cover removal:

1. Remove the seat cushion (see page 20-66).
2. Remove the seat cushion latch.

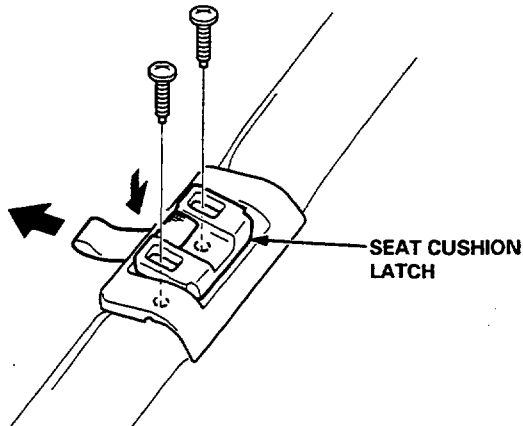


3. Pull back the edge of the seat covers all the way around, then release the clips and cushion cover board.

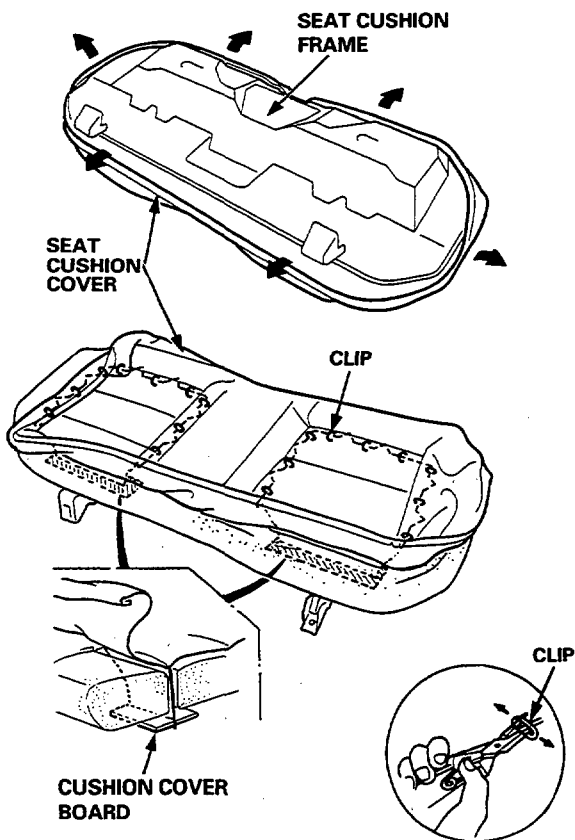


Seat-back cover removal:

1. Remove the seat-back (see page 20-66).
2. Remove the seat belt buckle locator, pivot bushing and hinge.

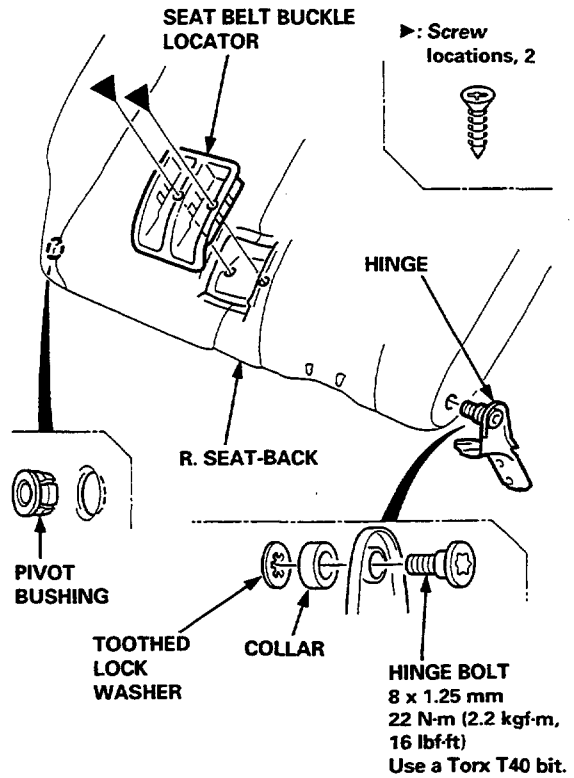

3. If so equipped, remove the armrest.

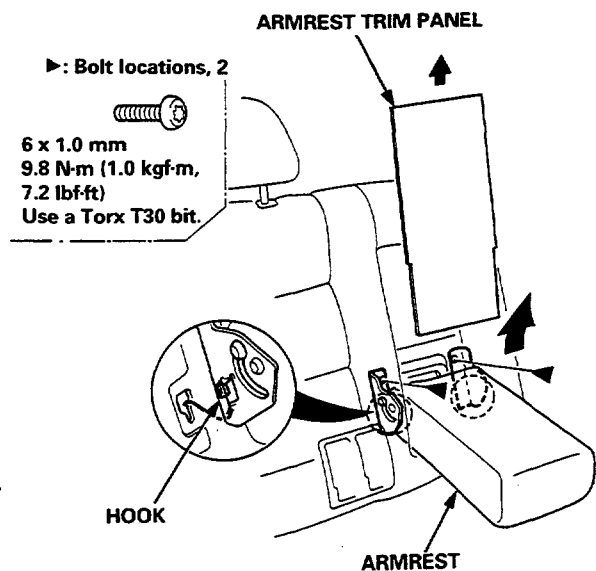

(cont'd)