



# Troubleshooting



## Condenser Fan

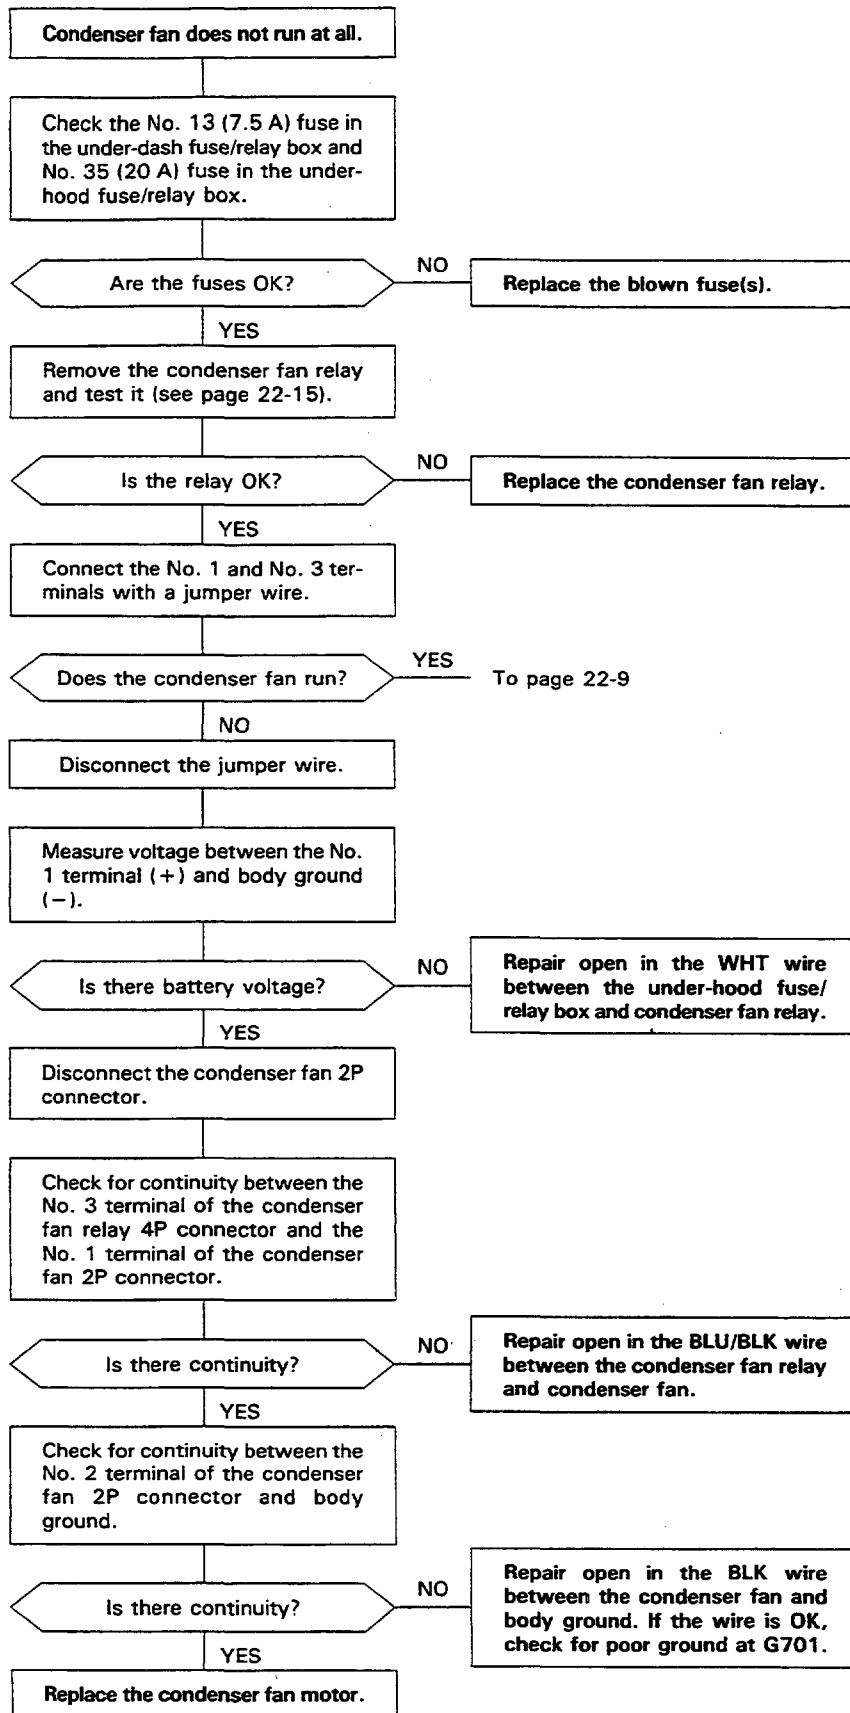

CONDENSER FAN RELAY 4P CONNECTOR

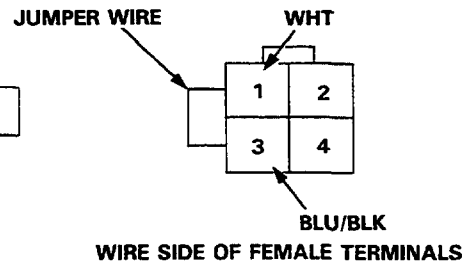

CONDENSER FAN RELAY 4P CONNECTOR

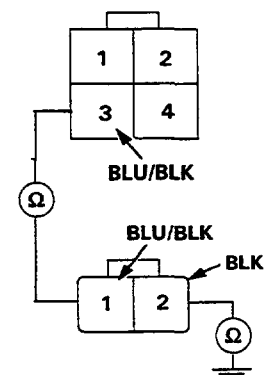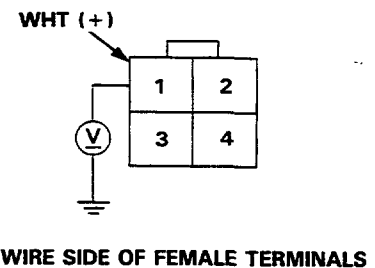

CONDENSER FAN MOTOR 2P CONNECTOR  
WIRE SIDE OF FEMALE TERMINALS



From page 22-8

Disconnect the jumper wire.

Turn the ignition switch ON.

Measure voltage between the No. 2 terminal (+) and body ground (-).

Is there battery voltage?

YES

Repair open in the YEL/WHT wire between the condenser fan relay and A/C thermostat.

NO

Remove the diode and test it (see page 22-16).

Is the A/C diode OK?

NO

Replace the A/C diode.

YES

Measure voltage between the No. 3 terminal (+) and body ground (-).

Is there battery voltage?


NO

Repair open in the BLK/YEL wire between the under-dash fuse/relay box and A/C diode.

YES


Repair open in the YEL wire between the diode and condenser fan relay.

#### CONDENSER FAN RELAY 4P CONNECTOR

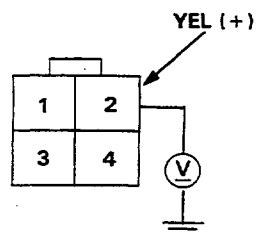

#### WIRE SIDE OF FEMALE TERMINALS

#### DIODE 3P CONNECTOR

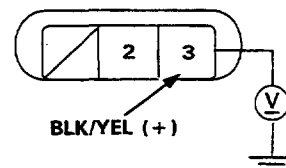

#### WIRE SIDE OF FEMALE TERMINALS