

Gauge Assembly

Component Location Index

NOTE: LHD type is shown, RHD type is similar.

FUEL GAUGE SENDING UNIT
Test, page 23-A125

PARKING BRAKE SWITCH
Test, page 23-A127


GAUGE ASSEMBLY
Gauge/Terminal Locations Index, page 23-A113
Removal, page 23-A116
Bulb Locations, page 23-A118
Disassembly, page 23-A119

BRAKE FLUID LEVEL SWITCH
Test, page 23-A127

ENGINE OIL PRESSURE SWITCH
Test, page 23-A122

ENGINE COOLANT TEMPERATURE (ECT) GAUGE SENDING UNIT
Test, page 23-A123

VEHICLE SPEED SENSOR (VSS)
Troubleshooting, page 23-A120
Replacement, page 23-A122

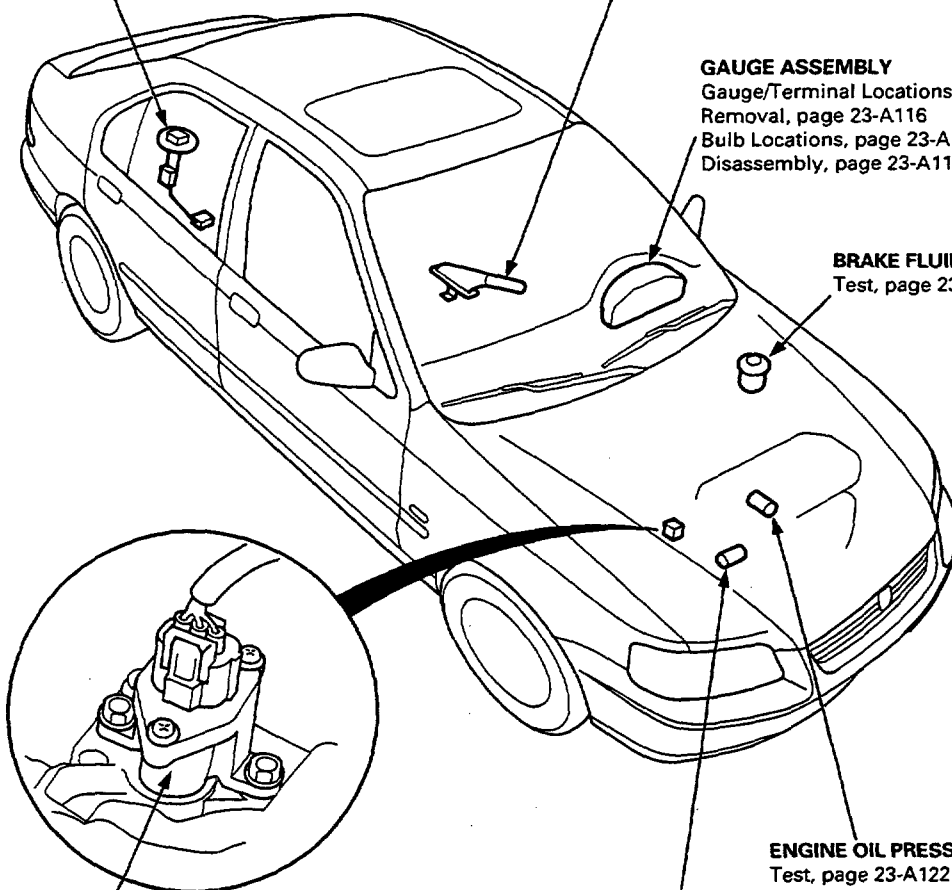



Gauge/Terminal Location Index

