


Vehicle Speed Sensor (VSS)

Replacement

1. Disconnect the 3-P connector from the vehicle speed sensor (VSS).
2. Remove the mounting bolts, then remove the VSS.

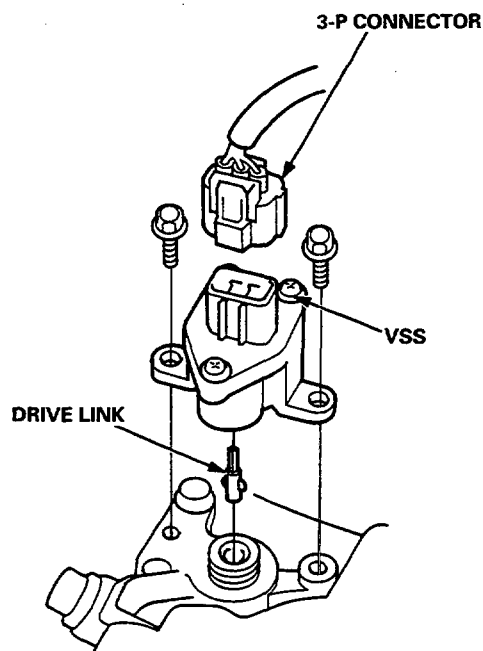


3. Install in the reverse order of removal.

NOTE: The VSS drive link is a very small part; be careful not to lose it.

Engine Low Oil Pressure Indicator System

Engine Oil Pressure Switch Test

1. Remove the YEL/RED wire from the engine oil pressure switch.

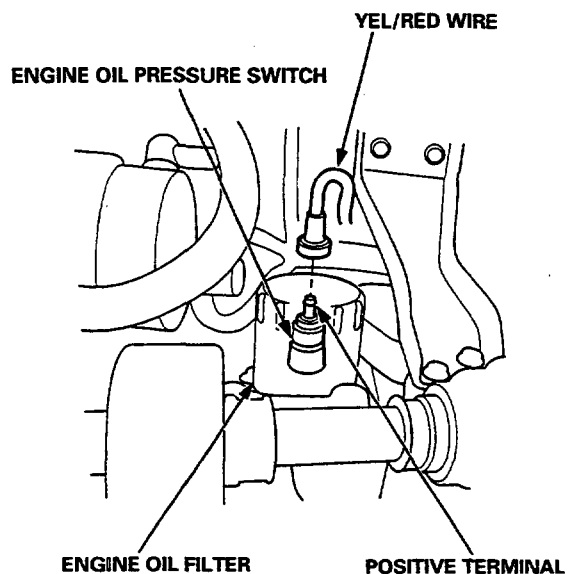

2. Check for continuity between the positive terminal and the engine (ground) with the engine OFF.
 - If there is continuity, go on to step 3.
 - If there is no continuity, replace the switch.
3. Check for continuity again, this time with the engine running.
 - If there is no continuity, the switch is OK.
 - If there is continuity, do not replace the switch; first check other possible causes in step 4.
4. Make sure engine oil level is OK, then check engine oil pressure (see section 8).
 - If engine oil pressure is OK, replace the switch.
 - If engine oil pressure is low, remove, inspect, and, if necessary, replace the engine oil pump (see section 8).