
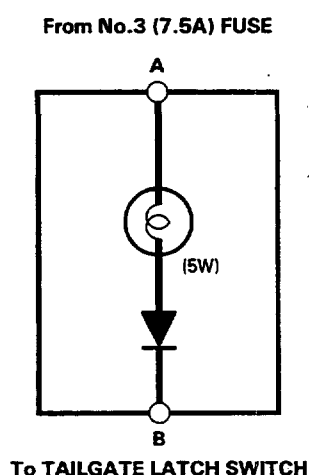


# Ceiling/Luggage Area Lights


## Luggage Area Light Test

1. Pry the luggage area light lens out of its housing.
2. Pry out the housing.
3. Disconnect the 2-P connector from the housing.
4. Make sure that the bulb is OK. Check for continuity between the A (+) and B (-) terminals.

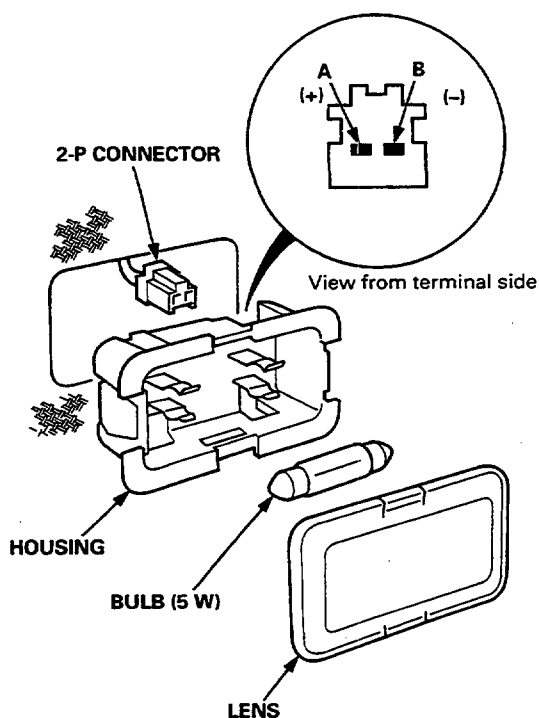

## Latch Switch Test/Replacement

1. Open the tailgate, and remove the tailgate trim panel.
2. Disconnect the 1-P connector from the tailgate latch.
3. Check for continuity between the terminals in each switch position according to the table.

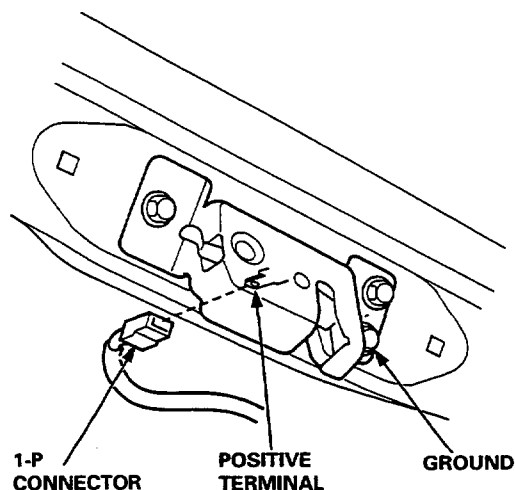

Terminal	POSITIVE TERMINAL	GROUND
Position		
OPEN		
CLOSE		

4. If necessary, remove the three bolts from the trunk lid, then remove the trunk latch assembly. The switch cannot be replaced separately.

