


Rocker Arms


Removal

1. Loosen the adjusting screws.


D16Y2 engine:

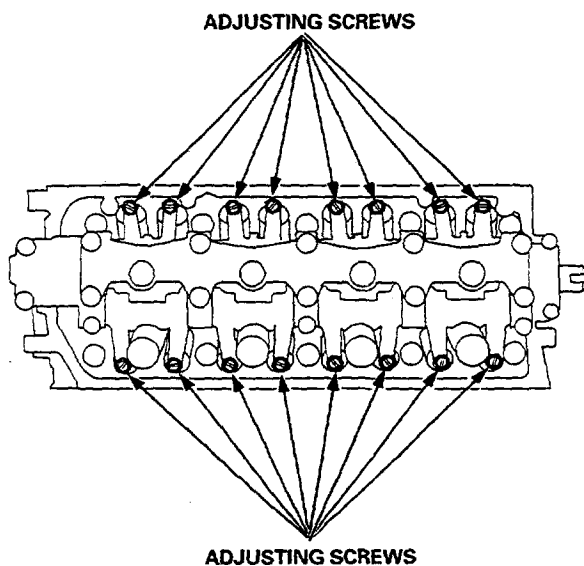

D15Z3 engine:

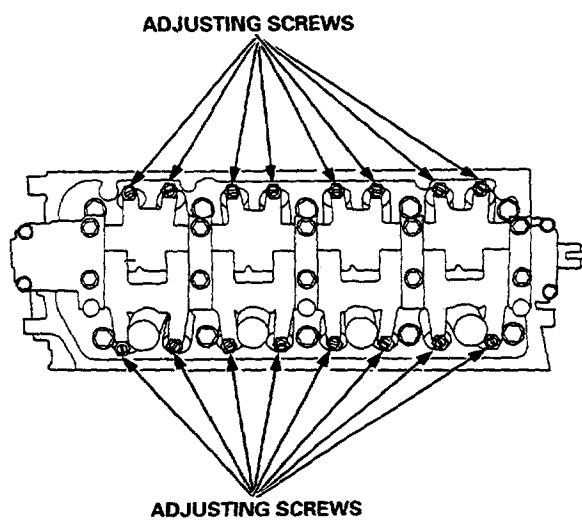

D16Y3, D14A2 engines:

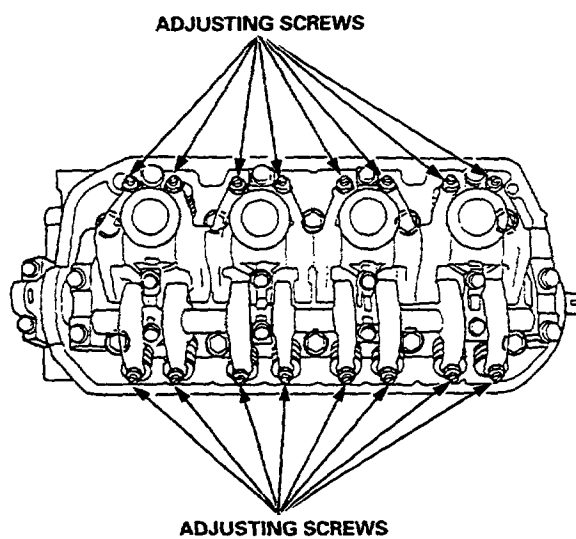




2. Unscrew the camshaft holder bolts, then remove the rocker arm assembly.


NOTE:

- Unscrew the camshaft holder bolts two turns at a time, in a crisscross pattern, to prevent damaging the valves or rocker arm assembly.
- When removing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the camshaft holders, the springs and the rocker arms on the shaft.

D16Y2 engine:

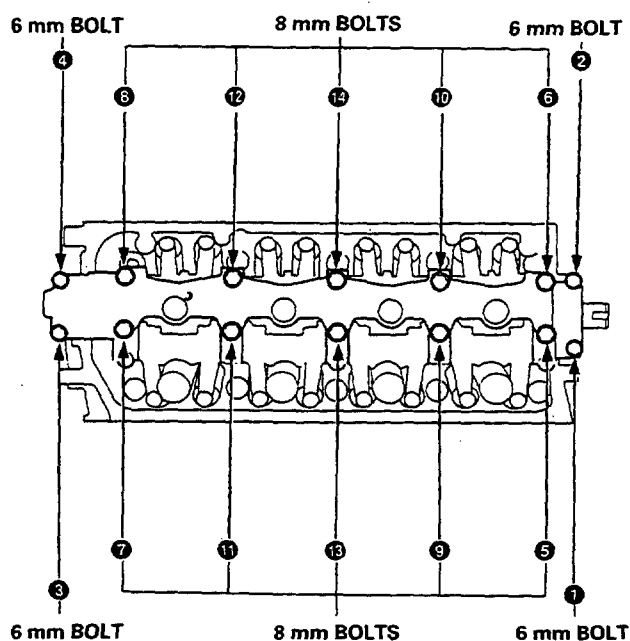

D15Z3 engine:

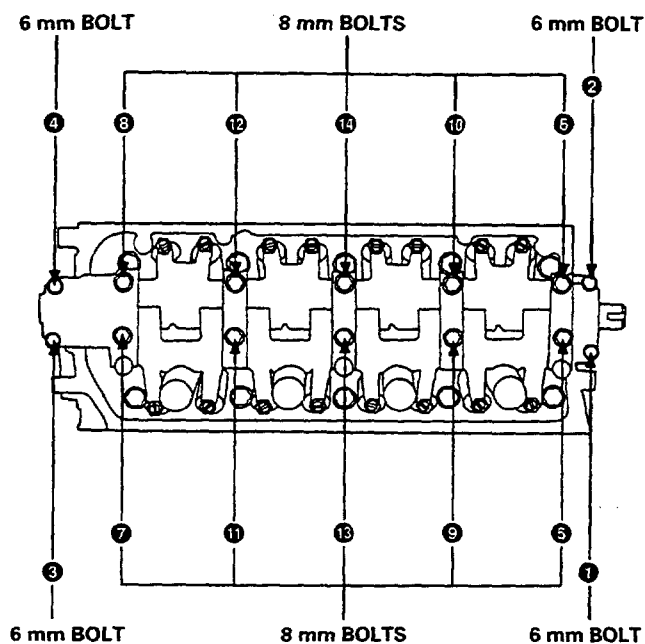

D16Y3, D14A2 engines:

