



Entry Light Timer System

Component Location Index

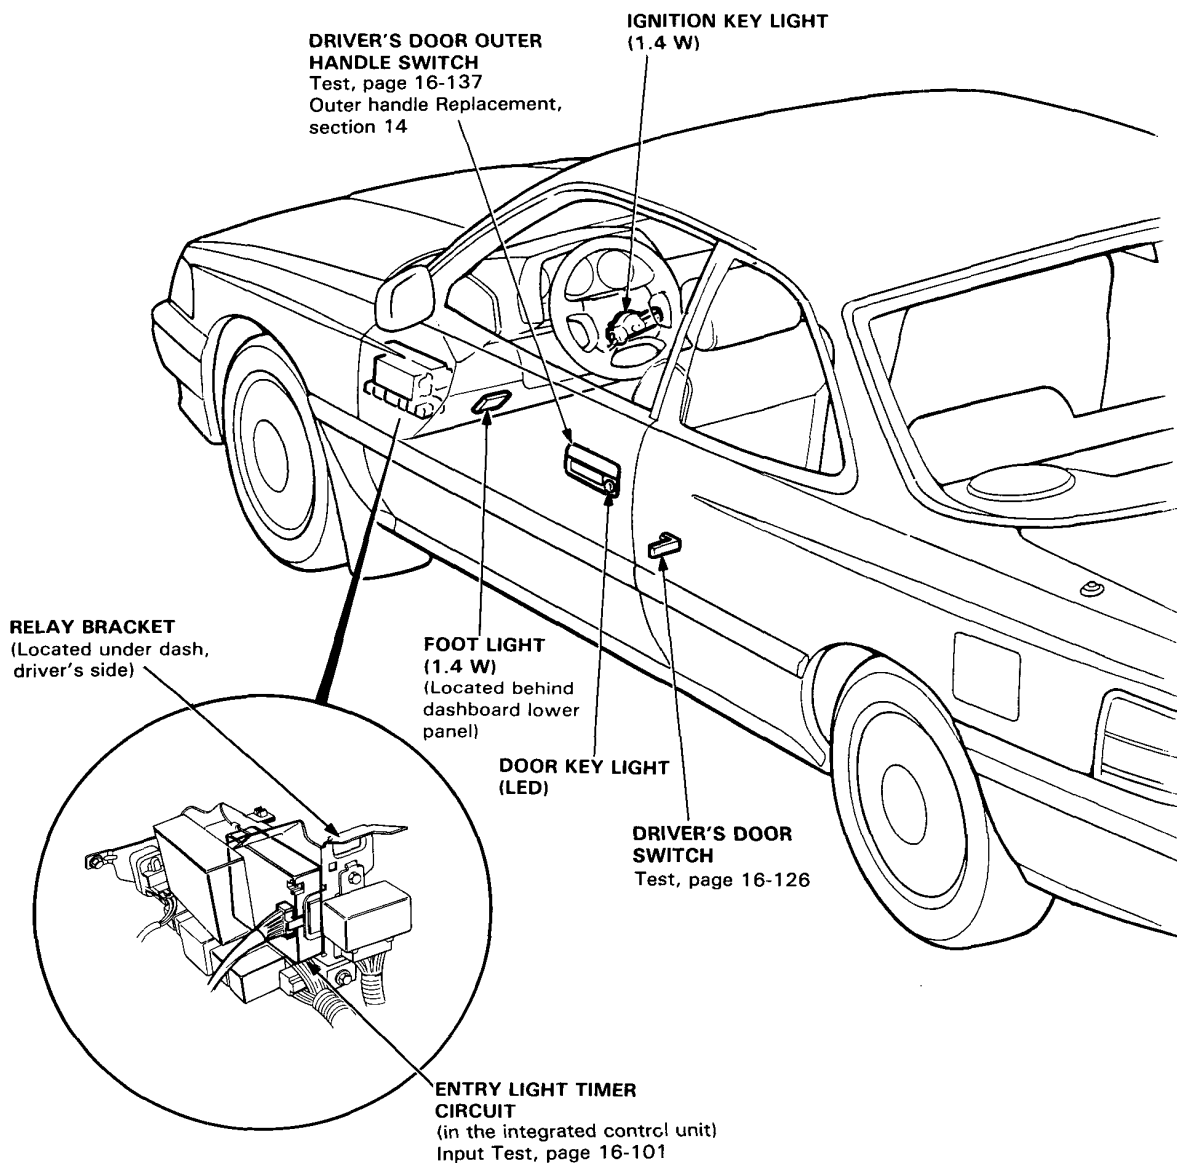

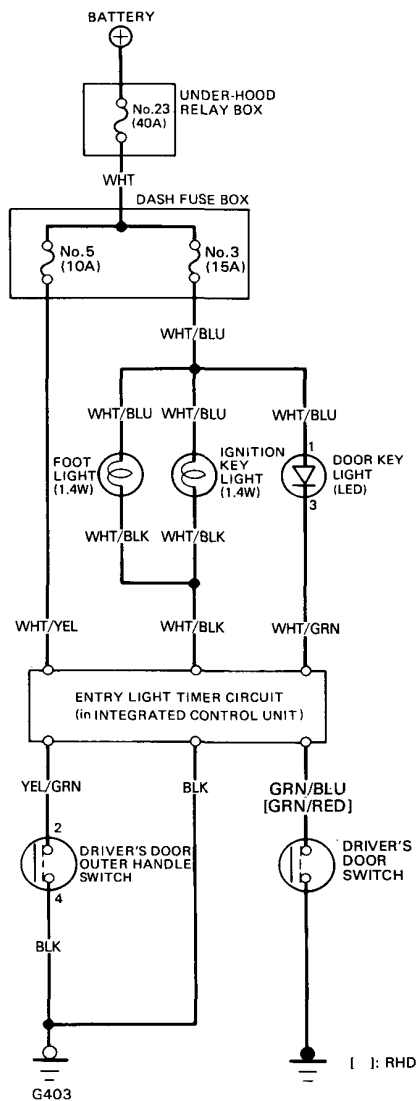

Outer Handle Switch Test

1. Remove the driver's door trim panel.
2. Disconnect the 4-P connector from the outer handle switch.
3. There should be continuity between the No.2 and No.4 terminals when the driver's door outer handle is pulled.
There should be no continuity when the handle is released.

