

Hood Opener and Latch

Replacement

SRS wire harness is routed near the hood opener cables.



WARNING All SRS wire harness and connectors are colored Yellow. Do not use electrical test equipment on these circuit.

CAUTION: Be careful not to damage SRS wire harness when servicing the hood opener cables.

1. Remove the kick panel.
2. Remove the bolts, then remove the hood opener and disconnect the opener cables.
3. Remove the 2 bolts from each hood lock, then remove the hood locks and disconnect the opener cables.
4. Remove the inner fender, then pull out the opener cables.

NOTE: Before pulling out the opener cables, tie strings to both ends of it so you can pull it back in when it is reinstalled.

5. Remove the front grille and 2 condenser mounting bolts.
6. Remove the condenser, then remove the hood latch mounting bolts and nut, and the hood latch.

NOTE: Do not drop bolts and nut.

