

[illegible]

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - ACURA (1988-98 EXCEPT SLX)

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Seat Belt Tensioners (If Equipped)		?
?	? * SRS Control Unit		?
AAA?			
? Inspect & If	? * Cable Reel		?
? Damaged, Replace	? * Dash or Impact Sensors (If Equipped)		?
? Component	? * Seat Belts		?
? (Even If Air	? * SRS Control Unit		?
? Bag Did Not	? * Wiring Harness		?
? Deploy)	?		?
AAA?			
? Comments	? * If any components are damaged or bent, they		?
?	? must be replaced.		?
?	? * DO NOT attempt SRS wiring repairs. If SRS		?
?	? wiring or harness connectors are faulty,		?
?	? replace faulty wiring harness.		?
?	? * After vehicle is repaired, ensure AIR BAG		?
?	? warning light is functioning properly.		?
AAU			

INSPECTION PROCEDURES TABLE - ACURA (1996-98 SLX)

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Sensing & Diagnostic Module (SDM)		?
AAA?			
? Inspect & If	? * Instrument Panel Braces		?
? Damaged, Replace	? * Instrument Panel Steering Column		?
? Component	? Reinforcement Plate		?
? (Even If Air	? * Seat Belts & Mounting Points		?
? Bag Did Not	? * Knee Bolsters & Mounting Points		?
? Deploy)	? * Steering Column		?
?	? * SRS Coil Assembly		?
?	? * Wiring Harnesses		?
AAA?			
? Comments	? * If any components are damaged or bent, they		?
?	? must be replaced.		?
?	? * DO NOT attempt wiring harness repairs.		?
?	? Replace harness.		?
AAU			

PASSIVE RESTRAIN

HONDA (1991-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - HONDA (1991-98)

AA

Model	Year	(1) Location
Accord	1993-98	D/P
	1991-92	DS
Civic	1994-98	D/P
	1992-93	DS
Civic del Sol	1994-97	D/P
	1993	DS
CR-V	1997-98	D/P
Odyssey	1995-98	D/P
Prelude	1994-98	D/P
SI 4WS	1992-93	D/P
Except SI 4WS	1992-93	DS
Passport	1995 1/2-98	D/P

(1) - Location Definitions: D/P = Driver's & Passenger's
Side, DS = Driver's Side Only, SI = Side Impact.

AA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - HONDA (1991-98 EXCEPT PASSPORT)

UAA?

? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Seat Belt Tensioners (If Equipped)	?
?	? * SRS Control Unit	?
AA?		
? Inspect & If	? * Cable Reel	?
? Damaged, Replace	? * Dash Sensors (1991-94)	?
? Component	? * Seat Belts	?
? (Even If Air	? * SRS Control Unit	?
? Bag Did Not	? * Wiring Harness	?
? Deploy)	?	?
AA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.?	?
?	? * DO NOT attempt SRS wiring repairs. If SRS	?
?	? wiring or harness connectors are faulty,	?

PASSIV

```
INSPECTION PROCEDURES TABLE - HONDA (1995 1/2-98 PASSPORT)
UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?      Action              ?                      Component or System                ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After           ? * Air Bag Module(s)                    ?
? Deployment              ? * Sensing & Diagnostic Module (SDM)    ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If            ? * Instrument Panel Braces                 ?
? Damaged, Replace       ? * Instrument Panel Steering Column        ?
? Component               ? Reinforcement Plate                       ?
? (Even If Air           ? * Seat Belts & Mounting Points          ?
? Bag Did Not             ? * Knee Bolsters & Mounting Points       ?
? Deploy)                 ? * Steering Column                        ?
?                          ? * SRS Coil Assembly                     ?
?                          ? * Wiring Harnesses                      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments                ? * If any components are damaged or bent, they ?
?                           ? must be replaced.                         ?
?                           ? * DO NOT attempt wiring harness repairs.   ?
?                           ? Replace harness.                          ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
```

Action	Component or System
Replace After Deployment	* Air Bag Module(s)
	* Control Module
	* Steering Column Clockspring
Inspect & If Damaged, Replace Component	* Any Seat Belt In Use At Time Of Collision
	* Steering Column
	* Steering Wheel
(Even If Air Bag Did Not Deploy)	* Wiring Harness
Comments	* If any components are damaged or bent, they must be replaced.
	* DO NOT attempt SRS wiring repairs. If SRS wiring or harness connectors are faulty, replace faulty wiring harness.

AIR BAG APPLICATION

Model					
Year		(1)	Location		Inspection Table

G20	1993-96	D/P	INFINITI-2
I30	1998	D/P, SI	INFINITI-1
		1997	D/P	INFINITI-1
		1996	D/P	INFINITI-2
J30	1997	D/P	INFINITI-1
		1994-96	D/P	INFINITI-2
		1993	D/P	INFINITI-3
M30	1990-92	DS	INFINITI-3
Q45	1998	D/P, SI	INFINITI-1
		1997	D/P	INFINITI-1
		1994-96	D/P	INFINITI-2
		1990-93	DS	INFINITI-3
QX4	1997-98	D/P	INFINITI-1

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - INFINITI-1

UAAA?		
? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Control Unit, Diagnosis	?
?	? * Satellite Sensor (1)	?
?	? * Seat Belt Pretensioners (2)	?
?	? * Side Air Bag Module (1)	?
AA?		
? Inspect & If	? * Center Pillar Inner (1)	?
? Damaged, Replace	? * Instrument Panel	?
? Component	? * Seat (1)	?
? (Even If Air	? * Seat Belt Pretensioners (2)	?
? Bag Did Not	? * Spiral Cable	?
? Deploy)	? * Steering Wheel	?
?	? * Wiring Harnesses	?
AA?		
? Comments	? * Inspect all SRS components for dents,	?
?	? deformities or rust.	?
?	? * After repairs are completed, check AIR BAG	?
?	? warning light to ensure system is functioning	?
?	? properly.	?
AA?		
?(1) - On side of impact.		?
?(2) - Except I30 and QX4.		?
AAAU		

INSPECTION PROCEDURES TABLE - INFINITI-2

UAA?		
? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Control Unit, Diagnosis	?
?	? * Instrument Panel	?
?	? * Seat Belt Pretensioners (1)	?
AA?		
? Inspect & If	? * All Sensors (2)	?
? Damaged, Replace	? * Spiral Cable	?
? Component	? * Steering Wheel	?
? (Even If Air	? * Wiring Harnesses	?
? Bag Did Not	?	?
? Deploy)	?	?
AA?		
? Comments	? * Inspect all SRS components for dents,	?

PASSIV

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

AA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - ISUZU-1

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Sensors In Area Of Accident Damage		?
AAA?			
? Inspect & If	? * Instrument Panel Braces		?
? Damaged, Replace	? * Instrument Panel Steering Column		?
? Component	? Reinforcement Plate		?
? (Even If Air	? * Seat Belts & Mounting Points		?
? Bag Did Not	? * Knee Bolster		?
? Deploy)	? * Sensors In Area Of Accident Damage		?
?	? * SRS Coil Assembly		?
AAA?			
? Comments	? * Any sensor which the Diagnostic Energy		?
?	? Reserve Module (DERM) indicates as bad must		?
?	? be replaced.		?
?	? * If any components are damaged or bent, they		?
?	? must be replaced.		?
?	? * SRS wiring can be repaired following		?
?	? manufacturer's instructions.		?
AAU			

INSPECTION PROCEDURES TABLE - ISUZU-2

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Seat Belt Tensioners (If Equipped)		?
?	? * SRS Control Unit		?
AAA?			
? Inspect & If	? * Cable Reel		?
? Damaged, Replace	? * Dash Sensors (1991-94)		?
? Component	? * Seat Belts		?
? (Even If Air	? * SRS Control Unit		?
? Bag Did Not	? * Wiring Harness		?
? Deploy)	?		?
AAA?			
? Comments	? * If any components are damaged or bent, they		?
?	? must be replaced.?		?

PASSIV
?

[illegible]

```

? Replace After      ? * Air Bag Module(s)                ?
? Deployment        ?                                     ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If      ? * Air Bag Diagnosis Control Unit            ?
? Damaged, Replace ? * Clockspring                      ?
? Component        ? * Impact Sensors Sensor Mountings (1) ?
? (Even If Air     ? * Steering Column                                ?
? Bag Did Not      ? * Steering Wheel                                  ?
? Deploy)         ? * Wiring Harness                          ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments          ? * After repairs a completed, ensure Warning      ?
?                  ?   Light is functioning properly.    ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?(1) - 1995 1/2 Sephia only.                               ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

LEXUS (1990-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - LEXUS (1990-98)

AAA			
Model	Year	(1) Location	Inspection Table
ES250	1990-91	DS	LEXUS-6
ES300	1998	D/P, SI	LEXUS-3
	1997	D/P	LEXUS-1
	1994-96	D/P	LEXUS-4
	1992-93	DS	LEXUS-5
GS300	1998	D/P, SI	LEXUS-3
	1993-97	D/P	LEXUS-4
GS400	1998	D/P, SI	LEXUS-3
LS400	1997-98	D/P, SI	LEXUS-3
	1995-96	D/P	LEXUS-1
	1993-94	D/P	LEXUS-4
	1990-92	DS	LEXUS-6
LX450	1996-97	D/P	LEXUS-1
LX470	1998	D/P	LEXUS-2
SC300	1996-98	D/P	LEXUS-1
	1993-95	D/P	LEXUS-4
	1992	DS	LEXUS-5
SC400	1996-98	D/P	LEXUS-1
	1993-95	D/P	LEXUS-4
	1992	DS	LEXUS-5

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

PASSIV

AA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - LEXUS-1

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Air Bag Sensor Assembly		?
?	? * Front Seat Belt Pretensioners (1)		?
AAA?			
? Inspect & If	? * Glove Compartment Door (2)		?
? Damaged, Replace	? * Instrument Panel		?
? Component	? * Instrument Panel Reinforcement		?
? (Even If Air	? * Spiral Cable		?
? Bag Did Not	? * Steering Wheel		?
? Deploy)	? * Wiring Harness & Connectors		?
AAA?			
? Comments	? * If any components are damaged or bent, they	?	
?	? must be replaced.		?
AAA?			
?(1) - 1995 LS400 only.			?
?(2) - 1997 ES300, 1996 LS400 and 1996-97 LX450 only.			?
AAAU			

INSPECTION PROCEDURES TABLE - LEXUS-2

UAAA?			
? Action	?	Component or System	?
AAA?			
? Replace After	? * Air Bag Module(s)		?
? Deployment	? * Air Bag Sensor Assembly		?
?	? * Front Air Bag Sensors		?
?	? * Seat Belt Pretensioner		?
AAA?			
? Inspect & If	? * Instrument Panel		?
? Damaged, Replace	? * Instrument Panel Reinforcement		?
? Component	? * Seat Belt Pretensioner		?
? (Even If Air	? * Spiral Cable Steering Wheel		?
? Bag Did Not	? * Wiring Harness & Connectors		?
? Deploy)	?		?
AAA?			
? Comments	? * If any components are damaged or bent, they	?	
?	? must be replaced.		?
?	? * DO NOT attempt wiring harness repairs.		?
?	? Replace entire wiring harness.		?
AAAU			

INSPECTION PROCEDURES TABLE - LEXUS-3

UAAA?			
? Action	?	Component or System	?
AA?			
? Replace After	? *	Air Bag Module(s)	?
? Deployment	? *	Air Bag Sensor Assembly	?
?	? *	Seat Belt Pretensioner (1)	?
?	? *	Side Air Bag Modules	?
?	? *	Side Air Bag Sensor Assembly	?
AA?			
? Inspect & If	? *	Glove Compartment Door (2)	?
? Damaged, Replace	? *	Instrument Panel Instrument Panel	?
? Component	?	Reinforcement	?
? (Even If Air	? *	Seat Belt Pretensioner (1)	?
? Bag Did Not	? *	Spiral Cable	?
? Deploy)	? *	Steering Wheel	?
?	? *	Wiring Harness & Connectors	?
AA?			
? Comments	? *	If any components are damaged or bent, they	?
?	?	must be replaced.	?
?	? *	DO NOT attempt wiring harness repairs.	?
?	?	Replace entire wiring harness.	?
AA?			
?(1) - Except 1997 LS400.			?
?(2) - 1997 LS400 only.			?
AAAU			

INSPECTION PROCEDURES TABLE - LEXUS-4

UAA?			
? Action	?	Component or System	?
AA?			
? Replace After	? *	Air Bag Module(s)	?
? Deployment	? *	Center Air Bag Sensor Assembly	?
?	? *	Front Air Bag Sensors	?
?	? *	Front Seat Belt Tensioners (1)	?
AA?			
? Inspect & If	? *	Glove Compartment Door (2)	?
? Damaged, Replace	? *	Instrument Panel	?
? Component	? *	Instrument Panel Reinforcement	?
? (Even If Air	? *	Spiral Cable	?
? Bag Did Not	? *	Steering Wheel	?
? Deploy)	? *	Wiring Harness & Connectors	?
AA?			
? Comments	? *	If any components are damaged or bent, they	?
?	?	must be replaced.	?
?	? *	Wiring for Front Air Bag Sensors can be	?
?	?	repaired following manufacturer's	?

MAZDA (1990-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - MAZDA (1990-98)

AAA

Model	Year	(1) Location	Inspection Table
Miata	1995-97	D/P	MAZDA-1
	1994	D/P	MAZDA-2
	1990-93	DS	MAZDA-2
Millenia	1995-98	D/P	MAZDA-1
MPV	1996-98	D/P	MAZDA-1
	1995	DS	MAZDA-1
	1994	DS	MAZDA-2
MX-3	1994-95	D/P	MAZDA-2
MX-6	1995-98	D/P	MAZDA-1
	1994	D/P	MAZDA-2
	1993	DS	MAZDA-2
Pickup	1996-98	D/P	MAZDA-2
	1995-96	DS	MAZDA-2
Protege	1995-98	D/P	MAZDA-1
RX7	1994-95	D/P	MAZDA-2
	1990-93	DS	MAZDA-2
626	1995-98	D/P	MAZDA-1
	1994	D/P	MAZDA-2
	1993	DS	MAZDA-2
929	1992-95	D/P	MAZDA-2

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

AAA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - MAZDA-1

UAAA?

?	Action	?	Component or System	?
?	Replace After	?	* Air Bag Module(s)	?
?	Deployment	?	* Air Bag Sensor Unit	?
?	Inspect & If	?	* Clockspring	?
?	Damaged, Replace	?	* Impact Sensors & Sensors Mountings	?
?	Component	?	* Steering Column	?
?	(Even If Air	?	* Steering Wheel	?
?	Bag Did Not	?	* Wiring Harness	?

PASSIVE RESTRAINT SYSTEM INSPECTION Article Text (p. 15)1993 Honda PreludeFor Cadi Centre Nsk

```

? Deploy)                ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments                ? * DO NOT attempt wiring harness repairs.    ?
?                          ? Replace entire wiring harness.              ?
?                          ? * Impact sensors must always be installed with?
?                          ? arrow on sensor facing front of vehicle.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

INSPECTION PROCEDURES TABLE - MAZDA-2

```

UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Action                  ? Component or System              ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After           ? * Air Bag Module(s)             ?
? Deployment              ? * Air Bag Diagnosis Control Unit ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If            ? * Clockspring                  ?
? Damaged, Replace       ? * Impact Sensors & Sensors Mountings ?
? Component              ? * Steering Column Steering Wheel Wiring Harness ?
? (Even If Air           ?                                  ?
? Bag Did Not            ?                                  ?
? Deploy)                ?                                  ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments                ? * DO NOT attempt wiring harness repairs.    ?
?                          ? Replace entire wiring harness.              ?
?                          ? * Impact sensors must always be installed with?
?                          ? arrow on sensor facing front of vehicle.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

MAZDA (1990-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - MITSUBISHI (1990-98)

```

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Model          Year          (1) Location          Inspection Table

Diamante      .....  1997-98  .....  D/P  .....  MITSUBISHI-1
               .....  1994-96  .....  D/P  .....  MITSUBISHI-2
               .....  1992-93  .....  DS   .....  MITSUBISHI-2
Eclipse       .....  1996-98  .....  D/P  .....  MITSUBISHI-1
               .....  1995    .....  D/P  .....  MITSUBISHI-3
Expo          .....  1994-95  .....  DS   .....  MITSUBISHI-1
Galant        .....  1997-98  .....  D/P  .....  MITSUBISHI-1
               .....  1994-96  .....  D/P  .....  MITSUBISHI-2
Mirage        .....  1997-98  .....  D/P  .....  MITSUBISHI-1
               .....  1995-96  .....  D/P  .....  MITSUBISHI-4
               .....  1994    .....  DS   .....  MITSUBISHI-4

```


Montero	1996-98	D/P	MITSUBISHI-2
		1994-95	DS	MITSUBISHI-2
Montero						
Sport	1997-98	D/P	MITSUBISHI-2
Sigma	1990	DS	MITSUBISHI-3
3000GT	1997-98	D/P	MITSUBISHI-1
		1994-96	D/P	MITSUBISHI-2
		1991-93	DS	MITSUBISHI-2

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

AA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - MITSUBISHI-1

UAAA?			
?	Action	?	Component or System
AAA?			
?	Replace After	?	* Air Bag Module(s)
?	Deployment	?	* SRS Control Unit
AAA?			
?	Inspect & If	?	* Clockspring
?	Damaged, Replace	?	* Steering Column & Intermediate Joint
?	Component	?	* Steering Wheel
?	(Even If Air	?	* Wiring Harness
?	Bag Did Not	?	
?	Deploy)	?	
AAA?			
?	Comments	?	* If any components are damaged or bent, they
?		?	must be replaced.
AAU			

INSPECTION PROCEDURES TABLE - MITSUBISHI-2

UAAA?			
?	Action	?	Component or System
AAA?			
?	Replace After	?	* Air BagModule(s)
?	Deployment	?	* Front Impact Sensors
?		?	* SRS Control Unit
AAA?			
?	Inspect & If	?	* Clockspring
?	Damaged, Replace	?	* Steering Column & Intermediate Joint
?	Component	?	* Steering Wheel
?	(Even If Air	?	* Wiring Harness
?	Bag Did Not	?	
?	Deploy)	?	
AAA?			

PASSIV

? Comments ? * If any components are damaged or bent, they ?
 ? ? must be replaced. ?

AAU

INSPECTION PROCEDURES TABLE - MITSUBISHI-3

UAA?

?	Action	?	Component or System	?
---	--------	---	---------------------	---

AA?

?	Replace After	?	* Air Bag Module(s)	?
---	---------------	---	---------------------	---

?	Deployment	?	* Clockspring	?
---	------------	---	---------------	---

?		?	* Front Impact Sensors	?
---	--	---	------------------------	---

?		?	* SRS Control Unit	?
---	--	---	--------------------	---

?		?	* Steering Column & Intermediate Joint	?
---	--	---	--	---

?		?	* Steering Wheel	?
---	--	---	------------------	---

AA?

?	Inspect & If	?	* Wiring Harness	?
---	--------------	---	------------------	---

?	Damaged, Replace	?		?
---	------------------	---	--	---

?	Component	?		?
---	-----------	---	--	---

?	(Even If Air	?		?
---	--------------	---	--	---

?	Bag Did Not	?		?
---	-------------	---	--	---

?	Deploy)	?		?
---	---------	---	--	---

AA?

? Comments ? * If any components are damaged or bent, they ?

? ? must be replaced. ?

AAU

INSPECTION PROCEDURES TABLE - MITSUBISHI-4

UAA?

?	Action	?	Component or System	?
---	--------	---	---------------------	---

AA?

?	Replace After	?	* Air Bag Module(s)	?
---	---------------	---	---------------------	---

?	Deployment	?	* Air Bag Control Unit	?
---	------------	---	------------------------	---

AA?

?	Inspect & If	?	* Clockspring	?
---	--------------	---	---------------	---

?	Damaged, Replace	?	* Steering Column	?
---	------------------	---	-------------------	---

?	Component	?	* Steering Wheel	?
---	-----------	---	------------------	---

?	(Even If Air	?	* Wiring Harness	?
---	--------------	---	------------------	---

?	Bag Did Not	?		?
---	-------------	---	--	---

?	Deploy)	?		?
---	---------	---	--	---

AA?

? Comments ? * If any components are damaged or bent, they ?

? ? must be replaced. ?

AAU

NISSAN (1989-98)

AIR BAG APPLICATION

PASSIV

[illegible]

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

[illegible]

INSPECTION PROCEDURES TABLE - NISSAN-1

[illegible]

? Inspect & If	? * Crash Zone Sensor (1)	?
? Damaged, Replace	? * Instrument Panel	?
? Component	? * Passenger Deactivation Switch	?
? (Even If Air	? * Spiral Cable	?
? Bag Did Not	? * Steering Wheel	?
? Deploy)	? * Wiring Harnesses	?
AAA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * DO NOT attempt SRS wiring harness repairs.	?
AAA?		
?(1) - 4WD only.		
AAAU		

INSPECTION PROCEDURES TABLE - NISSAN-2

UAAA?		
? Action	? Component or System	?
AAA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Control Unit, Diagnosis	?
?	? * Side Air Bag Module (1)	?
?	? * Satellite Sensor (1)	?
AAA?		
? Inspect & If	? * Center Pillar Inner (1)	?
? Damaged, Replace	? * Instrument Panel	?
? Component	? * Seat (1)	?
? (Even If Air	? * Spiral Cable	?
? Bag Did Not	? * Steering Wheel	?
? Deploy)	? * Wiring Harnesses	?
AAA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * DO NOT attempt SRS wiring harness repairs.	?
AAA?		
?(1) - On side of impact.		
AAAU		

INSPECTION PROCEDURES TABLE - NISSAN-3

UAAA?		
? Action	? Component or System	?
AAA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Control Unit, Diagnosis	?
AAA?		
? Inspect & If	? * Instrument Panel	?
? Damaged, Replace	? * Spiral Cable	?
? Component	? * Steering Wheel	?
? (Even If Air	? * Wiring Harnesses	?

[illegible]

INSPECTION PROCEDURES TABLE - NISSAN-6

[illegible]

SUBARU (1992-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - SUBARU (1992-98)

Model				Year	(1) Location
Forester	1998	D/P	
Impreza	1994-98	D/P	
		1993	DS	
Legacy	1995-98	D/P	
		1992-94	DS	
SVX	1994-97	D/P	
		1992-93	DS	

(1) - Location Definitions: D/P = Driver's & Passenger's Side, DS = Driver's Side Only, SI = Side Impact.

[illegible]

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - SUBARU (1992-98)

PASSIV

```

UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?      Action      ?      Component or System      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After    ? * Air Bag Module(s)      ?
? Deployment      ? * Air Bag Control Module      ?
?                  ? * Front Impact Sensors (1)      ?
?                  ? * Side Air Bag Sensors (2)      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If    ? * Air Bag Control Module      ?
? Damaged, Replace ? * Combination Switch & Clockspring      ?
? Component      ? * Front Impact Sensors      ?
? (Even If Air    ?      ?      ?      ?
? Bag Did Not     ?      ?      ?      ?
? Deploy)        ?      ?      ?      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments        ? * DO NOT attempt SRS wiring repairs.      ?
?                  ? * If any components are damaged or bent, they ?
?                  ? must be replaced.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?(1) - If Equipped.      ?
?(2) - 1998 Legacy, on side of deployment.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

SUZUKI (1995-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - SUZUKI (1995-98)

```

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Model      Year      (1) Location
Esteem     1995-98     D/P
Sidekick   1996-98     D/P
Swift      1995-98     D/P
X90        1996-98     D/P

```

(1) - Location Definitions: D/P = Driver's & Passenger's
Side, DS = Driver's Side Only, SI = Side Impact.

```

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

```

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - SUZUKI (1995-98)

```

UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?      Action      ?      Component or System      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After    ? * Air BagModule(s)      PASSIVE RESTRAINT SYSTEM INSPE(

```

```

? Deployment      ? * Sensing & Diagnostic Module (SDM)      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If    ? * Air Bag Warning Light      ?
? Damaged, Replace ? * Combination Switch Assembly ?
? Component      ? * Contact Coil              ?
? (Even If Air   ? * Forward Discriminating Sensor (1) ?
? Bag Did Not    ? * Instrument Panel Reinforcement ?
? Deploy)        ? * Knee Bolsters             ?
?                ? * Seat Belts & Mounting Points ?
?                ? * SDM Bracket               ?
?                ? * Steering Column Bracket   ?
?                ? * Steering Column & Shaft Joints ?
?                ? * Steering Wheel           ?
?                ? * Wiring Harness          ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments        ? * If any components are damaged or bent, they ?
?                ? must be replaced.                ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?(1) - Swift Only      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

TOYOTA (1990-98)

AIR BAG APPLICATION

AIR BAG APPLICATION TABLE - TOYOTA (1990-98)

AA

Model	Year	(1) Location	Inspection Table
Avalon	1998 D/P, SI	TOYOTA-1
	1996-97 D/P	TOYOTA-3
	1995 D/P	TOYOTA-4
Camry	1998 D/P, SI	TOYOTA-1
	1997 D/P	TOYOTA-3
	1996 D/P	TOYOTA-5
	1994-95 D/P	TOYOTA-6
Celica	1992-93 DS	TOYOTA-9
	1998 D/P	TOYOTA-2
	1996-97 D/P	TOYOTA-5
	1994-95 D/P	TOYOTA-7
	1990-93 DS	TOYOTA-10
Corolla	1998 D/P, SI	TOYOTA-PASSIV

	1996-97	D/P	TOYOTA-3
	1994-95	D/P	TOYOTA-6
	1993	DS	TOYOTA-9
Land Cruiser	1998	D/P	TOYOTA-2
	1995-97	D/P	TOYOTA-4
MR2	1994-95	D/P	TOYOTA-5
	1991-93	DS	TOYOTA-10
Paseo	1996-97	D/P	TOYOTA-3
	1993-95	DS	TOYOTA-9
Previa	1996-97	D/P	TOYOTA-3
	1994-95	D/P	TOYOTA-6
	1992-93	DS	TOYOTA-9
RAV4	1996-98	D/P	TOYOTA-3
Sienna	1998	D/P	TOYOTA-1
Supra	1997-98	D/P	TOYOTA-3
	1993-96	D/P	TOYOTA-5
	1990-92	DS	TOYOTA-10
Tercel	1998	D/P	TOYOTA-2
	1996-97	D/P	TOYOTA-3
	1995	D/P	TOYOTA-8
	1993-94	DS	TOYOTA-9
Tacoma	1998	D/P	TOYOTA-3
	1996-97	DS	TOYOTA-3
T100	1994-98	DS	TOYOTA-9
4Runner	1996-98	D/P	TOYOTA-4

(1) - Location Definitions: D/P = Driver's & Passenger's Side,
DS = Driver's Side Only, SI = Side Impact.

AA

INSPECTION PROCEDURES

INSPECTION PROCEDURES TABLE - TOYOTA-1

UAAA?

?	Action	?	Component or System	?
AAAAA				AAAAA
?	Replace After	?	* Air Bag Module(s)	?
?	Deployment	?	* Air Bag Sensor Assembly	?
?		?	* Front Air Bag Sensors (1)	?
?		?	* Seat Belt Pretensioner (2)	?
?		?	* Seatback Assembly (2) (3)	?
?		?	* Side Air Bag Modules (If Equipped) (2)	?
?		?	* Side Air Bag Sensor Assembly	?
?		?	(If equipped) (1)	?

AAA?

?	Inspect & If	?	* Instrument Panel	?
?	Damaged, Replace	?	* Instrument Panel Reinforcement	? PASSIV
?	Component	?	* Seatback Assembly (2)	?

? (Even If Air	? * Seat Belt Pretensioner (2)	?
? Bag Did Not	? * Spiral Cable	?
? Deploy)	? * Steering Wheel	?
?	? * Wiring Harness & Connectors	?
AA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * DO NOT attempt wiring harness repairs.	?
?	? Replace entire wiring harness.	?
AA?		
?(1) - Corolla and Sienna only. Replace both sensors.		?
?(2) - On side of impact.		?
?(3) - Avalon only.		?
AAU		

INSPECTION PROCEDURES TABLE - TOYOTA-2

UAA?		
? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Air Bag Sensor Assembly	?
?	? * Front Air Bag Sensors	?
?	? * Seat Belt Pretensioner (1)	?
AA?		
? Inspect & If	? * Instrument Panel	?
? Damaged, Replace	? * Instrument Panel Reinforcement	?
? Component	? * Seat Belt Pretensioner (1)	?
? (Even If Air	? * Spiral Cable	?
? Bag Did Not	? * Steering Wheel	?
? Deploy)	? * Wiring Harness & Connectors	?
AA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * DO NOT attempt wiring harness repairs.	?
?	? Replace entire wiring harness.	?
AA?		
?(1) - Land Cruiser and Tercel only.		?
AAU		

INSPECTION PROCEDURES TABLE - TOYOTA-3

UAA?		
? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Air Bag Sensor Assembly	?
?	? * Front Air Bag Sensor (1)	?
?	? * Instrument Panel (2)	?
?	? * Instrument Panel Reinforcement (2)	?PASSIV

?	? * Spiral Cable (3)	?
?	? * Steering Wheel (3)	?
AAA?		
? Inspect & If	? * Spiral Cable (4)	?
? Damaged, Replace	? * Steering Wheel (4)	?
? Component	? * Wiring Harness & Connectors	?
? (Even If Air	?	?
? Bag Did Not	?	?
? Deploy)	?	?
AAA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
AAA?		
?(1) - 1998 RAV4 only.		?
?(2) - Except 1996-97 Tacoma and 1998 Supra.		?
?(3) - Except 1998 Tacoma.		?
?(4) - 1998 Tacoma.		?
AAAU		

INSPECTION PROCEDURES TABLE - TOYOTA-4

UAAA?		
? Action	? Component or System	?
AAA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Air Bag Sensor Assembly	?
?	? * Glove Compartment Door	?
?	? * Instrument Panel	?
?	? * Instrument Panel Reinforcement	?
?	? * Spiral Cable	?
?	? * Steering Wheel	?
AAA?		
? Inspect & If	? * Wiring Harness & Connectors	?
? Damaged, Replace	?	?
? Component	?	?
? (Even If Air	?	?
? Bag Did Not	?	?
? Deploy)	?	?
AAA?		
? Comments	? * If any components are damaged or bent,	?
?	? they must be replaced.	?
AAAU		

INSPECTION PROCEDURES TABLE - TOYOTA-5

UAAA?		
? Action	? Component or System	?
AAA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Center Air Bag Sensor Assembly	?PASSIV

?	? * Front Air Bag Sensors	?
?	? * Instrument Panel	?
?	? * Instrument Panel Reinforcement	?
?	? * Spiral Cable	?
?	? * Steering Wheel	?
AA?		
? Inspect & If	? * Wiring Harness & Connectors	?
? Damaged, Replace	?	?
? Component	?	?
? (Even If Air	?	?
? Bag Did Not	?	?
? Deploy)	?	?
AA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * Wiring for Front Air Bag Sensors can be	?
?	? repaired following manufacturer's	?
?	? instructions.	?
AAU		

INSPECTION PROCEDURES TABLE - TOYOTA-6

UAA?		
? Action	? Component or System	?
AA?		
? Replace After	? * Air Bag Module(s)	?
? Deployment	? * Center Air Bag Sensor Assembly	?
?	? * Front Air Bag Sensors	?
?	? * Glove Compartment	?
?	? * Glove Compartment Door	?
?	? * Instrument Panel	?
?	? * Instrument Panel Reinforcement	?
?	? * Spiral Cable	?
?	? * Steering Wheel	?
AA?		
? Inspect & If	? * Wiring Harness & Connectors	?
? Damaged, Replace	?	?
? Component	?	?
? (Even If Air	?	?
? Bag Did Not	?	?
? Deploy)	?	?
AA?		
? Comments	? * If any components are damaged or bent, they	?
?	? must be replaced.	?
?	? * Wiring for Front Air Bag Sensors can be	?
?	? repaired following manufacturer's	?
?	? instructions.	?
AAU		

INSPECTION PROCEDURES TABLE - TOYOTA-7

UAAA?			
?	Action	?	Component or System
AA?			
?	Replace After	?	* Air Bag Module(s)
?	Deployment	?	* Center Air Bag Sensor Assembly
?		?	* Center Console Bracket Support
?		?	* Front Air Bag Sensors
?		?	* Instrument Panel
?		?	* Spiral Cable
?		?	* Steering Wheel
AA?			
?	Inspect & If	?	* Wiring Harness & Connectors
?	Damaged, Replace	?	
?	Component	?	
?	(Even If Air	?	
?	Bag Did Not	?	
?	Deploy)	?	
AA?			
?	Comments	?	* If any components are damaged or bent, they
?		?	must be replaced.
?		?	* Wiring for Front Air Bag Sensors can be
?		?	repaired following manufacturer's
?		?	instructions.
AAAU			

INSPECTION PROCEDURES TABLE - TOYOTA-8

UAA?			
?	Action	?	Component or System
AA?			
?	Replace After	?	* Air Bag Module(s)
?	Deployment	?	* Air Bag Sensor Assembly
?		?	* Center Console Bracket Support
?		?	* Instrument Panel Spiral Cable
?		?	* Steering Wheel
AA?			
?	Inspect & If	?	* Wiring Harness & Connectors
?	Damaged, Replace	?	
?	Component	?	
?	(Even If Air	?	
?	Bag Did Not	?	
?	Deploy)	?	
AA?			
?	Comments	?	* If any components are damaged or bent, they
?		?	must be replaced.
AAAU			

```

UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?      Action      ?      Component or System      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After    ? * Air Bag Module(s)      ?
? Deployment      ? * Center Air Bag Sensor Assembly ?
?                  ? * Front Air Bag Sensors ?
?                  ? * Spiral Cable      ?
?                  ? * Steering Wheel    ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If    ? * Wiring Harness & Connectors ?
? Damaged, Replace ?      ?      ?
? Component      ?      ?
? (Even If Air   ?      ?
? Bag Did Not    ?      ?
? Deploy)        ?      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments        ? * If any components are damaged or bent, they ?
?                  ? must be replaced.      ?
?                  ? * Wiring for Front Air Bag Sensors can be ?
?                  ? repaired following manufacturer's ?
?                  ? instructions.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

INSPECTION PROCEDURES TABLE - TOYOTA-10

```

UAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
?      Action      ?      Component or System      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Replace After    ? * Air Bag Module(s)      ?
? Deployment      ? * Front Air Bag Sensors ?
?                  ? * Spiral Cable      ?
?                  ? * Steering Wheel    ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Inspect & If    ? * Center Air Bag Sensor Assembly ?
? Damaged, Replace ? * Wiring Harness & Connectors ?
? Component      ?      ?
? (Even If Air   ?      ?
? Bag Did Not    ?      ?
? Deploy)        ?      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA?
? Comments        ? * If any components are damaged or bent, they ?
?                  ? must be replaced.      ?
?                  ? * Wiring for Front Air Bag Sensors can be ?
?                  ? repaired following manufacturer's ?
?                  ? instructions.      ?
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAU

```

END OF ARTICLE