



oval / Installation

arning

Before performing the following operation, release the fuel pressure from the fuel system to reduce the possibility of injury or fire. (Refer to page F-88.)
When removing the fuel system parts, keep sparks, cigarettes, and open flames away from the fuel.

Loosen the radiator drain plug and drain the coolant.

Remove in the order shown in the figure, referring to **Removal Note**. (Refer to page F-95.)
Install in the reverse order of removal, referring to **Installation Note**. (Refer to page F-96.)

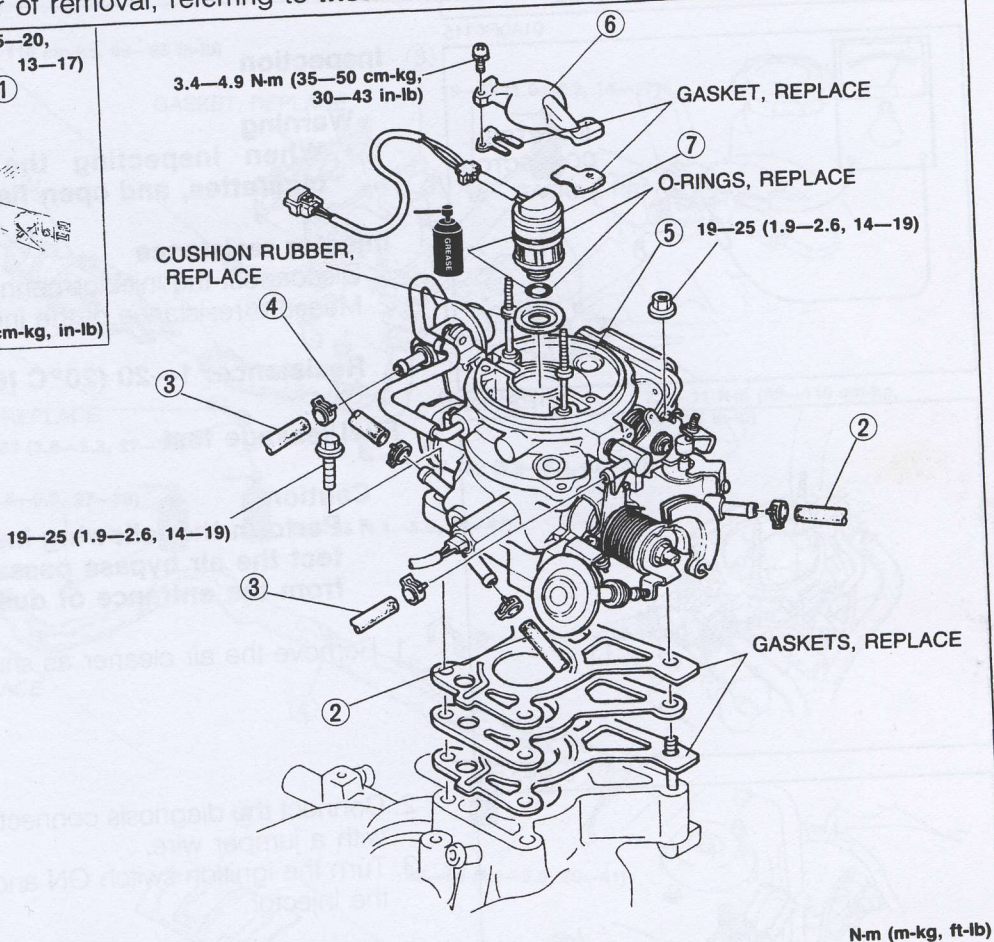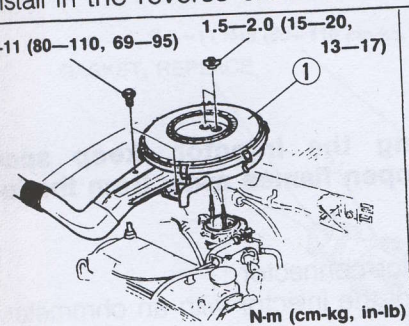


01A0FX-076

1. Air cleaner
2. Water hose
3. Fuel hose
4. Air bypass hose

5. Injection body
6. Injector cover
7. Injector

Removal Note

- When replacing the injector, push the injector nozzle out with a plastic or wood stick.

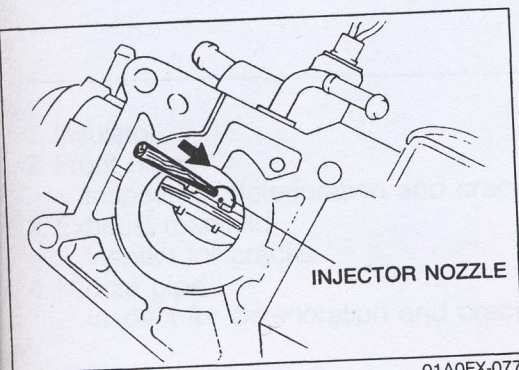

01A0FX-077