


01A0FX-065

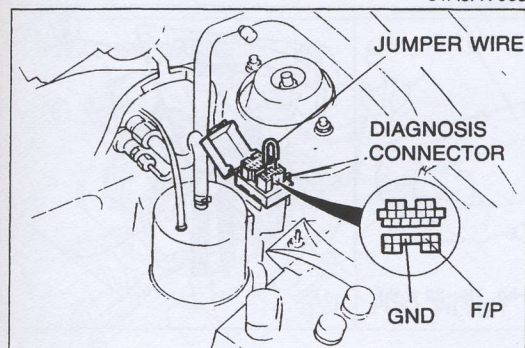

01E0F2-100

### Fuel Line Pressure Inspection

#### Warning

- Before performing the following operation, release the fuel pressure from the fuel system to reduce the possibility of injury or fire. (Refer to page F-88.)

1. Disconnect the negative battery cable.
2. Connect a fuel pressure gauge.
3. Connect the negative battery cable.
4. Connect diagnosis connector terminals **F/P** and **GND** with a jumper wire.
5. Turn the ignition switch ON.
6. Measure the fuel line pressure.

#### Fuel line pressure:

235—275 kPa (2.4—2.8 kg/cm<sup>2</sup>, 34—40 psi)