


FUEL TANK

Removal / Inspection / Installation

Warning

- Before performing the following operation, release the fuel pressure from the fuel system to reduce the possibility of injury or fire. (Refer to page F-88.)
- When removing the fuel tank, keep sparks, cigarettes, and open flames away from it.
- Before repairing the fuel tank, clean it thoroughly with steam to remove all explosive gas.

1. Remove in the order shown in the figure.
2. Visually inspect the fuel tank components and repair or replace as necessary.
3. Install in the reverse order of removal, referring to **Installation Note**.

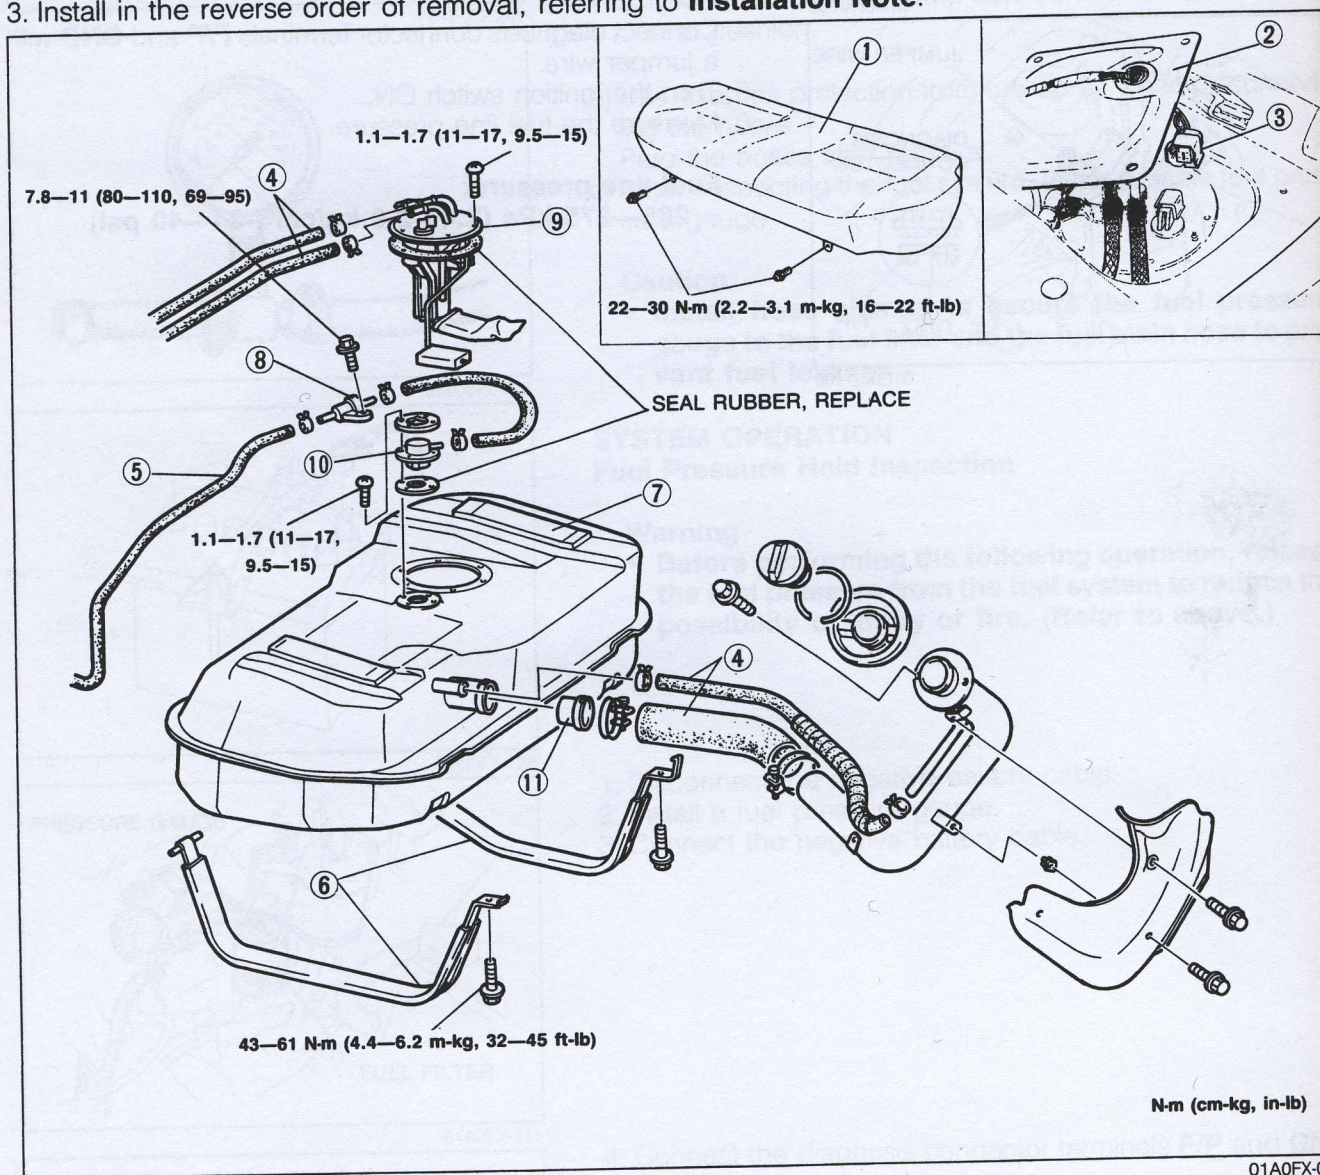

01A0FX-066

Note

- Drain the fuel from the fuel tank before removing the tank.

1. Rear seat cushion
2. Fuel pump cover
3. Fuel pump connector
4. Fuel hoses
5. Evaporative hoses
6. Fuel tank straps

7. Fuel tank
Inspect for cracks and corrosion
8. Check valve (two-way)
9. Fuel tank unit
10. Fuel vapor valve
11. Non-return valve