


01A0FX-070

FUEL FILTER Replacement Low-pressure side Refer to page F-92.

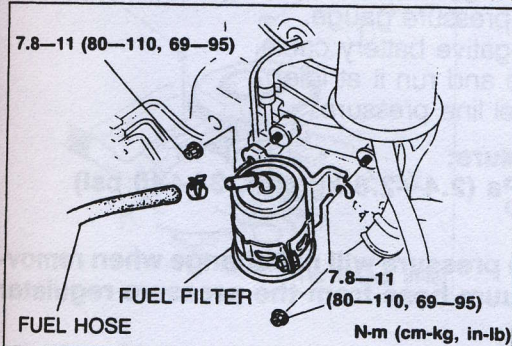

01A0FX-071


High-pressure side

The fuel filter must be replaced at the intervals outlined in the maintenance schedule.

Warning

- Before performing the following operation, release the fuel pressure from the fuel system to reduce the possibility of injury or fire. (Refer to page F-88.)
- When replacing the fuel filter, keep sparks, cigarettes and open flames away from it.


1. Disconnect the fuel hoses from the fuel filter.
2. Remove the fuel filter and bracket.
3. Install in the reverse order of removal.

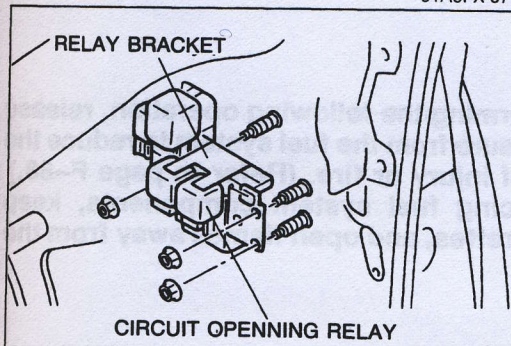

01A0FX-072

CIRCUIT OPENING RELAY Replacement

1. Disconnect the negative battery terminal.
2. Remove the ECU. (Refer to page F-112.)
3. Remove the relay bracket.
4. Remove the circuit opening relay from the relay bracket.

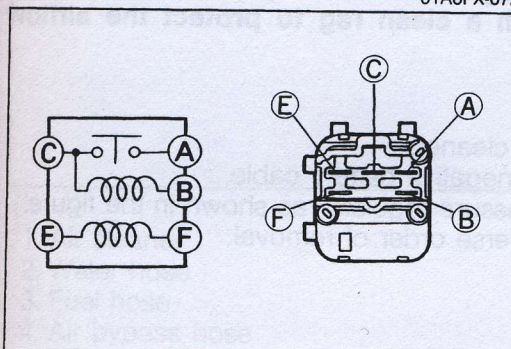

01A0FX-073

Inspection of Continuity

1. Check continuity between terminals (A) and (C) in the following condition.

Terminals	Apply 12V	Continuity (A — C)
(B) ↔ (C)	Yes	Yes
	No	No
(E) ↔ (F)	Yes	Yes
	No	No

2. Replace the relay if not as specified.