

Power Window System

GLASS/WINDOWS/MIRRORS

2. Power Window System

A: WIRING DIAGRAM

<Ref. to WI-144, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows do not operate.	<ol style="list-style-type: none">1. Fuse (SBF-4)2. Power window circuit breaker3. Power window relay4. Wiring harness5. Body integrated unit
Particular window does not operate.	<ol style="list-style-type: none">1. Power window main switch2. Power window sub-switch3. Power window motor4. Wiring harness
"Window Lock" does not operate.	Power window main switch