




## 2. PARKING BRAKE ACTUATOR

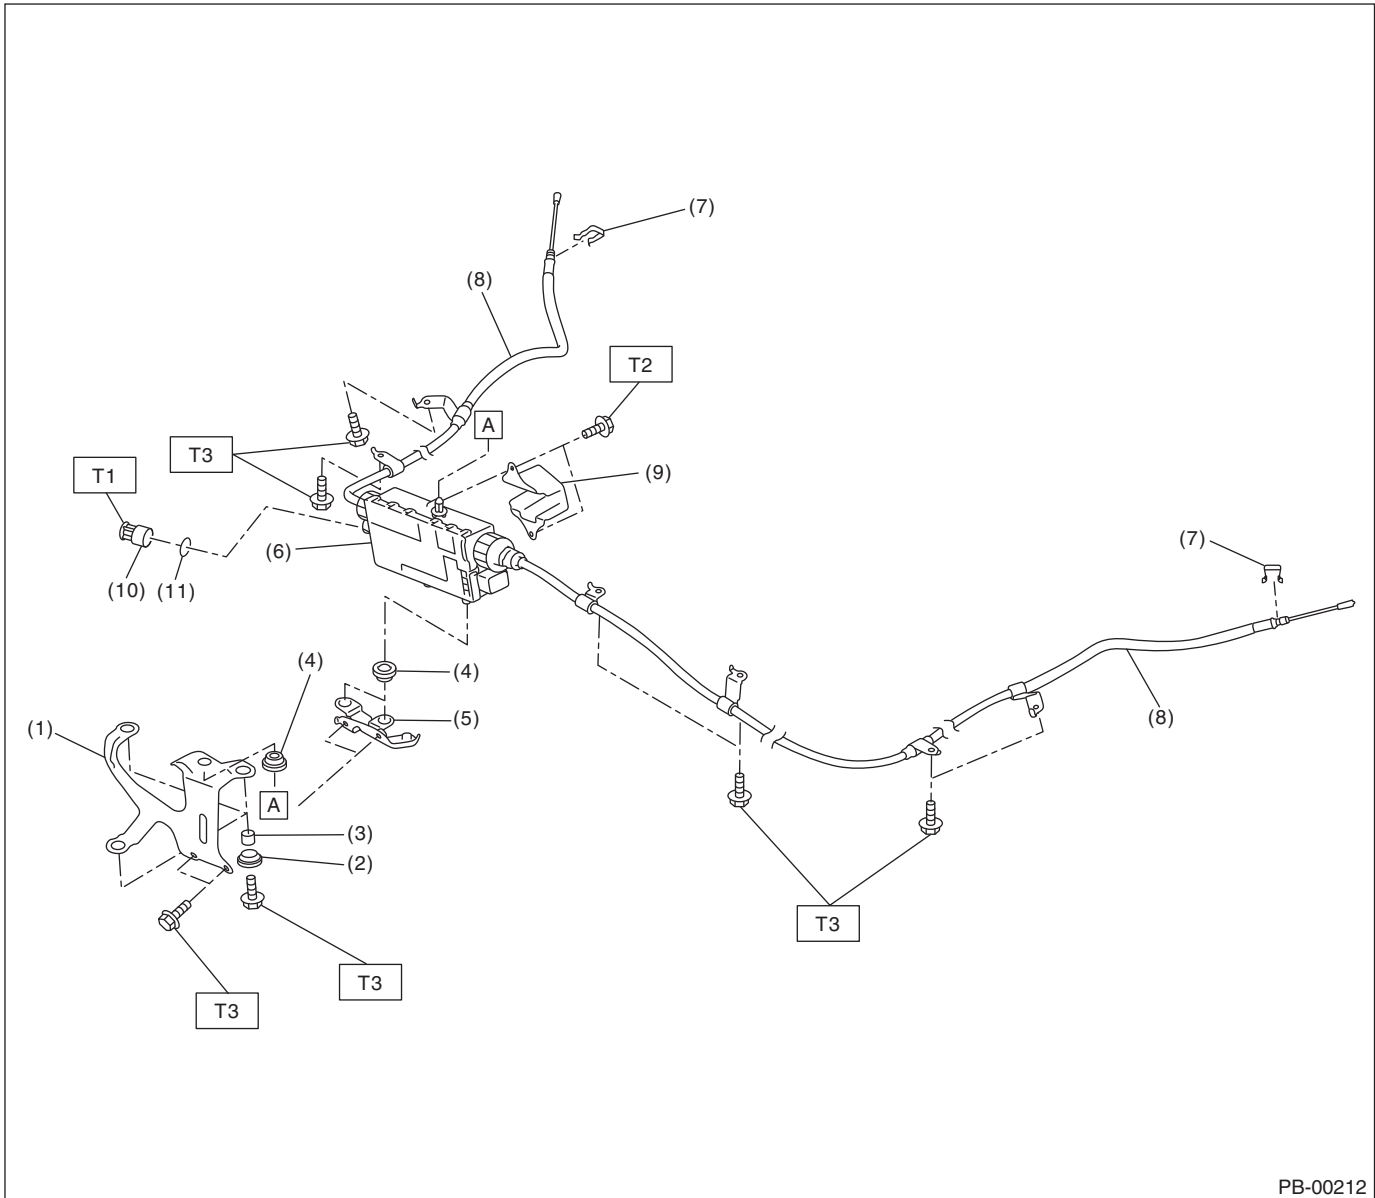

PB-00212

- |                    |                         |
|--------------------|-------------------------|
| (1) Upper bracket  | (7) Clamp               |
| (2) Bushing        | (8) Parking Brake Cable |
| (3) Spacer         | (9) Tank bracket        |
| (4) Bushing        | (10) Cap                |
| (5) Bracket        | (11) O-ring             |
| (6) Brake actuator |                         |

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 3 (0.3, 2.2)**

**T2: 7.5 (0.76, 5.5)**

**T3: 18 (1.8, 13.3)**

# General Description


## PARKING BRAKE

### C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Make sure grease does not come into contact with the parking shoes.

### D: PREPARATION TOOL

#### 1. ST

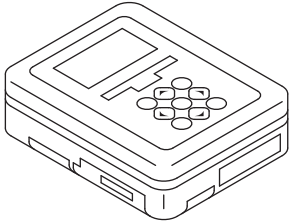ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and troubleshooting for electrical system.

#### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.