

Wheel Alignment

REAR SUSPENSION

2. Wheel Alignment

A: INSPECTION

NOTE:

Measure and adjust the front and rear wheel alignment at a time. Refer to the section "FS" for measurement and adjustment of wheel alignment. <Ref. to FS-7, INSPECTION, Wheel Alignment.>