

2. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

Refer to engine section for removal and installation.
<Ref. to FU(H6DO)-38, Engine Control Module (ECM).>