

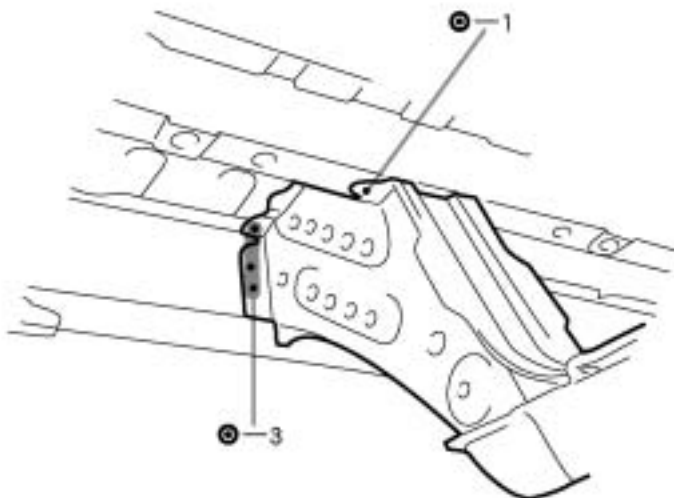
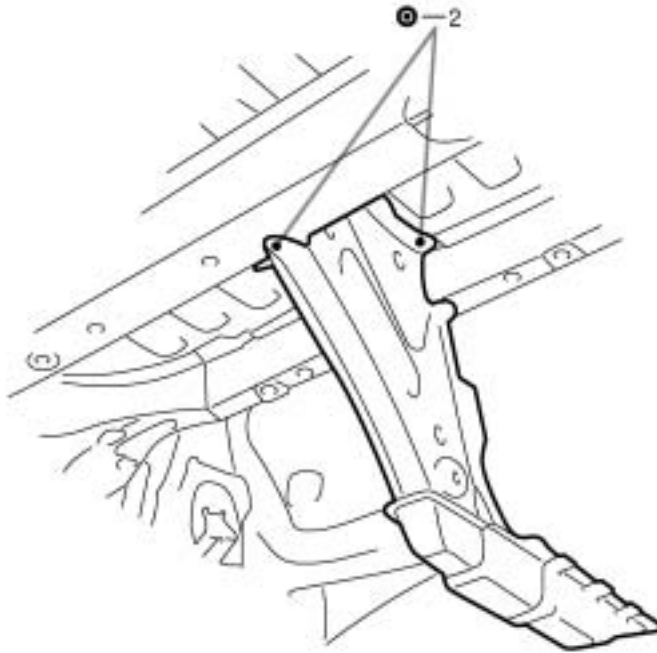


JACK UP BRACKET (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-56](#))
2. REMOVE REAR FLOOR PAN ([See page BP-58](#))
3. REMOVE JACK UP BRACKET

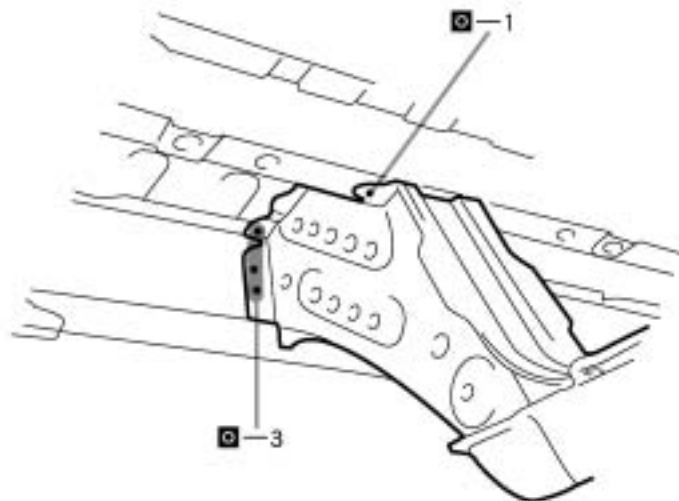

4. INSTALL JACK UP BRACKET

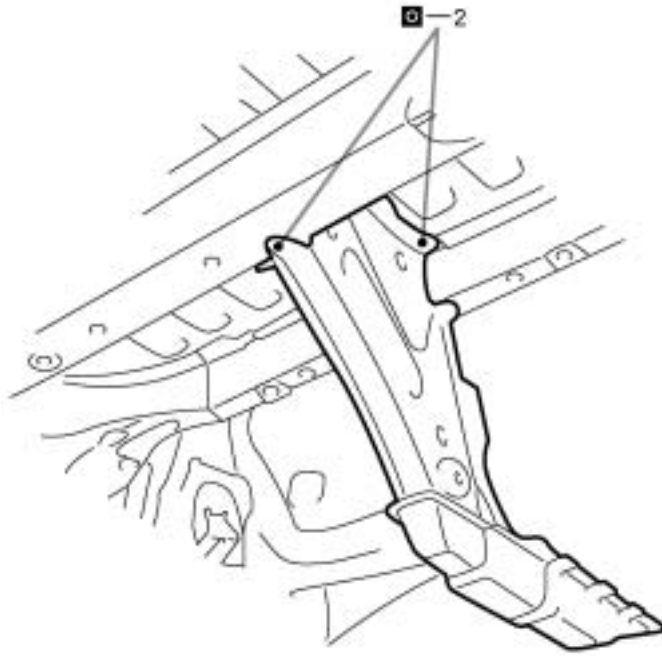

5. INSTALL REAR FLOOR PAN ([See page BP-58](#))
6. INSTALL BODY LOWER BACK PANEL ([See page BP-56](#))
7. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
8. APPLYING UNDER COATING ([See page PC-6](#))
9. MEASURING OPENING PORTION DIMENSIONS ([See page BP-94](#))
10. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.