

F RELAY LOCATIONS

② : Engine Room R/B and J/B

Front Side of Left Suspension Tower
(See Page 20)

* 1:30A HEAD LP CLN
* 2:HEAD LH UPR
* 3:15A IG2 (1AZ-FE)
30A FUEL HTR (1CD-FTV)

