


Position of Parts in Instrument Panel

[LHD]

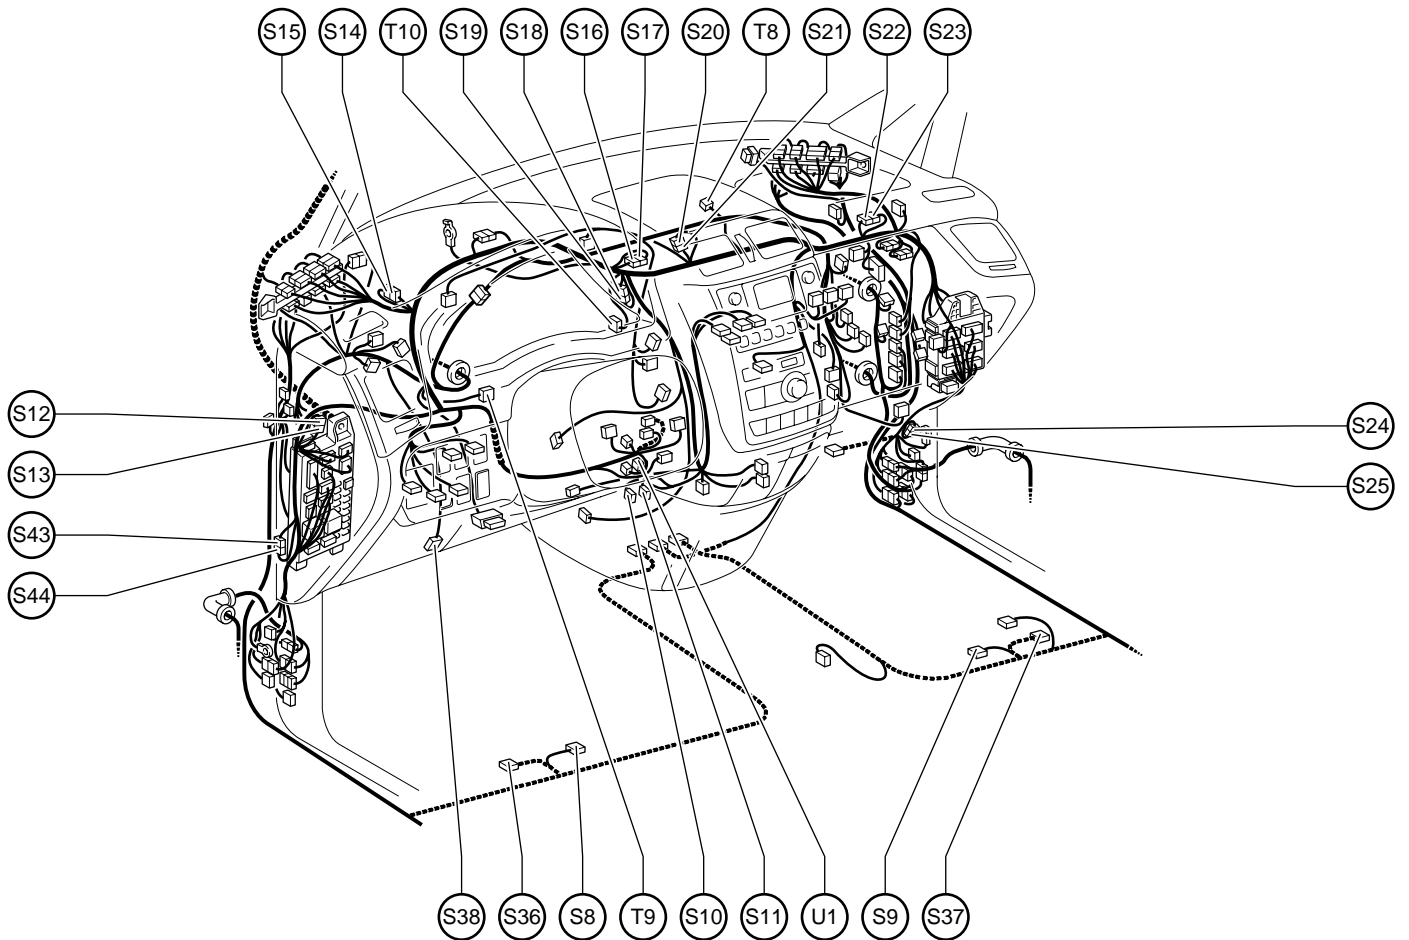

S 8 Seat Heater LH
 S 9 Seat Heater RH
 S10 Seat Heater SW LH
 S11 Seat Heater SW RH
 S12 Short Connector
 S13 Short Connector
 S14 Short Connector
 S15 Short Connector
 S16 Short Connector
 S17 Short Connector
 S18 Short Connector
 S19 Short Connector
 S20 Short Connector
 S21 Short Connector
 S22 Short Connector
 S23 Short Connector
 S24 Short Connector
 S25 Short Connector
 S36 Side Airbag Squib LH
 S37 Side Airbag Squib RH
 S38 Stop Light SW
 S43 Short Connector
 S44 Short Connector

T 8 Transponder Key Computer
 T 9 Turn Signal Flasher Relay
 T10 TVSS ECU
 U 1 Unlock Warning SW