


## G ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

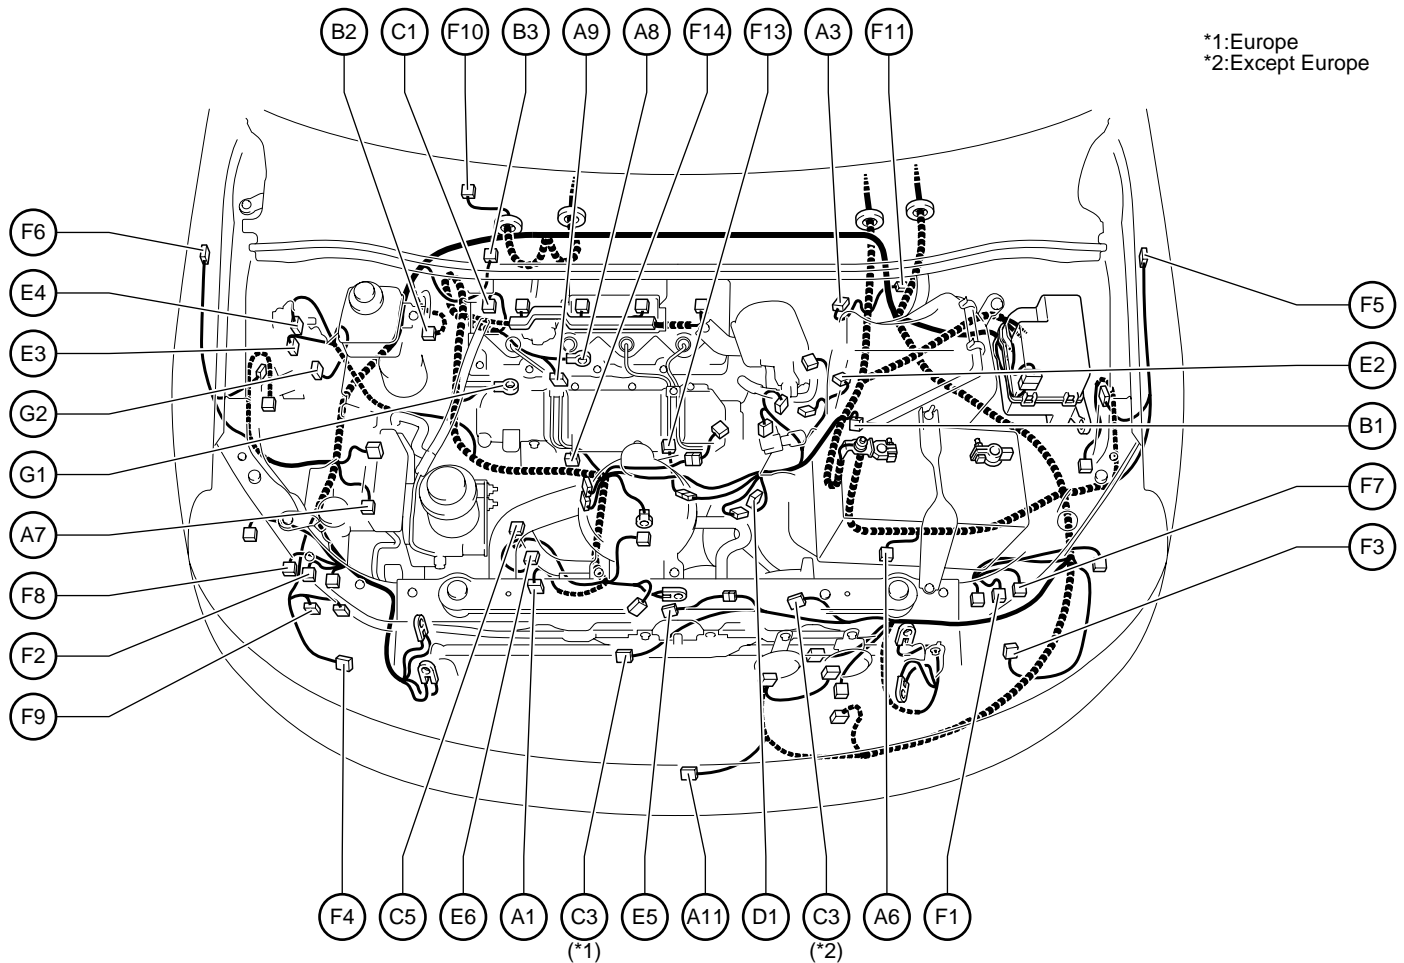

\*1:Europe  
\*2:Except Europe

- A 1 A/C Lock Sensor  
A/C Magnetic Clutch
- A 3 Air Flow Meter
- A 6 Airbag Sensor Front LH
- A 7 Airbag Sensor Front RH
- A 8 Alternator
- A 9 Alternator
- A 11 Ambient Temp. Sensor No.2

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 1 Camshaft Position Sensor
- C 3 Condenser Fan Motor
- C 5 Crankshaft Position Sensor

- D 1 Diesel Throttle Control Motor

- E 2 EGR Valve Control Motor
- E 3 Electronic Driver Unit
- E 4 Electronic Driver Unit
- E 5 Engine Hood Courtesy SW
- E 6 Engine Oil Level Sensor

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F 10 Front Wiper Motor
- F 11 Fuel Filter Warning SW
- F 13 Fuel Pressure Sensor
- F 14 Fuel Temp. Sensor

- G 1 Glow Plug
- G 2 Glow Plug Relay