


## Position of Parts in Engine Compartment

[RHD : 1CD–FTV]

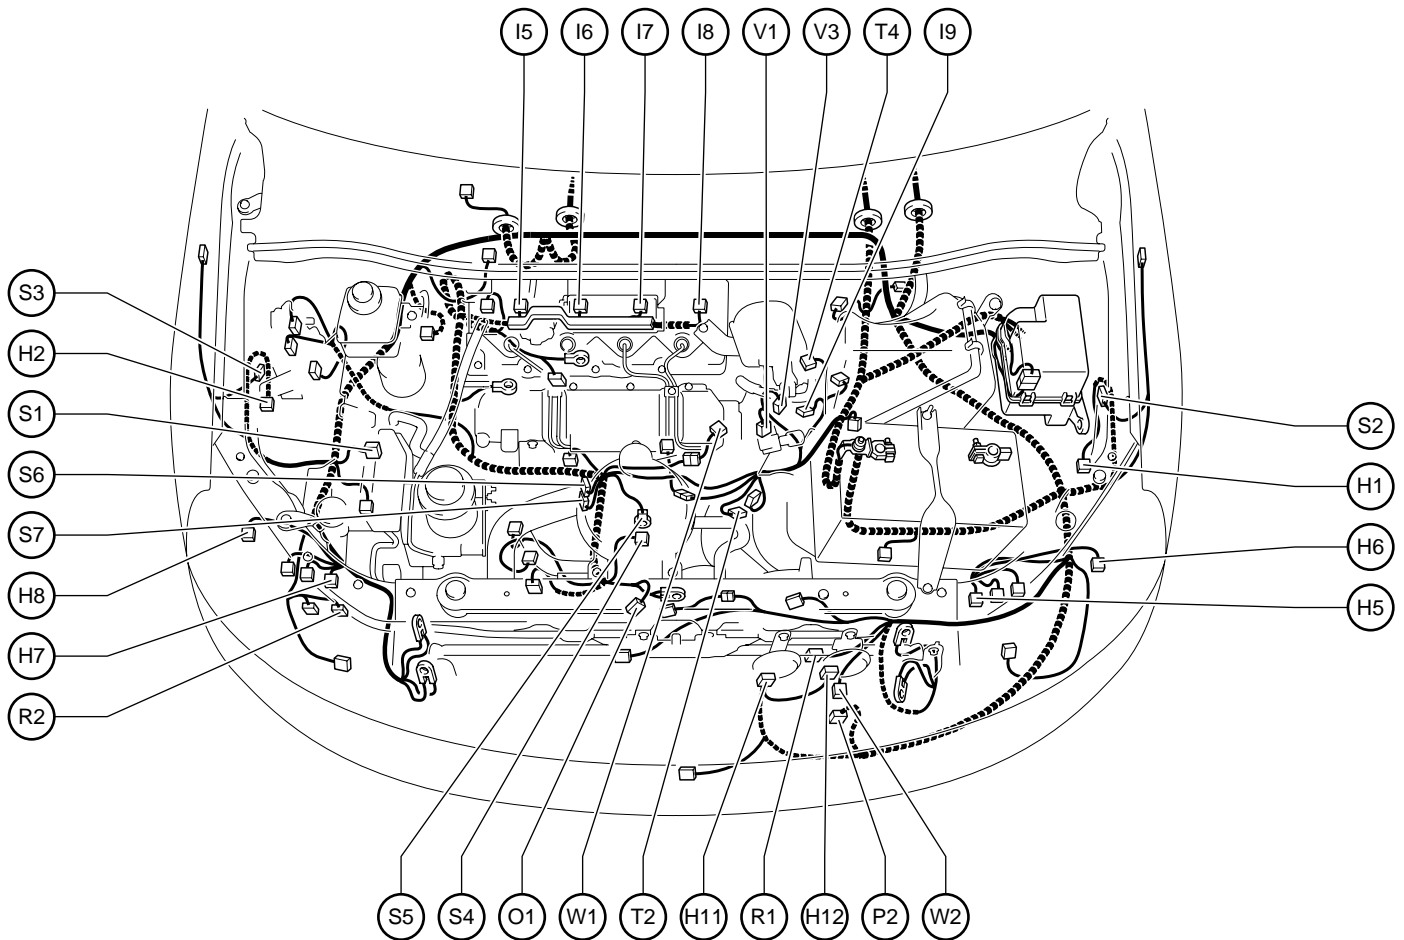

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 5 Headlight LH (High)  
 H 6 Headlight LH (Low)  
 H 7 Headlight RH (High)  
 H 8 Headlight RH (Low)  
 H11 Horn (High)  
 H12 Horn (Low)

I 5 Injector No.1  
 I 6 Injector No.2  
 I 7 Injector No.3  
 I 8 Injector No.4  
 I 9 Intake Air Temp. Sensor

O 1 Oil Pressure SW

P 2 Pressure SW

R 1 Radiator Fan Motor  
 R 2 Rear Washer Motor

S 1 Skid Control ECU with Actuator  
 S 2 Speed Sensor Front LH  
 S 3 Speed Sensor Front RH  
 S 4 Starter  
 S 5 Starter  
 S 6 Suction Control Valve No.1  
 S 7 Suction Control Valve No.2

T 2 Throttle Position SW  
 T 4 Turbo Pressure Sensor

V 1 VRV (EGR)  
 V 3 VSV (Turbo Pressure Sensor)

W 1 Water Temp. Sensor  
 W 2 Water Temp. SW