


## Position of Parts in Instrument Panel

[RHD]

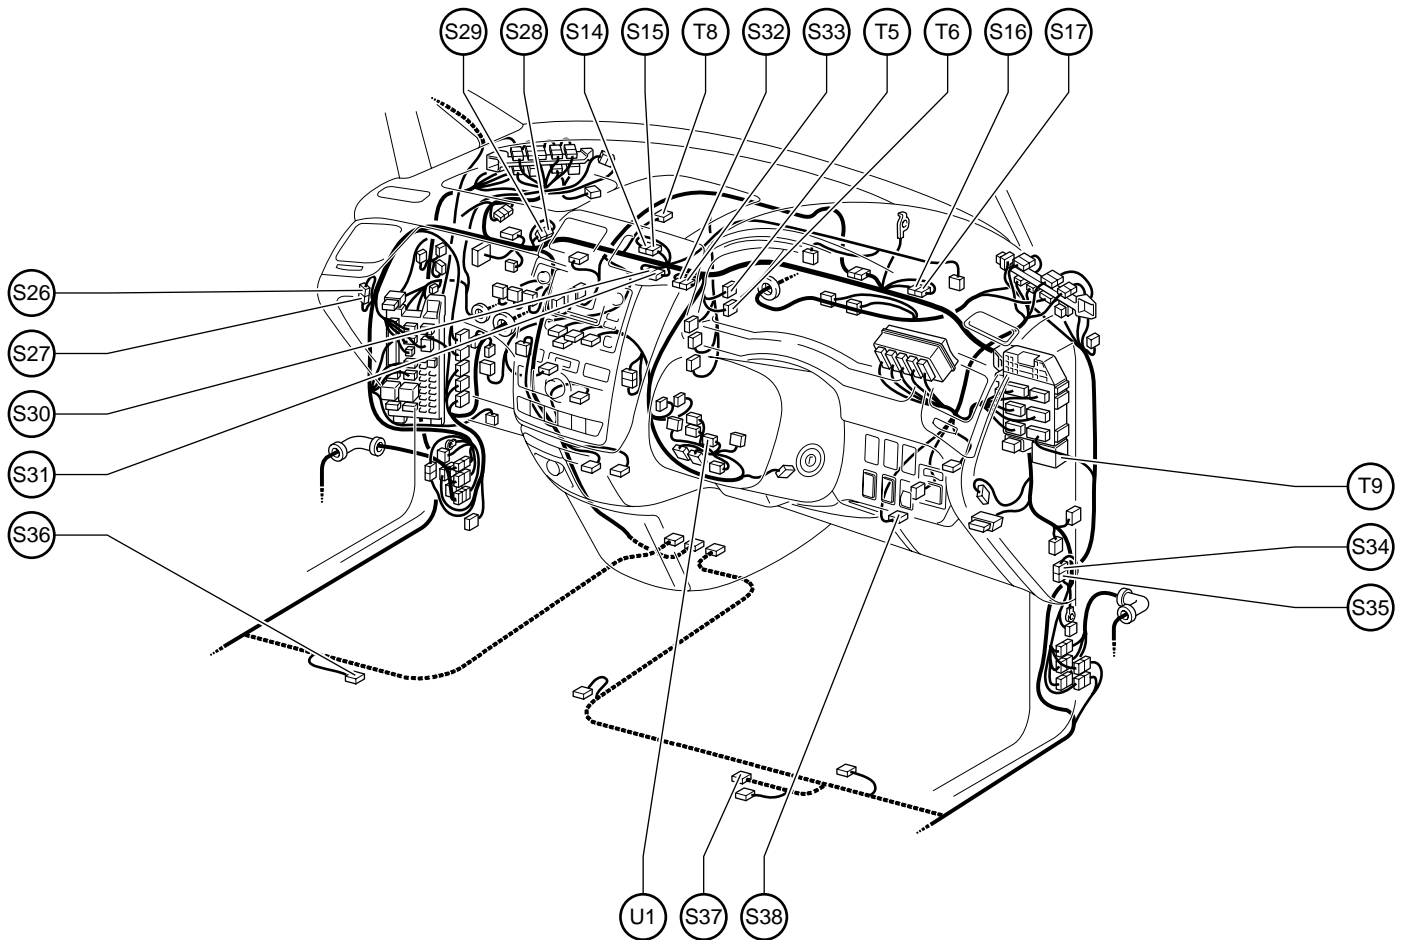

S14 Short Connector  
 S15 Short Connector  
 S16 Short Connector  
 S17 Short Connector  
 S26 Short Connector  
 S27 Short Connector  
 S28 Short Connector  
 S29 Short Connector  
 S30 Short Connector  
 S31 Short Connector  
 S32 Short Connector  
 S33 Short Connector  
 S34 Short Connector  
 S35 Short Connector  
 S36 Side Airbag Squib LH  
 S37 Side Airbag Squib RH  
 S38 Stop Light SW

T 5 Theft Deterrent ECU  
 T 6 Theft Deterrent ECU  
 T 8 Transponder Key Computer  
 T 9 Turn Signal Flasher Relay  
  
 U 1 Unlock Warning SW