



Engine Control (LHD 1AZ-FE)


From Power Source System (See Page 74)

From Power Source System (See Page 74)

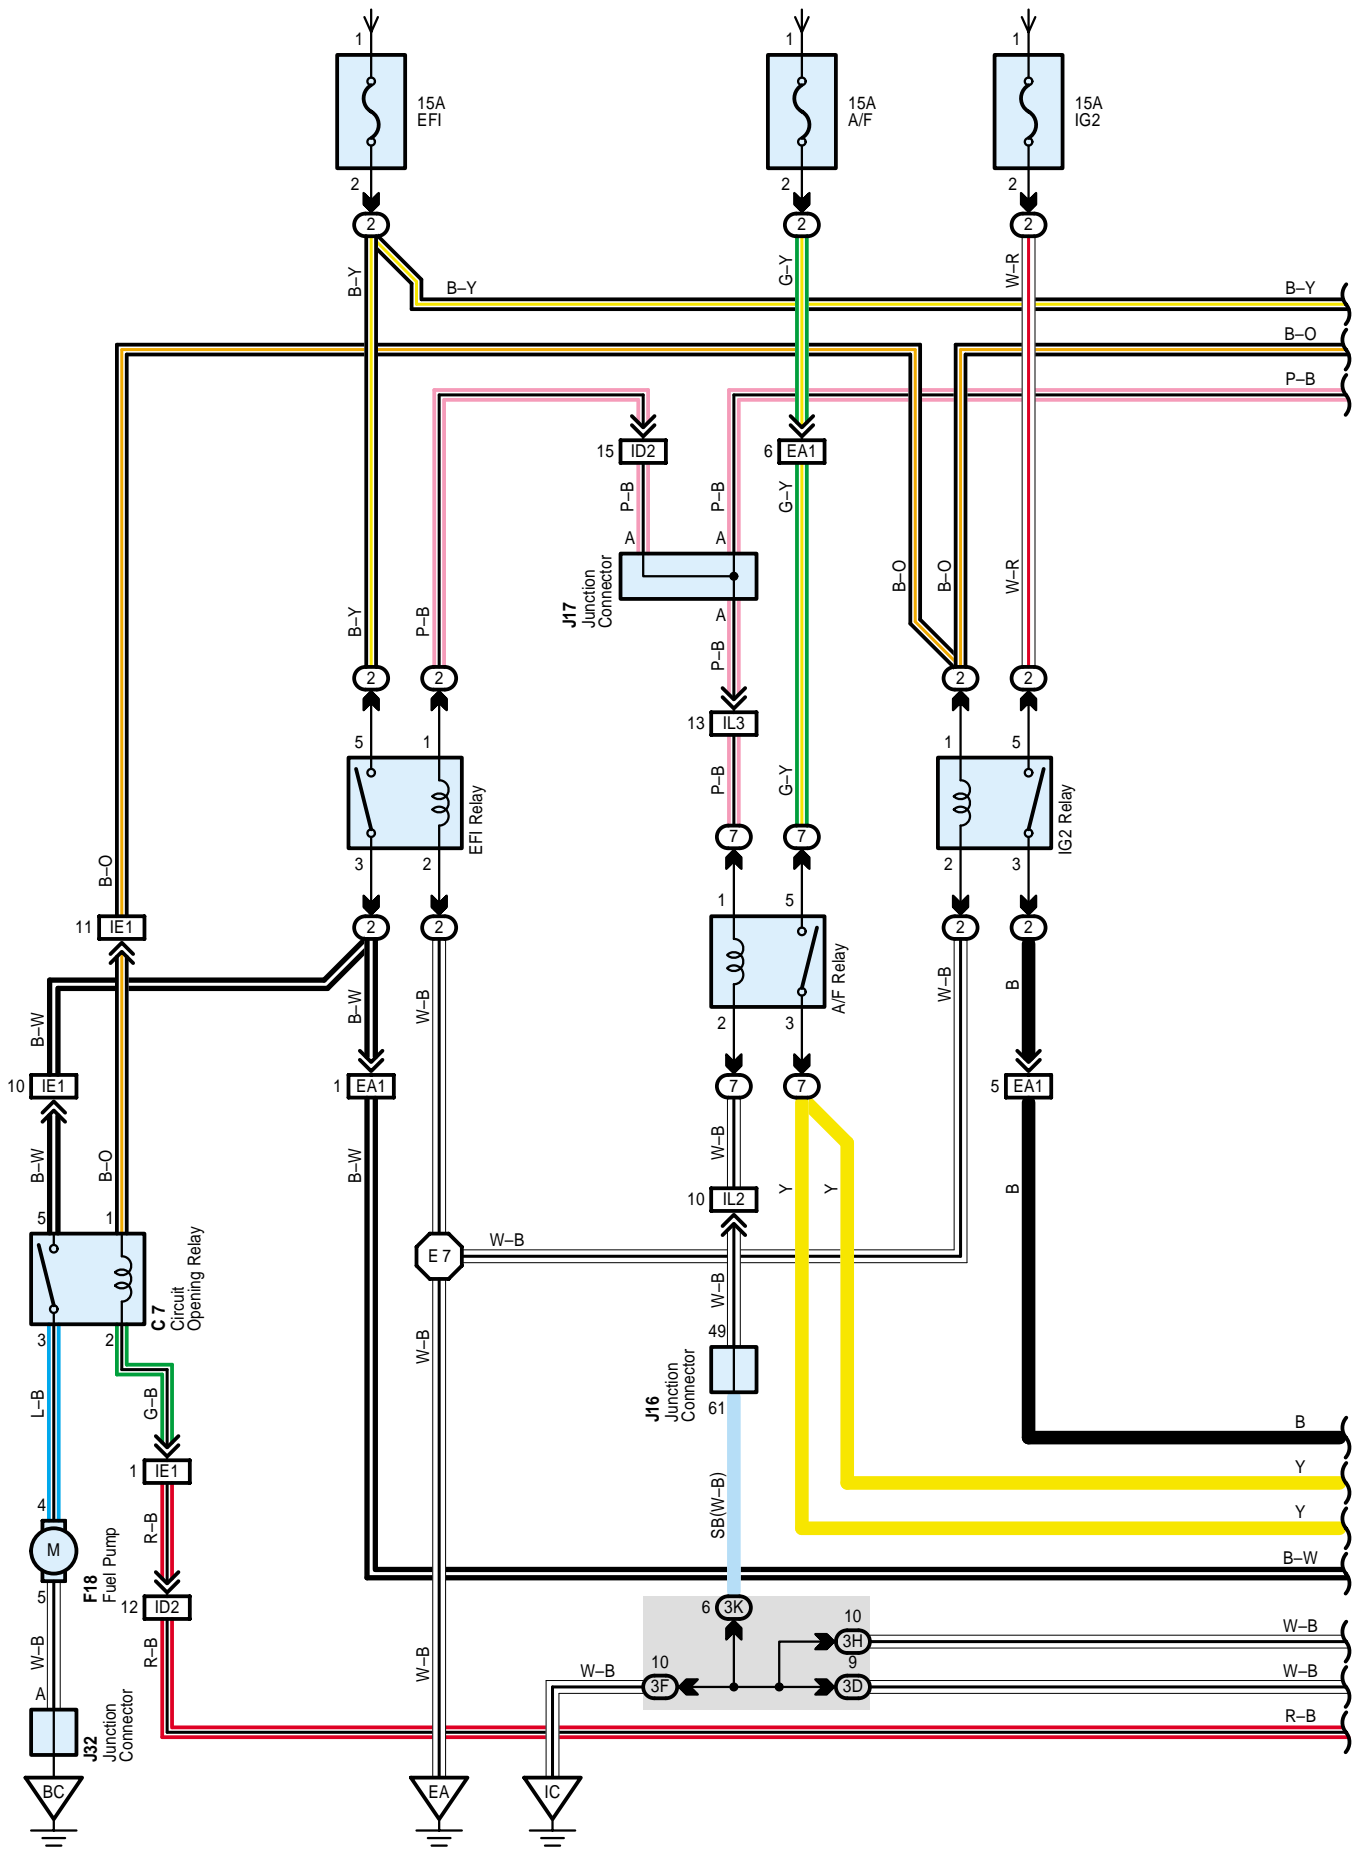

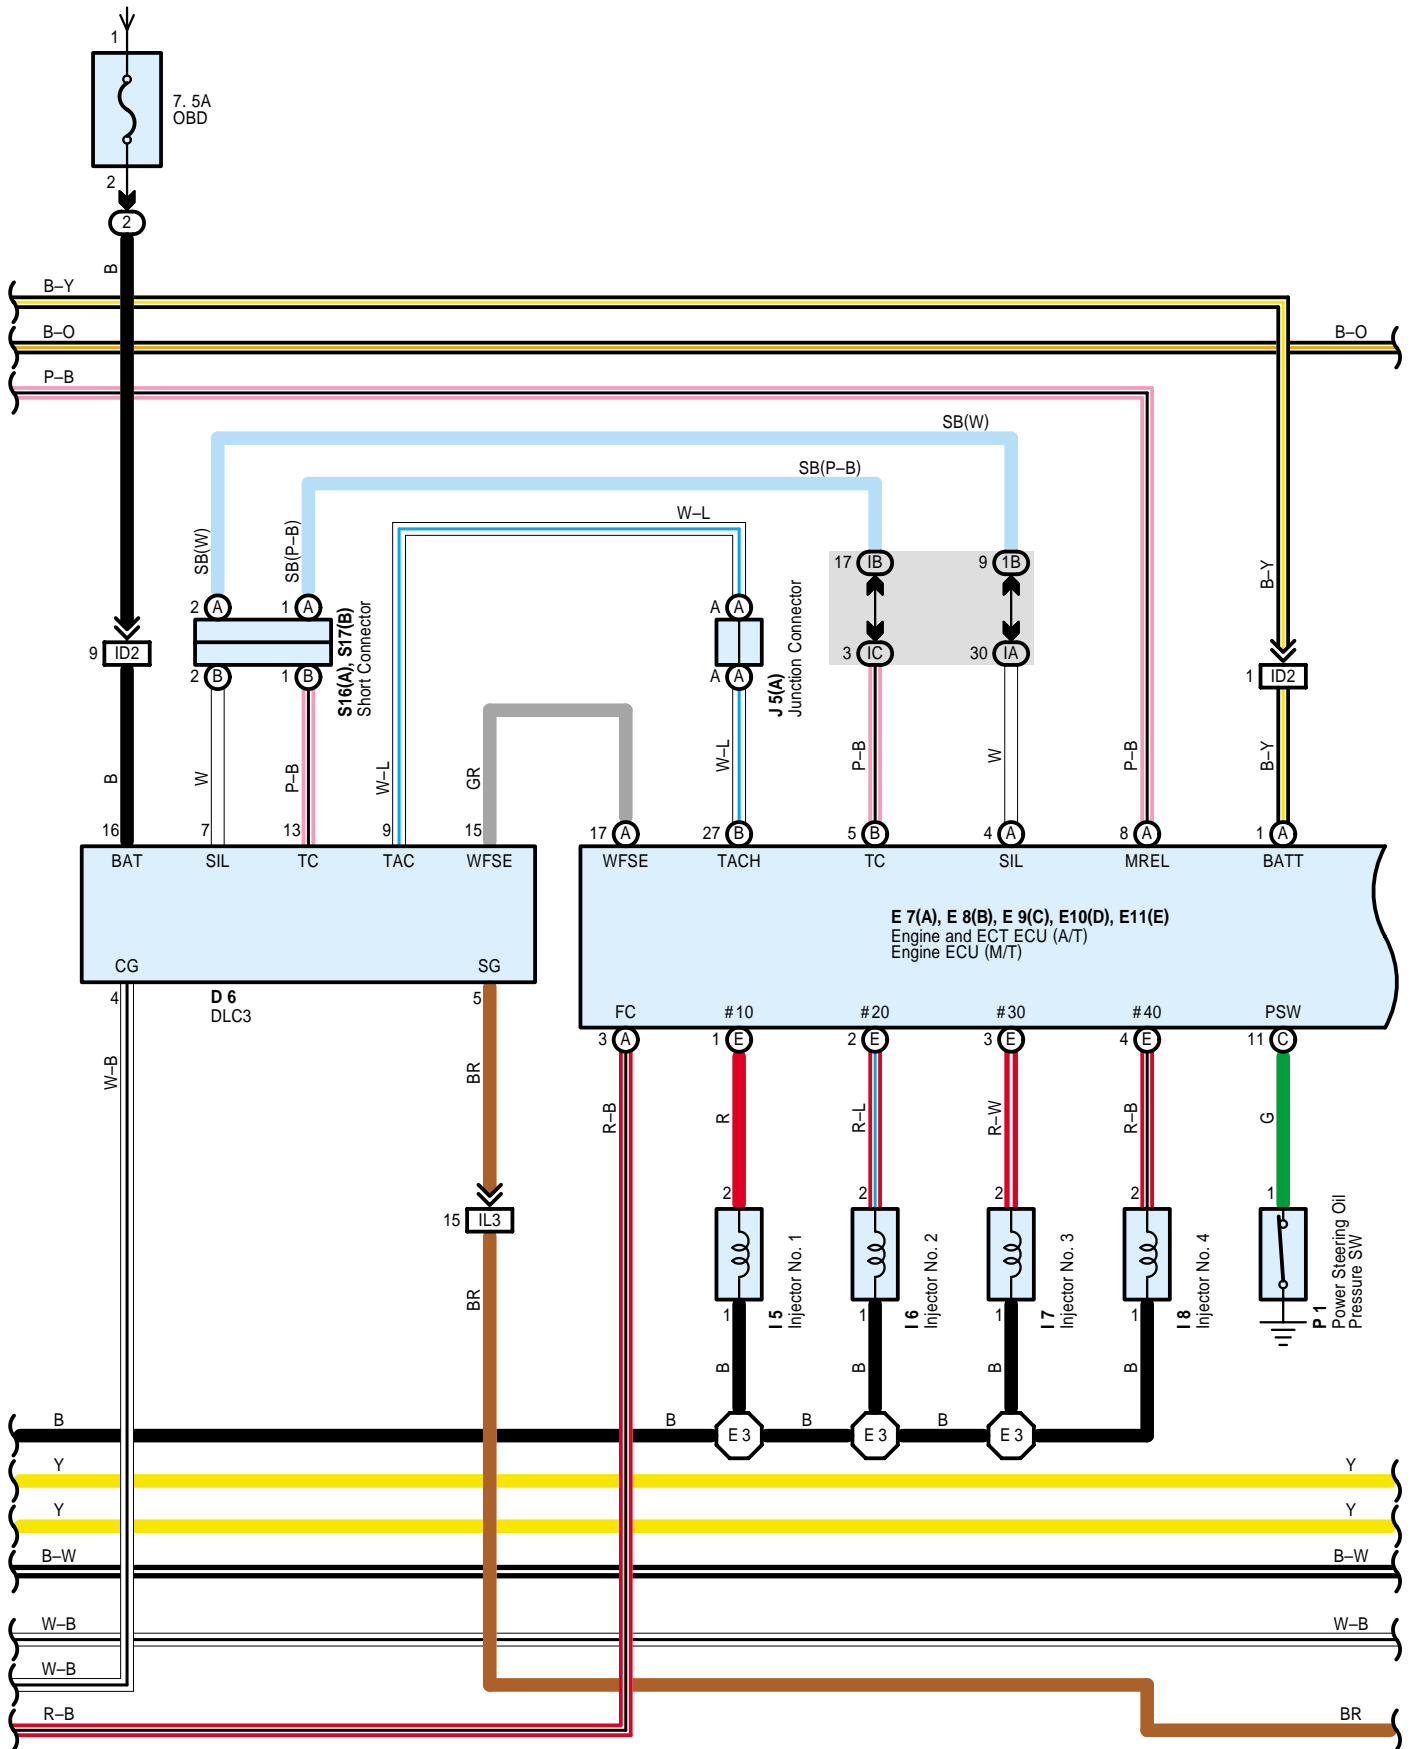

Engine Control (LHD 1AZ-FE)

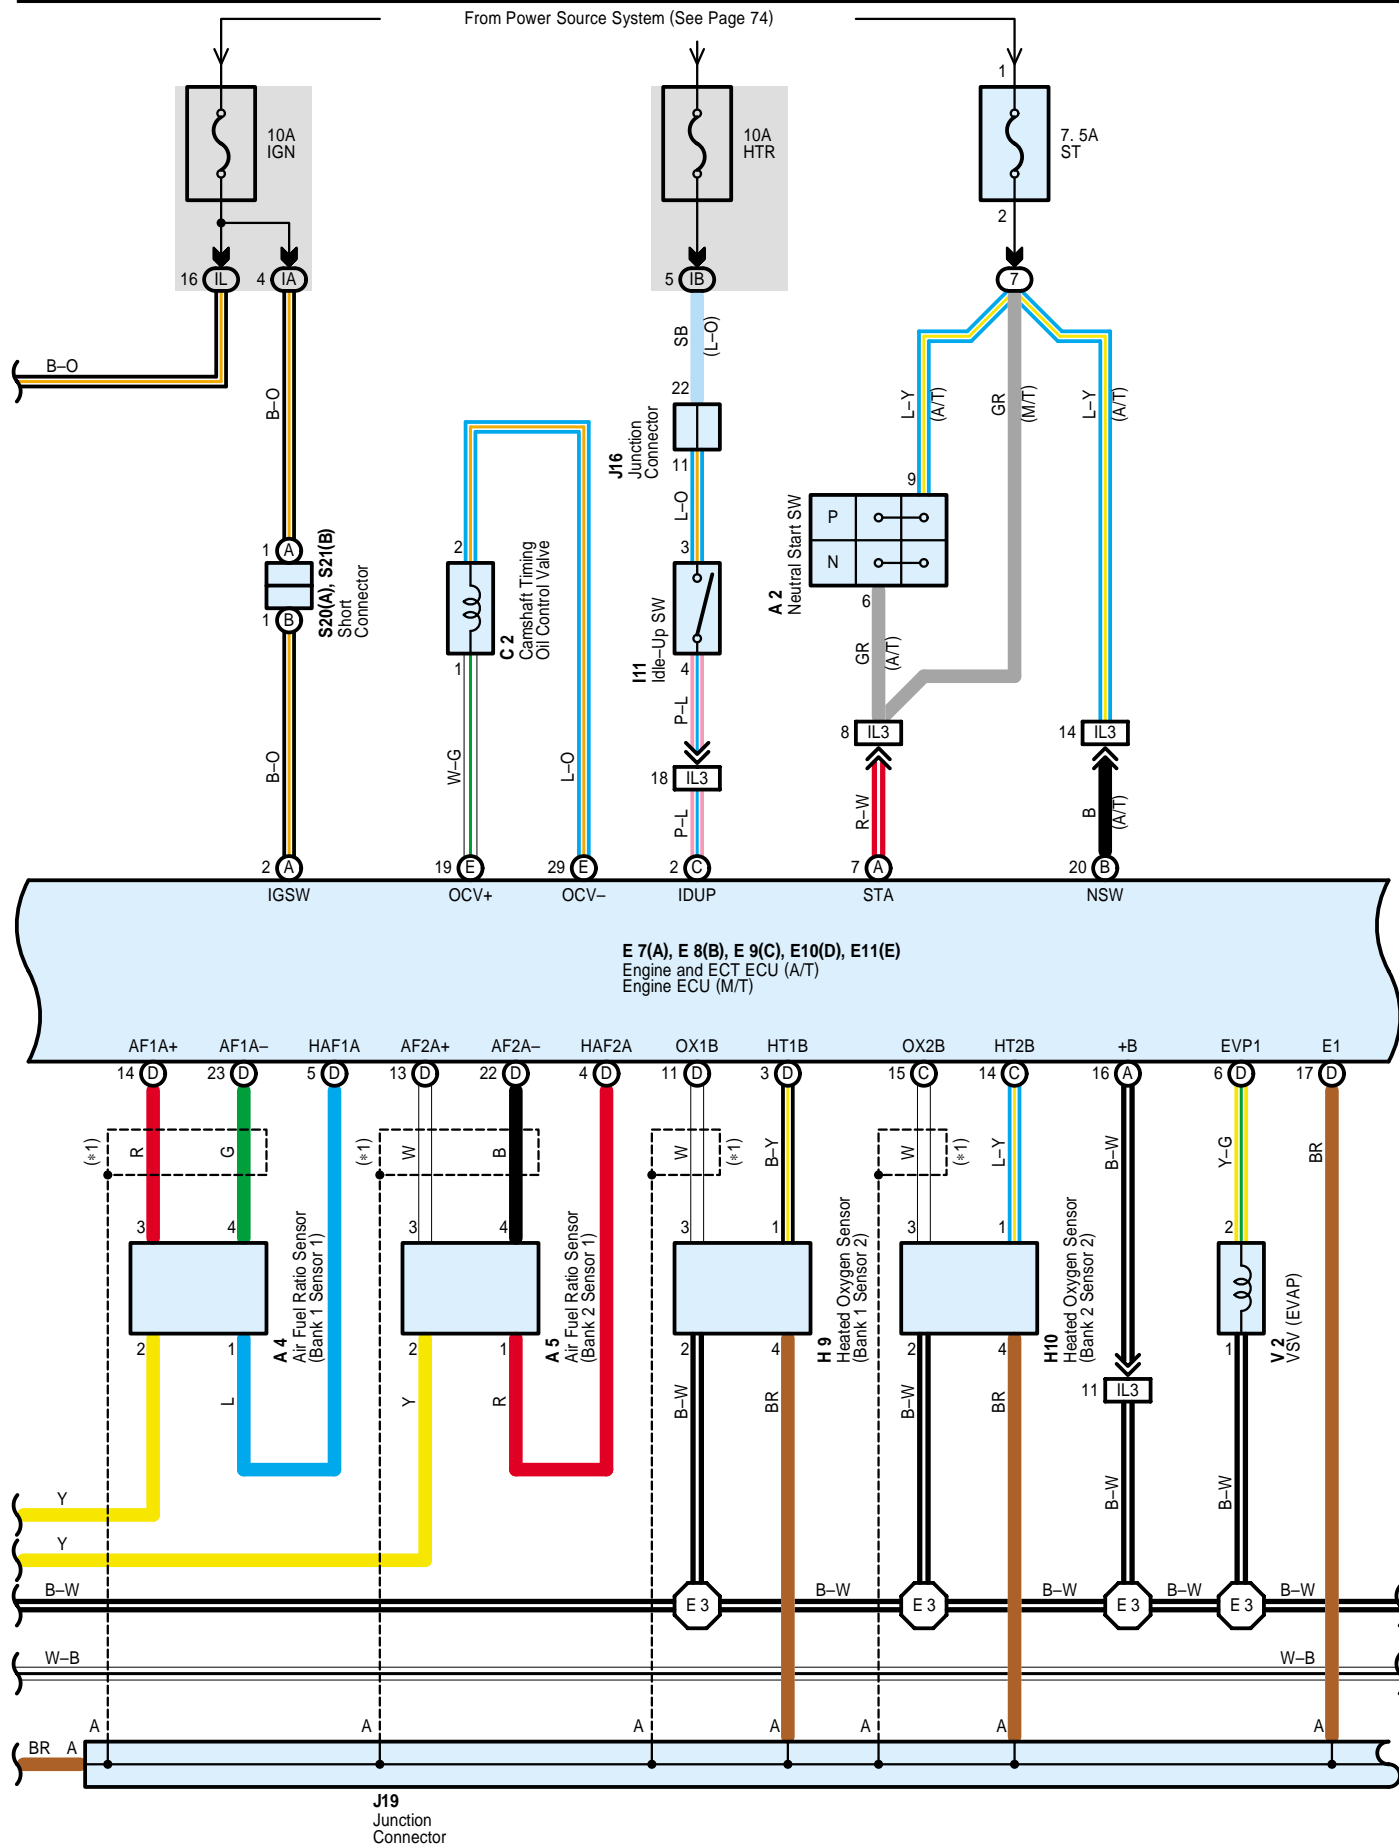



Engine Control (LHD 1AZ-FE)

