

Service Hints

B1 Back-Up Light SW (M/T)

2-1 : Closed with the shift lever at **R** position

A2 Back-Up Light SW (A/T)

3-2 : Closed with the shift lever at **R** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	42 (RHD 1AZ-FE)	J18	48 (RHD)	R15	51 (RHD)
B1	42 (RHD 1AZ-FE)	J32	50 (RHD)	R17	51 (RHD)
	44 (RHD 1CD-FTV)	J36	A 50 (RHD)		
B4	46 (RHD)	J37	B 50 (RHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IC	24 (RHD)	Instrument Panel J/B and Engine Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3D		
3I		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IL1	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
BC	70 (RHD)	Left Quarter Panel
BF	70 (RHD)	Center of the Back Door Panel