

## Service Hints

### C6 Cigarette Lighter

2-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

4-Ground : Always continuity

### P8 Power Outlet

1-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

2-Ground : Always continuity

### P4 Power Outlet Relay

5-3 : Closed with the ignition SW at **ACC** or **ON** position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	46 (RHD)	J22	48 (RHD)	P4	48 (RHD)
J3	48 (RHD)	J32	50 (RHD)	P8	51 (RHD)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IJ		
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3C		
3I		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IA	66 (RHD)	Left Kick Panel
IC	66 (RHD)	Right Kick Panel
BC	70 (RHD)	Left Quarter Panel