

# Combination Meter (LHD)

## Service Hints

### C8 (A), C9 (B) Combination Meter

- (A) 1—Ground : Approx. **12** volts with the ignition SW at **ON** position
- (A) 21—Ground : Always approx. **12** volts
- (A) 23—Ground : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position
- (A) 20—Ground : Always continuity
- (A) 40—Ground : Always continuity

### B2 Brake Fluid Level Warning SW

- 1—2 : Closed with the float down

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A12	36 (LHD)	F18	40 (LHD)	J23	A 38 (LHD)
B2	32 (LHD 1AZ—FE)	F19	37 (LHD)	J24	B 38 (LHD)
	34 (LHD 1CD—FTV)	J3	38 (LHD)	J32	40 (LHD)
B3	34 (LHD 1CD—FTV)	J5	A 38 (LHD)	O1	33 (LHD 1AZ—FE)
B10	36 (LHD)	J6	B 38 (LHD)		35 (LHD 1CD—FTV)
C8	A 36 (LHD)	J9	38 (LHD)	P6	38 (LHD)
C9	B 36 (LHD)	J13	A 38 (LHD)	R4	38 (LHD)
E6	34 (LHD 1CD—FTV)	J14	B 38 (LHD)	S22	A 39 (LHD)
E7	A 37 (LHD)	J15	38 (LHD)	S23	B 39 (LHD)
E8	B 37 (LHD)	J16	38 (LHD)	S43	A 39 (LHD)
F11	34 (LHD 1CD—FTV)	J21	38 (LHD)	S44	B 39 (LHD)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3F	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3H		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC3		
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IL2	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EB	52 (LHD 1AZ—FE)	Right Radiator Side Support
	54 (LHD 1CD—FTV)	
EE	54 (LHD 1CD—FTV)	Near the Starter
IA	56 (LHD)	Left Kick Panel
IC	56 (LHD)	Right Kick Panel
BB	60 (LHD)	Front Side of the Left Quarter Panel
BC	60 (LHD)	Left Quarter Panel

